

Articulated Dump Truck - 722

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)


[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)

[Section S - Suspension](#)

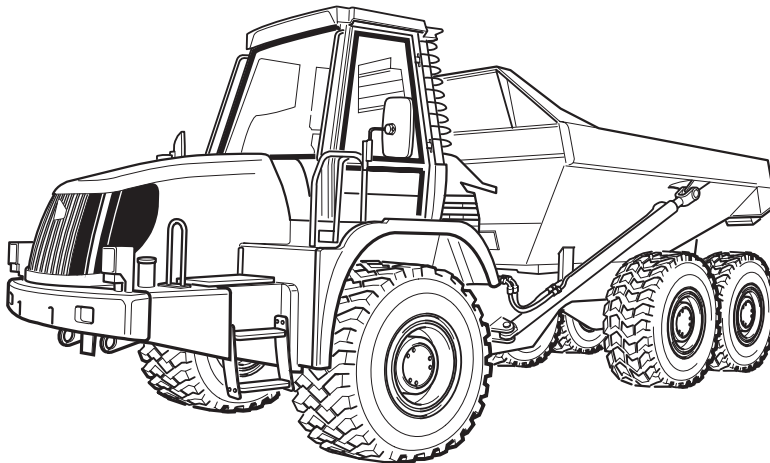

Publication No.
9803/7170-05



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Service, World Parts Centre, Beamhurst, Uttoxeter, Staffordshire, ST14 5PA, England. Tel +44 1889 590312 Fax +44 1889 593377

World Class
Customer Support



Page left intentionally blank

General Information

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)


[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)

[Section S - Suspension](#)

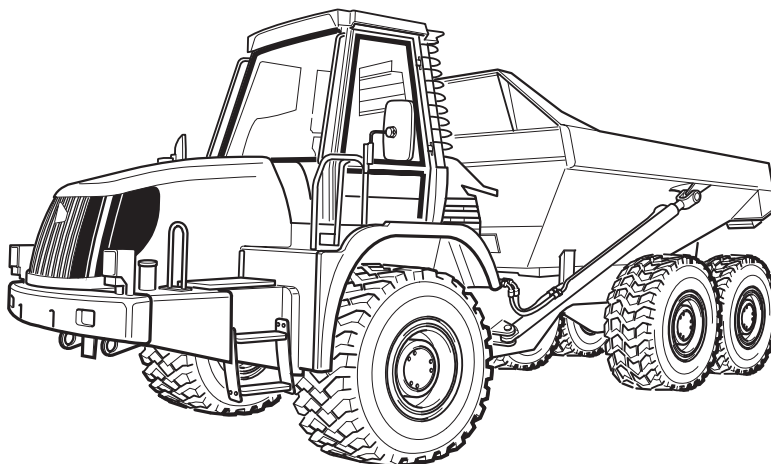

Publication No.
9803/7170-04



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Service, World Parts Centre, Beamhurst, Uttoxeter, Staffordshire, ST14 5PA, England. Tel +44 1889 590312 Fax +44 1889 593377

World Class
Customer Support



Page left intentionally blank



Section 1 - General Information

Contents	Page No.
Identification	
Vehicle Identification	1 - 1
Vehicle Identification Plate	1 - 1
Explanation of the Vehicle Identification Number (VIN)	1 - 1
Unit Identification	1 - 1
Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1 - 3
Introduction	1 - 3
Bolts and Screws	1 - 3
Service Tools	
Numerical List Section B - Body and Framework	1 - 7
Section B - Body and Framework	1 - 8
Numerical List Section C - Electrics	1 - 11
Section C - Electrics	1 - 12
Numerical List Section E - Hydraulics	1 - 13
Section E - Hydraulics	1 - 15
Numerical List Section F - Transmission	1 - 18
Section F - Transmission	1 - 19
Numerical List Section K - Transmission	1 - 22
Section K - Engine	1 - 23
Sealing and Retaining Compounds	
Sealing and Retaining Compounds	1 - 24
Towing	
General	1 - 25
Preparation for Towing	1 - 25
Hydraulic Hoses	
Connecting/Disconnecting	1 - 27
Venting Hydraulic Pressure	1 - 27
Connecting the Hoses	1 - 27
Disconnecting the Hoses	1 - 27
Hydraulics	
Hydraulic Contamination	1 - 29
Hydraulic Fluid Quality	1 - 29
Effects of Contamination	1 - 29
Cleaning Operation	1 - 29
Procedure	1 - 29
Contamination Standards	1 - 29
Filters	1 - 29

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com