



Service Manual

802.7 *Plus*

802.7 *Super*

803 *Plus*

803 *Super*

804 *Plus*

804 *Super*

Published by the
TECHNICAL PUBLICATIONS DEPARTMENT
of
JCB COMPACT PRODUCTS LTD;
Harewood Estate
Leek Road, Cheadle
Stoke-on Trent
Staffordshire, England
ST10 2JU
Tel: 01538 757500, Fax: 01538 757590
Publication No. 9803/3145 Issue 3

General Information	1
Care & Safety	2
Routine Maintenance	3
Optional Equipment	A
Body & Framework	B
Electrics	C
Controls	D
Hydraulics	E
Gearboxes	F
Track & Running Gear	J
Engine	L

Introduction

This publication is designed for the benefit of JCB Distributor Service Engineers who are receiving, or have received, training by JCB Technical Training Department.

It is assumed that these personnel have a sound knowledge of workshop practice, safety procedures and general techniques associated with the maintenance and repair of hydraulic earthmoving equipment. Therefore, these basic subjects generally are omitted from this manual, the intention being to convey only more specialised information concerning particular aspects of a machine or component.

For example, renewal of oil seals, gaskets etc., and any component showing obvious signs of wear or damage is expected as a matter of course and, therefore, information of this nature is included only in the context of specialised procedures or where a range of wear tolerances is required. Similarly, it is expected that components will be cleaned and lubricated where appropriate, also that any opened hose or pipe connections will be blanked to prevent excessive loss of hydraulic fluid and ingress of dirt. Finally, please remember above all **SAFETY MUST COME FIRST!**

The manual is compiled in sections, the first three are numbered and contain information as follows:

1 = **General Information** - includes torque settings and service tools
2 = **Care & Safety** - includes warnings and cautions pertinent to aspects of workshop procedures etc.
3 = **Routine Maintenance** - includes service schedules and recommended lubricants for the machine.

The remaining sections are alphabetically coded and deal with Dismantling, Overhaul etc. of specific components, for example:

A = **Optional Equipment**
B = **Body & Framework** ... etc.

The page numbering in each alphabetically coded section may not be continuous. This allows for the insertion of new items in later issues of the manual.

Section contents, technical data, circuit descriptions, operation descriptions etc. are inserted at the beginning of each alphabetically coded section.

All sections are listed on the front cover; tabbed divider cards align directly with individual sections on the front cover for rapid reference.

Illustrations which show a dismantled component are numbered as a guide to the dismantling sequence, which generally can be reversed for assembly.

Torque settings are given as a 'mean' figure which may be varied by plus or minus 3%. Torque figures indicated are for dry threads, hence for lubricated threads may be reduced by one third.

'Left Hand' and 'Right Hand' are as viewed from the rear of the machine.

References to alternative servicing intervals are to be treated on a 'whichever occurs first' basis.

Contents	Page No.
Identification	1 - 1
Storing your machine	2 - 1
 Operation	
Introduction	B1
Before entering the cab	B2 - B3
Entering/exiting the cab	B4 - B5
Cab	B6 - B7
Opening the windscreen	B8
Opening the side window	B9
Heater controls	B10 - B11
Seat	B12
Seat belt (when fitted)	B13
Engine and track controls	
Switches and instruments	B14 - B15
Track controls	B16 - B17
Engine controls	B19
Switches	B20 - B21
Instruments	B24 - B25
Dozer controls	B26 - B27
Excavator controls	B28 - B23
Slew cab	B30
Swing boom	B31
Boom swing stop	B32-B33
Raise / Lower boom	B34-B35
Dipper	B36
Bucket	B37
Refuelling the machine	B39
Before starting the engine	B40 - B41
Starting the engine	B42 - B43
Jump starting the engine	B44 - B46
Cold climate warm up	B47
Operating in high / low temperatures	B48
Stopping and parking the machine	B50 - B51
Preparing for road / site travel	B52 - B53
Getting the machine moving	B54 - B55
Working with the dozer	B56 - B57
Working with the excavator	B58 - B43
Installing a bucket - non Quickhitch models	B58 - B59
Replacing bucket teeth	B59
Removing a bucket	B37
Bucket selection	B60
Removing a bucket - non Quickhitch models	B61
Installing a bucket on a Quickhitch	B62 - B63
Removing a bucket from a Quickhitch	B64 - B65
Working on a slope	B66 - B67
Digging	B68 - B69
Moving the machine while digging on the level	B70
Digging near walls	B71
Lifting	B72
Safe working loads	B73
Using the attachments and site safety	B74 - B77
Single/double acting circuits	B78 - B79
Removing a Quickhitch Rockbreaker	B80 - B83
Using hand held tools	B84 - B85
Moving a disabled machine	B86 - B87
Transporting the machine	B88 - B89
Securing for Transport	B90 - B91

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com