

CRAWLER CRANE

**SHOP
MANUAL**

model

**CK1200
CKE1100**

KOBELCO

BOOK CODE : S5GK00004ZE01

TABLE OF CONTENTS

SAFETY

1. SPECIFICATION

| | |
|---|------|
| 1.1 SPECIFICATION | 1-3 |
| 1.1.1 PERFORMANCE | 1-3 |
| 1.1.2 OUTSIDE DIMENSIONS | 1-4 |
| 1.1.3 DIMENSIONS AND WEIGHT OF EACH PARTS | 1-6 |
| 1.1.4 STABILITY IN SWINGING AND TRAVELING | 1-12 |

2. MAINTENANCE STANDARDS

TEST PROCEDURES

| | |
|---|------|
| 2.1 MAINTENANCE STANDARD..... | 2-3 |
| 2.1.1 PIN, BUSHING, SPRING, LINING AND SHEAVE | 2-3 |
| 2.1.2 PROPEL DEVICE | 2-10 |
| 2.1.3 PROPEL BRAKE PLATE | 2-16 |
| 2.2 PERFORMANCE STANDARD AND TEST PROCEDURE | 2-17 |
| 2.2.1 OPERATING SPEED | 2-17 |
| 2.2.2 POINT AND METHOD OF MEASURING PRESSURE | 2-18 |
| 2.2.3 SLEWING RING | 2-23 |

3. GENERAL WORK STANDARD

| | |
|---|------|
| 3.1 TIGHTENING TORQUE OF CAPSCREWS AND NUTS | 3-3 |
| 3.1.1 METRIC COARSE THREADS..... | 3-3 |
| 3.1.2 METRIC FINE THREADS..... | 3-3 |
| 3.1.3 COARSE THREDS UNC | 3-4 |
| 3.1.4 FINE THREADS UNF | 3-4 |
| 3.1.5 TIGHTENING TORQUE OF HYDRAULIC FITTINGS | 3-5 |
| 3.2 STANDARD PARTS..... | 3-7 |
| 3.2.1 BOLT | 3-7 |
| 3.2.2 O-RING | 3-8 |
| 3.2.3 BACK-UP RING | 3-9 |
| 3.2.4 BITE FITTING | 3-10 |
| 3.3 CONVERSION TABLE | 3-12 |
| 3.3.1 UNIT CONVERSION | 3-12 |
| 3.3.2 MILLIMETER : INCH CONVERSION TABLE | 3-13 |
| 3.3.3 METER-FOOT CONVERSION TABLE | 3-15 |
| 3.3.4 GRADIENT CONVERSION TABLE | 3-16 |
| 3.4 TABLE OF UNIT WEIGHT | 3-17 |

4. POWER TRAIN

TABLE OF CONTENTS

| | | |
|-------|--|------|
| 4.1 | INTRODUCTION..... | 4-3 |
| 4.2 | ENGINE..... | 4-5 |
| 4.2.1 | INTRODUCTION | 4-5 |
| 4.2.2 | REMOVAL | 4-5 |
| 4.2.3 | REPAIR AND MAINTENANCE | 4-6 |
| 4.2.4 | RE-INSTALLATION..... | 4-7 |
| 4.3 | PUMP DRIVE ASSEMBLY..... | 4-10 |
| 4.3.1 | INTRODUCTION | 4-10 |
| 4.3.2 | REMOVAL | 4-10 |
| 4.3.3 | DISASSEMBLING THE POWER DIVIDER..... | 4-12 |
| 4.3.4 | CHECK AND REPAIR OF THE POWER DIVIDER..... | 4-13 |
| 4.3.5 | ASSEMBLING THE POWER DIVIDER..... | 4-14 |
| 4.3.6 | RE-INSTALLATION..... | 4-15 |

5. HYDRAULIC SYSTEM

| | | |
|-------|---|------|
| 5.1 | LOCATION OF MAIN HYDRAULIC COMPONENTS | 5-3 |
| 5.2 | HYDRAULIC CIRCUITS AND COMPONENTS | 5-4 |
| 5.2.1 | HYDRAULIC CIRCUIT | 5-4 |
| 5.2.2 | COMPONENT SPECIFICATIONS | 5-8 |
| 5.2.3 | LOCATION OF HYDRAULIC COMPONENTS..... | 5-12 |
| 5.3 | HYDRAULIC SYSTEM..... | 5-22 |
| 5.3.1 | PREFACE..... | 5-22 |
| 5.3.2 | OUTLINE | 5-22 |
| 5.3.3 | OIL FLOW FROM No.1 and No. 2 PUMPS..... | 5-23 |
| 5.3.4 | OIL FLOW FROM No.3 AND No.4 PUMPS | 5-25 |
| 5.3.5 | OIL FLOW FROM No.5 PUMPS (Control Pumps) | 5-27 |
| 5.3.6 | OIL FLOW FROM No.6 PUMP (For Auxiliary Actuator Circuit)..... | 5-30 |
| 5.4 | VALVES | 5-33 |

6. HOIST SYSTEM

| | | |
|-------|--|------|
| 6.1 | APPARATUS AND LOCATION OF COMPONENTS | 6-3 |
| 6.2 | CONSTRUCTION AND FUNCTION | 6-4 |
| 6.2.1 | HYDRAULIC SCHEMATIC..... | 6-4 |
| 6.2.2 | LIFTING A LOAD..... | 6-6 |
| 6.2.3 | HOLDING A RAISED LOAD..... | 6-8 |
| 6.2.4 | LOWERING A LOAD (POWERED LOWERING) | 6-10 |
| 6.2.5 | FREE FALL OPERATION | 6-12 |
| 6.2.6 | FREE FALL ACCELERATION | 6-16 |
| 6.3 | DRUM LOCK..... | 6-18 |

TABLE OF CONTENTS

| | |
|--|------|
| 6.3.1 ASEEMBLY DRAWING | 6-18 |
| 6.3.2 ADJUSTMENT OF DRUM LOCK | 6-19 |
| 6.4 WINCH ASSEMBLY | 6-20 |
| 6.4.1 WINCH INSTAL | 6-20 |
| 6.4.2 WINCH ASSEMBLY / REDUCTION UNIT WITHOUT FREE FALL (STD.) | 6-21 |
| 6.4.3 WINCH ASSEMBLY WITH FREE FALL (OPT.) | 6-23 |
| 6.5 BRAKE PEDAL | 6-24 |
| 6.5.1 ASSEMBLY DRAWING | 6-24 |
| 6.5.2 ADJUSTING THE BRAKE PEDAL | 6-26 |
| 6.6 BLEEDING AIR FROM BRAKE CIRCUIT | 6-27 |

7. BOOM HOIST SYSTEM

| | |
|--|------|
| 7.1 APPARATUS AND LOCATION OF COMPONENTS | 7-3 |
| 7.2 CONSTRUCTION AND FUNCTION | 7-5 |
| 7.2.1 HYDRAULIC SCHEMATIC | 7-5 |
| 7.2.2 RAISING THE BOOM | 7-6 |
| 7.2.3 NEUTRAL (MAINTAINING THE BOOM POSITION) | 7-8 |
| 7.2.4 LOWERING THE BOOM | 7-10 |
| 7.3 BOOM DRUM LOCK | 7-12 |
| 7.3.1 ASSEMBLY DRAWING | 7-12 |
| 7.3.2 ADJUSTING THE BOOM DRUM LOCK | 7-13 |
| 7.4 DRUM AND REDUCTION UNIT | 7-14 |
| 7.4.1 BOOM WINCH ASSEMBLY | 7-14 |
| 7.4.2 BOOM DRUM AND REDUCTION UNIT ASSEMBLY | 7-16 |

8. SWING SYSTEM

| | |
|--|------|
| 8.1 APPARATUS AND LOCATION OF COMPONENTS | 8-3 |
| 8.2 CONSTRUCTION AND FUNCTION | 8-4 |
| 8.2.1 HYDRAULIC SCHEMATIC | 8-4 |
| 8.2.2 SWING | 8-6 |
| 8.2.3 STOPPING | 8-9 |
| 8.3 SWING REDUCTION UNIT | 8-12 |
| 8.4 SWING BEARING | 8-14 |
| 8.5 SWING LOCK | 8-16 |

9. PROPEL SYSTEM

| | |
|--|-----|
| 9.1 LOCATION OF THE MAJOR COMPONENTS | 9-3 |
| 9.2 CONSTRUCTION AND FUNCTION | 9-4 |

TABLE OF CONTENTS

| | |
|---|------|
| 9.2.1 HYDRAULIC SCHEMATIC..... | 9-4 |
| 9.2.2 PROPELLING (RIGHT SIDE FORWARD) | 9-6 |
| 9.2.3 STOPPING | 9-8 |
| 9.3 PROPEL REDUCTION UNIT | 9-10 |
| 9.3.1 MOTOR AND REDUCTION UNIT | 9-11 |
| 9.4 ADJUSTMENT | 9-13 |

10. ELECTRIC SYSTEM

| | |
|--|--------|
| 10.1 ELECTRICAL WIRING SCHEMATIC..... | 10-3 |
| 10.2 CONNECTOR LIST..... | 10-14 |
| 10.3 ARRANGEMENT OF ELECTRICAL PART..... | 10-66 |
| 10.3.1 ELECTRICAL PART OF CAB | 10-66 |
| 10.3.2 ELECTRICAL PART OF RIGHT DECK..... | 10-70 |
| 10.3.3 ELECTRICAL PART OF FLOOR PLATE & LEFT SIDE STAND PANEL | 10-78 |
| 10.3.4 ELECTRICAL PART OF REVOLVING FRAME | 10-83 |
| 10.3.5 ELECTRICAL PART OF LEFT DECK | 10-86 |
| 10.3.6 ELECTRICAL PART OF LEFT GUARD | 10-93 |
| 10.4 ELECTRICAL PART..... | 10-94 |
| 10.4.1 FUSE BOX (GG73E00004F1)..... | 10-94 |
| 10.4.2 WIPER CONTROL UNIT (2480U306)..... | 10-96 |
| 10.4.3 SWING FLASHER UNIT (2480U306) | 10-97 |
| 10.4.4 PRESSURE SWITCH (CONTROL PRESSURE CUT & FREE FALL) (GG52S00006P1)..... | 10-98 |
| 10.4.5 PRESSURE SENSOR..... | 10-99 |
| 10.4.6 RELAY BOX (GG24E00024F1)..... | 10-101 |
| 10.4.6.1 ARRANGEMENT OF CONNECTOR..... | 10-101 |
| 10.4.6.2 RELAY BOX SCHEMATIC | 10-103 |
| 10.4.7 LEFT SIDE STAND PANEL | 10-106 |
| 10.5 TROUBLESHOOTING OF EXHAUST GAS THIRD REGULATION ENGINE | 10-110 |
| 10.5.1 FAILURE DIAGNOSIS FUNCTION..... | 10-110 |
| 10.5.2 HOW TO CHECK THE FAILURE CONTENTS | 10-111 |
| 10.5.3 CHECKING BLOWN-OFF DIAGNOSIS LAMPS | 10-116 |
| 10.5.4 ENGINE ECU | 10-117 |

11. LOAD SAFETY DEVICE

| | |
|---|-------|
| 11.1 PART NAMES AND FUNCTIONS | 11-3 |
| 11.1.1 FRONT VIEW | 11-3 |
| 11.1.2 CONFIGURATION OF SCREENS | 11-8 |
| 11.1.3 DATA TRANSMISSION BETWEEN CONTROLLER AND CARDS | 11-13 |
| 11.1.4 DETAILS OF INDICATORS ON MAIN DISPLAY SCREEN | 11-15 |

TABLE OF CONTENTS

| | |
|--|-------|
| 11.1.5 REAR VIEW..... | 11-19 |
| 11.1.6 ITEMS REQUIRED TO BE EXECUTED FOR REPLACEMENT OF CONTROLLER OR DATA CARD AND INSTRUCTIONS (In a similar manner to upgrade of program) | 11-24 |
| 11.2 PREPARATION FOR USE..... | 11-25 |
| 11.3 TURN THE POWER ON | 11-26 |
| 11.4 UPGRADING PROGRAMS..... | 11-27 |
| 11.4.1 PROCEDURES | 11-27 |
| 11.4.2 UPGRADING OF INDICATION PROGRAMS | 11-29 |
| 11.4.3 UPGRADING OF CONTROL PROGRAMS | 11-32 |
| 11.5 STATUS CHECK..... | 11-34 |
| 11.5.1 SIGNAL CHECK..... | 11-35 |
| 11.5.2 OPERATION PROGRESS | 11-37 |
| 11.5.3 COMMUNICATION DATA | 11-40 |
| 11.5.4 INDICATION OF ADJUSTMENT VALUE | 11-41 |
| 11.5.4.1 ANGLE SENSOR ADJUSTMENT VALUE..... | 11-42 |
| 11.5.4.2 LOAD CELL ZERO POINT ADJUSTMENT VALUE | 11-43 |
| 11.5.4.3 ADJUSTMENT VALUE OF LOAD CELL FOR LINE-PULL | 11-44 |
| 11.5.4.4 RESULT OF MANUFACTURE ADJUSTMENTS "NO LOAD" AND "SOME LOAD"..... | 11-45 |
| 11.5.4.5 RESULT OF LOAD ADJUSTMENTS "NO LOAD" AND "SOME LOAD" .. | 11-46 |
| 11.5.4.6 ADJUSTMENT VALUE OF WORKING RADIUS | 11-47 |
| 11.5.4.7 ALTERATION OF ADJUSTED VALUE..... | 11-48 |
| 11.5.4.8 DELETION OF ADJUSTED VALUE | 11-49 |
| 11.5.5 LOAD RECORD | 11-50 |
| 11.5.6 TROUBLE RECORD | 11-53 |
| 11.5.7 CHOICE OF LANGUAGE (CKE SERIES ONLY) | 11-55 |
| 11.5.8 LOAD RECORD (LOAD RECORD IN THE MAIN MENU) | 11-56 |
| 11.6 ADJUSTMENTS | 11-57 |
| 11.6.1 REMOVING THE INNER PANEL | 11-57 |
| 11.6.2 ADJUSTMENT..... | 11-58 |
| 11.6.2.1 ANGLE SENSOR ADJUSTMENT | 11-61 |
| 11.6.2.2 LOAD CELL ZERO POINT ADJUSTMENT | 11-65 |
| 11.6.2.3 LOAD-LESS ADJUSTMENT & SOME LOAD ADJUSTMENT | 11-67 |
| 11.6.2.4 LVL ADJUSTMENT (LVL SETTING) | 11-73 |
| 11.6.2.5 RADIUS ADJUSTMENT | 11-76 |
| 11.6.3 LOAD ADJUSTMENT | 11-78 |
| 11.6.4 ADJUSTMENT DATA COPY (INITIALIZATION) | 11-80 |
| 11.6.4.1 READING OF THE ADJUSTMENT DATA..... | 11-82 |
| 11.6.4.2 WRITING OF ADJUSTMENT DATA..... | 11-84 |
| 11.6.4.3 INITIALIZATION OF ADJUSTMENT DATA..... | 11-85 |
| 11.6.5 VERSION CHECK..... | 11-86 |
| 11.7 ERROR CODE (ABNORMALITY DETECTION) AND COUNTERMEASURES.... | 11-87 |

TABLE OF CONTENTS

| | |
|--|--------|
| 11.8 CONTROL OUTPUT | 11-89 |
| 11.9 RELEASES | 11-101 |
| 11.9.1 RELEASE FUNCTION | 11-101 |
| 11.9.1.1 CRANE RELEASE CHART | 11-101 |
| 11.9.1.2 ALARM SOUND | 11-107 |
| 11.9.1.3 EXTERNAL INDICATOR LAMPS IN RELEASE CONDITION | 11-108 |
| 11.10 MECHANICAL SPECIFICATION | 11-109 |
| 11.10.1 ENVIRONMENTAL PERFORMANCE PARAMETERS | 11-109 |
| 11.10.2 LOAD CELL (CRANE) | 11-110 |
| 11.10.3 ANGLE SENSOR | 11-111 |
| 11.10.4 CONTROLLER | 11-112 |
| 11.10.4.1 MODEL NAME | 11-112 |
| 11.10.4.2 SYSTEM INPUT/OUTPUT | 11-112 |
| 11.10.4.3 MONITOR DISPLAY | 11-114 |
| 11.10.4.4 OPERATION SWITCH | 11-114 |
| 11.10.4.5 INTERNAL PROCESSING SYSTEM | 11-114 |
| 11.10.4.6 MEMORY | 11-114 |
| 11.10.4.7 EXTERNAL STORAGE ELEMENT | 11-115 |
| 11.10.4.8 OTHERS | 11-115 |
| 11.11 EXTERNAL DIMENSIONS | 11-116 |
| 11.12 ELECTRIC SCHEMATIC DIAGRAM | 11-117 |
| 11.12.1 CRANE TYPE | 11-117 |
| 11.12.2 LUFFING TYPE | 11-118 |
| 11.13 CONTROLLER MALFUNCTION EMERGENCY MEASURES | 11-119 |
| 11.14 LOAD SAFETY DEVICE CHECK PROCEDURES | 11-120 |

12. GAUGE CLUSTER

| | |
|-------------------------------------|-------|
| 12.1 CONFIGURATION OF DISPLAY | 12-3 |
| 12.2 PRIORITY | 12-4 |
| 12.3 STATUS DISPLAY | 12-6 |
| 12.4 FAULT LOG DISPLAY | 12-16 |

13. TOTAL CONTROLLER

| | |
|--|-------|
| 13.1 ARRANGEMENT OF TOTAL CONTROLLER | 13-3 |
| 13.2 COMPOSITION OF SYSTEM | 13-4 |
| 13.2.1 OUTPUT RELATION TO CONTROLLER | 13-5 |
| 13.3 FUNCTION OF TOTAL CONTROLLER | 13-6 |
| 13.4 TOTAL CONTROLLER (HARDWARE) | 13-31 |
| 13.4.1 OUTLINE | 13-31 |
| 13.4.2 SPECIFICATIONS OF TOTAL CONTROLLER OUTPUT | 13-32 |
| 13.4.3 DETAILS OF TOTAL CONTROLLER CONNECTOR | 13-36 |
| 13.4.4 ARRANGEMENT OF TOTAL CONTROLLER CONNECTOR PIN | 13-37 |

TABLE OF CONTENTS

| | |
|--|-------|
| 13.4.5 PROPORTIONAL SOLENOID VALVE MEASURING POSITION | 13-44 |
| 13.5 ADJUSTMENT OF TOTAL CONTROLLER | 13-45 |
| 13.5.1 NECESSITY OF ADJUSTMENT | 13-45 |
| 13.5.2 ADJUSTMENT PROCEDURES OF TOTAL CONTROLLER | 13-45 |
| 13.5.2.1 OPTION SETTING..... | 13-45 |
| 13.5.2.2 ADJUSTMENT OF HAND THROTTLE AND FOOT THROTTLE | 13-47 |
| 13.5.2.3 ENGINE SPEED ADJUSTMENT | 13-48 |
| 13.5.2.4 WHEN ADJUSTMENT OF TOTAL CONTROLLER IS IMPOSSIBLE | 13-49 |
| 13.5.2.5 INITIAL ADJUSTMENT OF LIFTING HEIGHT GAUGE | 13-50 |

14. AIR CONDITIONER

| | |
|---|-------|
| 14.1 OPERATION ITEMS | 14-3 |
| 14.2 SAFETY MONITOR FUNCTIONS..... | 14-4 |
| 14.3 DISASSEMBLY AND ASSEMBLY PROCEDURE | 14-7 |
| 14.3.1 SPECIAL CONSIDERATIONS DURING REPLACEMENT | 14-7 |
| 14.3.2 INTERIOR UNIT | 14-9 |
| 14.3.2.1 CASE DISASSEMBLY | 14-9 |
| 14.3.2.2 THERMOSTAT REPLACEMENT | 14-12 |
| 14.3.2.3 EVAPORATOR OR EXPANSION VALVE REPLACEMENT | 14-13 |
| 14.3.2.4 HEATER CORE REPLACEMENT | 14-14 |
| 14.3.2.5 INTAKE DUMPER ACTUATOR REPLACEMENT | 14-15 |
| 14.3.2.6 WATER VALVE ACTUATOR OR WATER VALVE REPLACEMENT..... | 14-16 |
| 14.3.2.7 MODE ACTUATOR REPLACEMENT | 14-17 |
| 14.3.2.8 BLOWER MOTOR ASSEMBLY REPLACEMENT..... | 14-17 |
| 14.4 OPERATIONAL PRECAUTIONS | 14-18 |
| 14.5 INSPECTION AND MAINTENANCE..... | 14-19 |
| 14.5.1 INSPECTION/MAINTENANCE LIST | 14-19 |
| 14.5.2 INSPECTION/MAINTENANCE PROCEDURES | 14-19 |
| 14.6 ELECTRIC SYSTEM SCHEMATIC | 14-23 |

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com