

# HYDRAULIC EXCAVATOR

**SHOP  
MANUAL**

**model SK115SR-1E  
SK135SR(LC)-1E  
SK135SRL-1E**

## INDEX

1	SPECIFICATION SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

MAINTENANCE SPECIFICATION

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

**KOBELCO**

Book code No. S5YY0004E②



## WARNING

# SAFETY

## WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood / goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Cab.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

## WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachment to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

 **WARNING**

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
  14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
  15. Repairs, which require welding, should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
  16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
  17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
  18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high-pressure lines or install ones, which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pinhole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
  19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
  20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed-rotating component that has been damaged or altered should be checked for balance before reusing.
  21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.
  22. Caution should be used to avoid breathing dust that may be generated when handling components containing asbestos fibers. If this dust is inhaled, it can be hazardous to your health. Components in KOBELCO products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates and some gaskets. The asbestos used in these components is usually bound in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust, which contains asbestos, is not generated.
- If dust, which may contain asbestos, is present, there are several common sense guidelines that should be followed.
- a. Never use compressed air for cleaning.
  - b. Avoid brushing or grinding of asbestos containing materials.
  - c. For clean up, use wet methods or a vacuum equipped with a high efficiency particulate air (HEPA) filter.
  - d. Use exhaust ventilation on permanent machining jobs.
  - e. Wear an approved respirator if there is no other way to control the dust.
  - f. Comply with applicable rules and regulations for the work place.
  - g. Follow environmental rules and regulations for disposal of asbestos.
  - h. Avoid areas where asbestos particles may be in the air.

SK115SR-1E  
SK135SR(LC)-1E Index of Shop Manual  
SK135SRL-1E

Book Code No. Distribution Year—Month		Index No	Title	
S5YY0104E 2002-02	S5YY0104E① 2003-12	SPECIFICATION	OUTLINE	YY01
S5YY0204E 2002-02	S5YY0204E① 2003-12		SPECIFICATION	YY02
S5YY0304E 2002-02	S5YY0304E① 2003-12		ATTACHMENT DIMENSION	YY03
S5YY1104E 2002-02	S5YY1104E① 2003-12	MAINTENANCE	TOOLS	YY11
S5YY1204E 2002-02	S5YY1204E① 2003-12		STANDARD MAINTENANCE TIME SCHEDULE	YY12
S5YY1304E 2002-02	S5YY1304E① 2003-12		MAINTENANCE STANDARD AND TEST PROCEDURE	YY13
S5YY2104E 2002-02	S5YY2104E① 2003-12	SYSTEM	MECHATRO CONTROL SYSTEM	YY21
S5YY2204E 2002-02	S5YY2204E① 2003-12		HYDRAULIC SYSTEM	YY22
S5YY2304E 2002-02	S5YY2304E① 2003-12		ELECTRICAL SYSTEM	YY23
S5YY2404E 2002-02	S5YY2404E① 2003-12		COMPONENTS SYSTEM	YY24
S5YY2504E 2002-02	S5YY2504E① 2003-12		AIR-CONDITIONER SYSTEM	YY25
—	—		—	—
S5YY3104E 2002-02	S5YY3104E① 2003-12	DISASSEMBLING	DISASSEMBLING AND ASSEMBLING	YY31
S5YY3204E 2002-02	S5YY3204E① 2003-12		ATTACHMENT	YY32
S5YY3304E 2002-02	S5YY3304E① 2003-12		UPPER STRUCTURE	YY33
S5YY3404E 2002-02	S5YY3404E① 2003-12		TRAVEL SYSTEM	YY34
S5YY4104E 2002-02	S5YY4104E① 2003-12	TROUBLESHOOTING	MECHATRO CONTROL	YY41
S5YY4204E 2002-02	S5YY4204E① 2003-12		HYDRAULIC	YY42
S5YY4304E 2002-02	S5YY4304E① 2003-12		ELECTRICAL	YY43
S5YY4404E 2002-02	S5YY4404E① 2003-12		ENGINE	YY44
S5YY5104E 2002-02	S5YY5104E① 2003-12	E/G	ENGINE	YY51
S5YY6304E 2002-05	S5YY6304E① 2003-12	OPT.	MOUNTING THE BREAKER AND NIBBLER & BREAKER	YY63
YV02-01701~ YY02-03001~ YH02-01301~ LK02-01041~	YV02-01701~ YY02-03001~ YH02-01301~ LK02-01041~ YV03-02194~ YY03-04464~ YH03-02077~ LK03-01107~		APPLICABLE MACHINES	



# KOBELCO

Book code No.

S5 YY01 04E①

**SHOP MANUAL** **SK115SR-1E**  
**SK135SR(LC)-1E**  
**SK135SRL-1E**

**YY01**

---

## OUTLINE

---

### TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS ..... 1
2. INTERNATIONAL UNIT CONVERSION SYSTEM ..... 4

**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

Applicable Machines

SK115SR-1E YV02-01701~  
 SK135SR-1E YY02-03001~  
 SK135SRLC-1E YH02-01301~  
 SK135SRL-1E LK02-01041~  
 SK115SR-1E YV03-02194~  
 SK135SR-1E YY03-04464~  
 SK135SRLC-1E YH03-02077~  
 SK135SRL-1E LK03-01107~

Revision	Date of Issue	Remarks
First edition	February, 2002	S5YY0104E K
First revision	December, 2003	S5YY0104E① K



**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**