

# HYDRAULIC EXCAVATOR

**SHOP  
MANUAL**

model **SK40SR-2  
SK45SR-2**

## INDEX

1	SPECIFICATIONS
2	MAINTENANCE
3	SYSTEM
4	DISASSEMBLING
5	TROUBLESHOOTING
6	ENGINE
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

MAINTENANCE SPECIFICATIONS

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

**KOBELCO**

Book Code No. S5PJ0002E ①

00-0-1 ①





SK40SR-2  
SK45SR-2

Index of shop Manual

Book Code No. Distribution Year-Month			Title	Index No.
S5PJ0102E 2001-10	S5PJ0102E ① 2003-01	SPECIFICATIONS	PRELIMINARY REMARKS	PJ01
S5PJ0202E 2001-10	S5PJ0202E ① 2003-01		SPECIFICATION	PJ02
S5PJ0302E 2001-10	S5PJ0302E ① 2003-01		ATTACHMENT	PJ03
S5PJ1102E 2001-10	S5PJ1102E ① 2003-01	MAINTENANCE	TOOLS	PJ11
S5PJ1202E 2001-10	S5PJ1202E ① 2003-01		STANDARD MAINTENANCE TIME TABLE	PJ12
S5PJ1302E 2001-10	S5PJ1302E ① 2003-01		MAINTENANCE STANDARD AND TEST PROCEDURE	PJ13
—	—	SYSTEM	MECHATRO CONTROL SYSTEM	
S5PJ2202E 2001-10	S5PJ2202E ① 2003-01		HYDRAULIC SYSTEM	PJ22
S5PJ2302E 2001-10	S5PJ2302E ① 2003-01		ELECTRICAL SYSTEM	PJ23
S5PJ2402E 2001-10	S5PJ2402E ① 2003-01		COMPONENTS SYSTEM	PJ24
—	—		—	
—	—		—	
S5PJ3102E 2001-10	S5PJ3102E ① 2003-01	DISASSEMBLING	WHOLE DISASSEMBLING & ASSEMBLING	PJ31
S5PJ3202E 2001-10	S5PJ3202E ① 2003-01		ATTACHMENT	PJ32
S5PJ3302E 2001-10	S5PJ3302E ① 2003-01		UPPER STRUCTURE	PJ33
S5PJ3402E 2001-10	S5PJ3402E ① 2003-01		TRAVEL SYSTEM	PJ34
—	—	TROUBLESHOOTING	—	
S5PJ4202E 2001-10	S5PJ4202E ① 2003-01		HYDRAULIC SYSTEM	PJ42
S5PJ4302E 2001-10	S5PJ4302E ① 2003-01		ELECTRICAL SYSYEM	PJ43
S5PJ4402E 2001-10	S5PJ4402E ① 2003-01		ENGINE	PJ44
S5PJ5102E 2001-10	S5PJ5102E ① 2003-01		ENGINE	PJ51
		OPT. E/G		
PH03-02001~ PJ02-00101~	PH04-02801~ PJ03-01001~		APPLICABLE MACHINES	

# SAFETY PRECAUTIONS

## 1.1 GENERAL SAFETY INFORMATION

 **WARNING** 

Do Not operate or perform any maintenance on this machine until all instructions found in the OPERATION & MAINTENANCE MANUAL have been thoroughly read and understood. Improper operation or maintenance of this machine may cause accidents and could result in serious injury or death. Always keep the manual in the operator's seat pocket. If it is missing or damaged, place an order with an authorized KOBELCO Distributor for a replacement. If you have any questions, please consult an authorized KOBELCO Distributor.

1. Most accidents, which occur during operation, are due to neglect of precautionary measures and safety rules. Sufficient care should be taken to avoid these accidents. Erroneous operation, lubrication or maintenance services are very dangerous and may cause injury or death of personnel. Therefore all precautionary measures, NOTES, DANGERS, WARNINGS and CAUTIONS contained in this manual and on the machine should be read and understood by all personnel before starting any work with or on the machine.
2. Operation, inspection, and maintenance should be carefully carried out, and safety must be given the first priority. Messages of safety are indicated with marks. The safety information contained in this manual is intended only to supplement safety codes, insurance requirements, local laws, rules and regulations.
3. Messages of safety appear in this manual and on the machine. All messages of safety are identified by the words "DANGER", "WARNING" and "CAUTION".
  - a. **DANGER** – Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury and is represented as follows:

 **DANGER** 



- b. **WARNING** – Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury and is represented as follows:

 **WARNING** 

- c. **CAUTION** – Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against possible damage to the machine and its components and is represented as follows:

 **CAUTION** 

4. It is very difficult to forecast every danger that may occur during operation. However, safety can be ensured by fully understanding proper operating procedures for this machine according to methods recommended by KOBELCO.
5. While operating the machine, be sure to perform work with great care, so as not to damage the machine, or allow accidents to occur.
6. Continue studying this manual until all Safety, Operation and Maintenance procedures are completely understood by all persons working with the machine.

 **WARNING** 

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO, is outlined in the OPERATOR'S MANUAL for this machine. Improper performance of lubrication or maintenance procedures are dangerous and could result in injury or death. Read and understand the OPERATOR'S MANUAL before performing any lubrication or maintenance.

# SAFETY PRECAUTIONS

## 1.2 SAFETY PRECAUTIONS

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this manual. Use proper lifting procedures when removing any components. Weight of components table for SK40SR-2 / SK45SR-2 is shown in page 02-1-7, 8 of chapter SPECIFICATIONS in this manual.

The following is a list of basic precautions that must always be observed.

1. Read and understand all warning plates and decals on the machine before operating, maintaining or repairing this machine.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when using hammers, punches or drifts on any part of the machine or attachments. Use welders gloves, hood/goggles, apron and the protective clothing appropriate to the welding job being performed. Do not wear loose fitting or torn clothing. Remove all rings from fingers, loose jewelry, confine long hair and loose clothing before working on this machinery.
3. Disconnect the battery and hang a "Do Not Operate" tag in the operator's compartment. remove ignition keys.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block the machine so it does not roll while working on or under the machine. Hang a "Do Not Operate" tag in the operator's compartment.
5. Do not work on any machine that is supported only by lift, jacks or a hoist. Always use blocks or jack stands, capable of supporting the machine, before performing any disassembly.
6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud, grease, oil or debris from steps, walkways or work platforms before using. Always face the machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and carefully pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.



## WARNING



Do not operate this machine unless you have read and understand the instructions in the OPERATOR'S MANUAL. Improper machine operation is dangerous and could result in injury or death.

## **SAFETY PRECAUTIONS**

---

13. Always use the proper tools that are in good condition and that are suited for the job at hand. Be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with the same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of the parent metal. Make sure to disconnect battery before any welding procedures are attempted.
16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will be damaged in operation of the machine by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution and replace the guard or shield after repair is complete.
18. The maintenance and repair work while holding the bucket raised is dangerous due to the possibility of a falling attachment. Don't fail to lower the attachment and place the bucket to the ground before starting the work.
19. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Very small (pin hole) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pin hole leaks.
20. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
21. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
22. Be careful when servicing or separating the tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve protective clothing. Tracks can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.

# KOBELCO

Book Code No.

S5PJ0102E ①

# SHOP MANUAL SK40SR-2 PJ01 SK45SR-2

## PRELIMINARY REMARKS

### TABLE OF CONTENTS

- |  |     |
|--|-----|
| 1. GENERAL PRECAUTIONS FOR REPAIRS .....         | 1-1 |
| 2. ESCAPING PROCEDURE IN CASE OF EMERGENCY ..... | 1-4 |
| 3. INTERNATIONAL UNIT CONVERSION SYSTEM .....    | 1-5 |

**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

**Applicable Machines**

SK40SR-2 : PH03-02001~  
          : PH04-02801~  
SK45SR-2 : PJ02-00101~  
          : PJ03-01001~

Revision	Date of Issue	Remarks
First edition	October, 2001	S5PJ0102E    K·E
First revision	January, 2003	S5PJ0102E①    K·E



**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**