

# HYDRAULIC EXCAVATOR

## SHOP MANUAL model **SK70SR-1E**

### INDEX

1	SPECIFICATIONS SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	PROCEDURE OF INSTALLING OPTIONS SECTION

MAINTENANCE SPECIFICATIONS

SYSTEM

DISASSEMBLING

E/G TROUBLESHOOTING

# KOBELCO

Book Code No. **S5YT0002E**③

00-0-1②





# WARNING



## SAFETY



### WARNING



The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood / goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Cab.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.



### WARNING



Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachment to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.



## WARNING



13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs, which require welding, should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high-pressure lines or install ones, which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pinhole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed-rotating component that has been damaged or altered should be checked for balance before reusing.
21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.

## SK70SR-1E Index of shop Manual

Book Code No. Issued Year-Month			Title	Index No.
S5YT0102E 2002-01	S5YT0102E ① 2003-10	<b>SPECIFICATIONS</b>	OUTLINE	<b>YT01</b>
S5YT0202E 2002-01	S5YT0202E ① 2003-10		SPECIFICATIONS	<b>YT02</b>
S5YT0302E 2002-01	S5YT0302E ① 2003-10		ATTACHMENT DIMENSIONS	<b>YT03</b>
S5YT1102E 2002-01	S5YT1102E ① 2003-10	<b>MAINTENANCE</b>	TOOLS	<b>YT11</b>
S5YT1202E 2002-01	S5YT1202E ① 2003-10		STANDARD MAINTENANCE TIME SCHEDULE	<b>YT12</b>
S5YT1302E 2002-01	S5YT1302E ① 2003-10		MAINTENANCE STANDARDS AND TEST PROCEDURES	<b>YT13</b>
S5YT2102E 2002-01	S5YT2102E ① 2003-10	<b>SYSTEM</b>	MECHATRO CONTROL SYSTEM	<b>YT21</b>
S5YT2202E 2002-01	S5YT2202E ① 2003-10		HYDRAULIC SYSTEM	<b>YT22</b>
S5YT2302E 2002-01	S5YT2302E ① 2003-10		ELECTRICAL SYSTEM	<b>PJ23</b>
S5YT2402E 2002-01	S5YT2402E ① 2003-10		COMPONENTS SYSTEM	<b>YT24</b>
S5YT2502E 2002-01	S5YT2502E ① 2003-10		AIR-CONDITIONER SYSTEM	<b>YT25</b>
—	—		—	
S5YT3102E 2002-01	S5YT3102E ① 2003-10	<b>DISASSEMBLING</b>	DISASSEMBLING & ASSEMBLING	<b>YT31</b>
S5YT3202E 2002-01	S5YT3202E ① 2003-10		ATTACHMENTS	<b>YT32</b>
S5YT3302E 2002-01	S5YT3302E ① 2003-10		UPPER SWING BODY	<b>YT33</b>
S5YT3402E 2002-01	S5YT3402E ① 2003-10		TRAVEL FRAME	<b>YT34</b>
S5YT4102E 2002-01	S5YT4102E ① 2003-10	<b>TROUBLESHOOTING</b>	MECHATRO CONTROL	<b>YT41</b>
S5YT4202E 2002-01	S5YT4202E ① 2003-10		HYDRAULIC SYSTEM	<b>YT42</b>
S5YT4302E 2002-01	S5YT4302E ① 2003-10		ELECTRICAL SYSTEM	<b>YT43</b>
S5YT4402E 2002-01	S5YT4402E ① 2003-10		ENGINE	<b>YT44</b>
S5YT5102E 2002-01	S5YT5102E ① 2003-10	<b>E/G</b>	ENGINE	<b>YT51</b>
S5YT6302E ① 2002-12	S5YT6302E ② 2003-10	<b>OPT</b>	MOUNTING THE BREAKER AND NIBBLER & BREAKER	<b>YT63</b>
YT02-04001~	YT02-04001~ YT03-05432~		APPLICABLE MACHINES	



# KOBELCO

Book Code No.

S5 **YT01** 02E ①

# SHOP MANUAL **SK70SR-1E** **YT01**

## PRELIMINARY REMARKS

### TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR REPAIRS .....	1-1
2. INTERNATIONAL UNIT CONVERSION SYSTEM .....	1-4

# KOBELCO CONSTRUCTION MACHINERY CO., LTD.

Applicable Machines

SK70SR-1E : YT02-04001~  
YT03-05432~

Revision	Date of Issue	Remarks
First edition	January, 2002	S5YT0102E K·E
First revision	October, 2003	S5YT0102E ① K·E



**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**