


Service Manual Trucks

Group **37**

Release **04**

Wiring diagram

FE

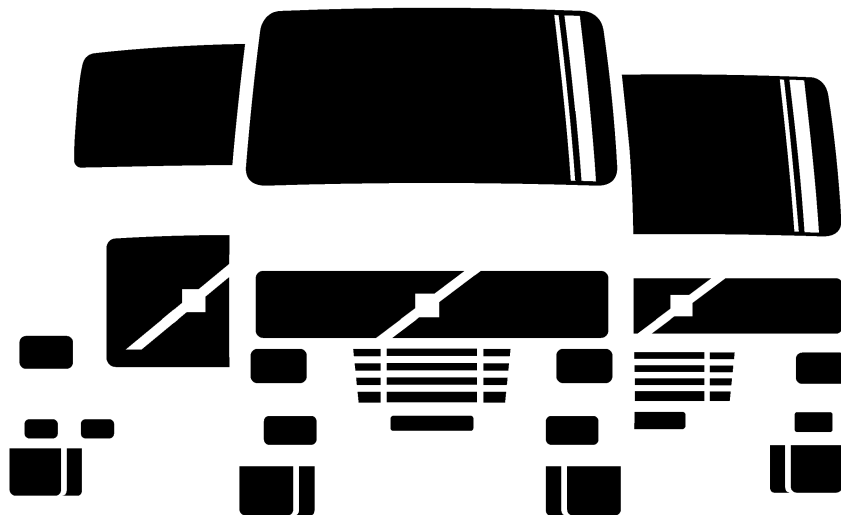

Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to June 09.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

Note: Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

Caution: Indicates an unsafe practice where damage to the product could occur.

Warning: Indicates an unsafe practice where personal injury or severe damage to the product could occur.

Danger: Indicates an unsafe practice where serious personal injury or death could occur.

Volvo Truck Corporation

Göteborg, Sweden

Order number: 88917383
Repl: Service Manual group 37 20150781

© 09 Volvo Truck Corporation, Göteborg, Sweden

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.


ENG35403.ihval

Contents

Example of wiring diagram	2
Component wiring diagram index	6
Component wiring diagrams	9
Illustrations index	84
Illustrations	85
Fuses	125
Relays	128
Wiring harness illustration index	131
Ground connections	134
List of ground connections	135
List of connectors	136
List of wiring numbers	185
List of components	187
Abbreviations	191
Feedback	


Example of wiring diagram

Power Distribution

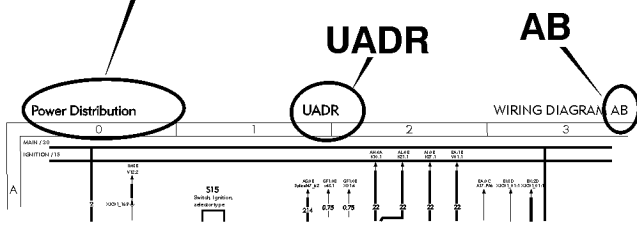


Component wiring diagram title, variant/subtitle and symbol.

Coordinates (B 1).

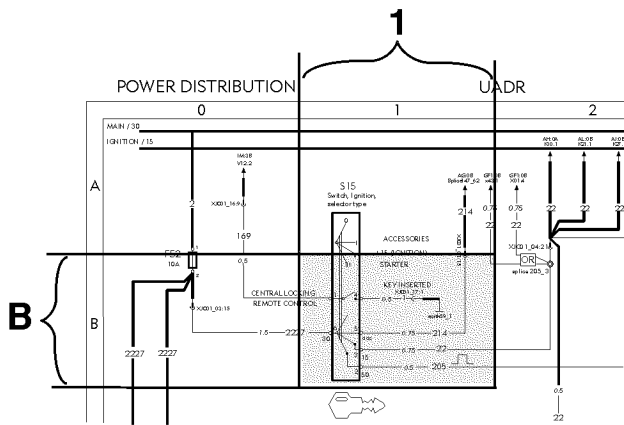


MAIN /30


IGNITION /15/DR

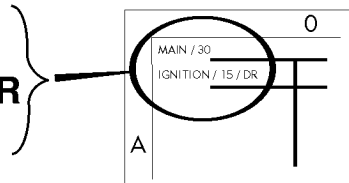


30 Voltage battery, kl.30.
15 Voltage with starter key in drive position and start position, kl.15/kl.DR.

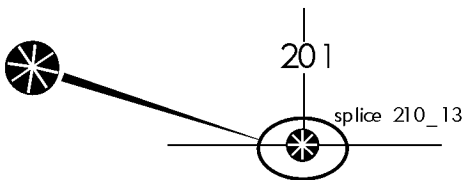


Splice.

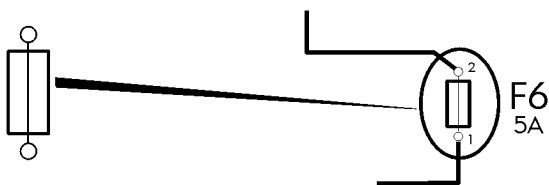


Fuse.

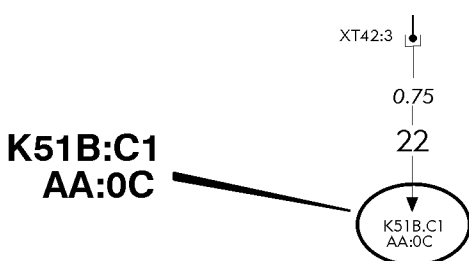


Reference arrow, for diagram AA, coordinates 0 C, component K51B, connector C pin 1.

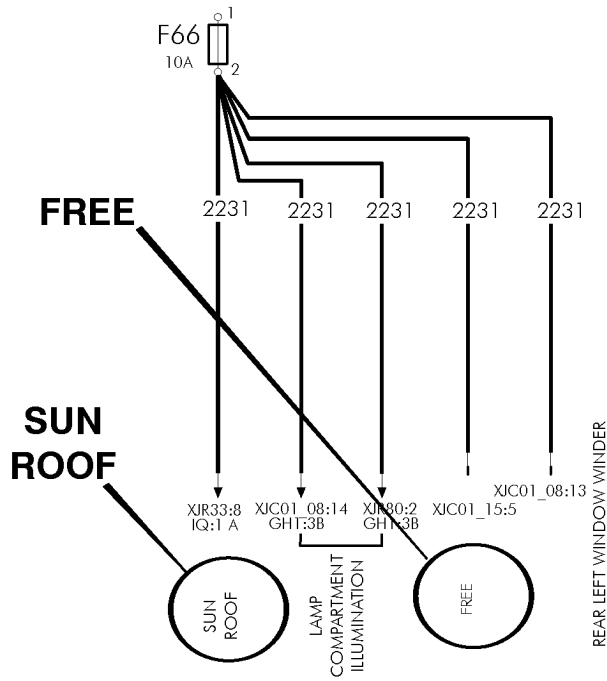


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

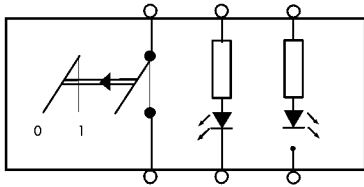

Switch.

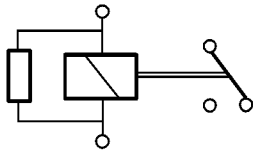


Relay.

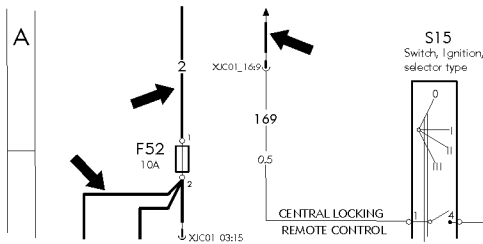


Conductor on circuit card.




Connector EN terminal 1.

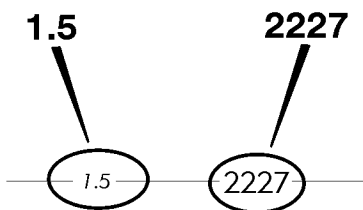

Wire area and wire number.

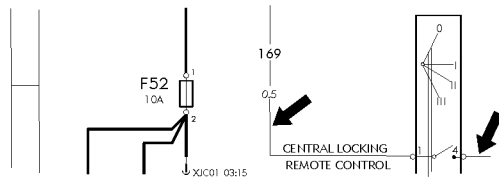


Thin lines, wires.

 


Connector.

- 1 EJB connectors.
- 2 Pass through connector chassis-cab.
- 3 Others.

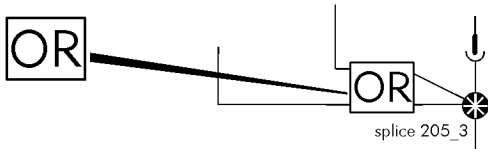


“OR” It is an exclusive OR (only one possibility) between the different solutions due to the configuration of the vehicle.

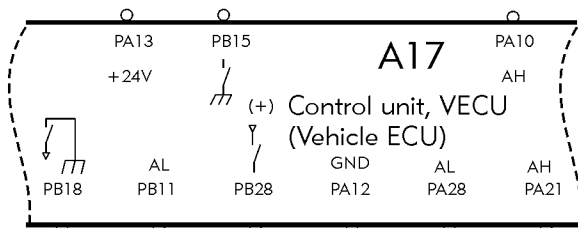


Electronic Control unit.

The inputs/outputs of ECUs are symbolized in the way described below:

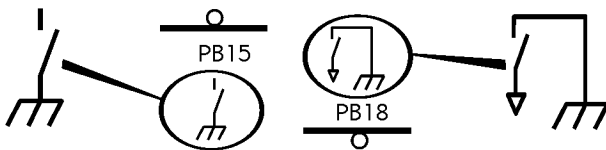


2 alternative of digital output low (set to the ground).

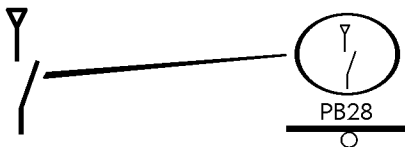


Digital output high (set to 24V, 5V...).



 
Ground of ECU.




Analog input.

 

Active low.

 


Active high.

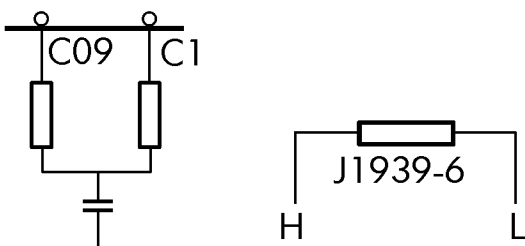

Ending resistance of communication bus CAN (120 Ω)

Wire number

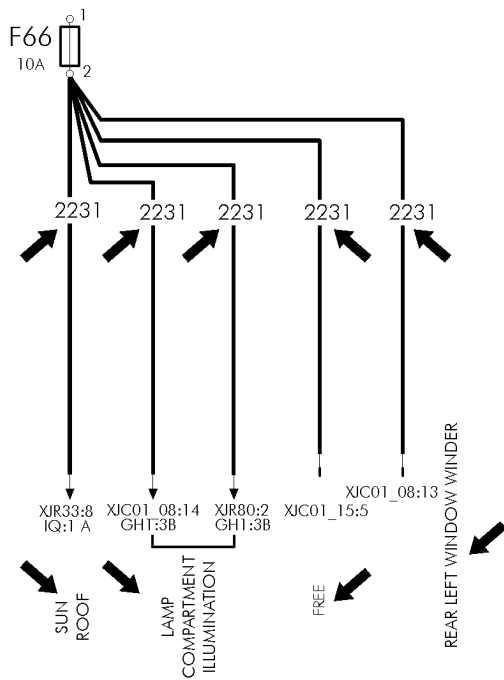

T3018844

Wire equipotential: Equipotential is a wire propriety which characterize a signal flowing a wire (same signal = same equipotential). Several wires could have the same equipotential.

The first digit of the number	Family
1	Ground and negative supply
2	Positive supply
3	Signal
4	Comfort accessories
5	Security accessories
6	Lighting
7	Instrumentation
8	Body builder
9	Free
0	Electronic/Data link

Starting switch

Switch logic diagram.

Terminal	Key in position									
	Key inserted	—	“0”	—	“1”	—	“II”	—	“III”	—
Key inserted	[Shaded]									
Off										
Accessories (pos. 5)					[Shaded]		[Shaded]			
+15/DR							[Shaded]	[Shaded]	[Shaded]	[Shaded]
50								[Shaded]	[Shaded]	[Shaded]


Component wiring diagram index

AA	Power supply, starting system, UADR	page 9
AB	Power distribution, UADR	page 10
AC	Power supply, starting system, ADR	page 11
AE	Power distribution, ADR	page 12
AG	Accessories power supply	page 13
AH	Power supply, kl.15, relay K10	page 14
AI	Power supply, kl.15, relay K21	page 15
AJ	Power supply, kl.15, relay K27	page 16
BA	Vehicle ECU	page 17
BA1	Vehicle ECU	page 18
BK	Instrument cluster	page 19
BM	Tachograph	page 20
BT	Fleet management system Gateway (FMS)	page 21
CU20	Engine ECU (B connector)	page 22
CU21	Engine ECU (A connector)	page 23
CU22	Engine air preheater, fuel heater	page 24
CU23	Engine ECU NOXCARE system	page 25
DC	Single H (ZTO1109/STO1309)	page 26
DQ	Power take off	page 27
DQ1	Automatic transmission	page 28
DU	Differential lock	page 29
EM1	EBS ECU, connector X1/X2	page 30
EM2	EBS ECU, connector X3/X4	page 31
EN1	EBS front modulators	page 32
EN3	EBS rear modulators (drive axle)	page 33
EN4	EBS rear modulators (tag/pusher axle)	page 34
FA	Air-suspension, TRACTOR 4x2 FSS-LEAF	page 35
FA1	Air-suspension, 4x2 RIGID/4x2 TRACTOR FSS-AIR	page 36
FA2	Air-suspension, 6x2	page 37
FC	Air power management (battery box left)	page 38
FC1	Air power management (battery box right)	page 39
FO	Electronic steered axle	page 40
GA1	Parking lights, Relay K31/K37	page 41
GA2	Parking lights, Relay K34	page 42
GB1	Low beam/high beam headlights control	page 43
GB2	Fog lights control, extra high beam headlights control	page 44

GC2	Side lights and beacon warning lights	page 45
GC3	Rear lamps	page 46
GC4	Frame side lights	page 47
GC5	Headlight lamps	page 48
GD	Reverse lights/brake lights	page 49
GF	Trailer connections	page 50
GF1	Diagnostics plug	page 51
GH1	Interior lighting L1H1/L2H1/L3H1 standard roof panel	page 52
GH3	Interior lighting L2H1 back area cab	page 53
GH5	Interior lighting L3H1 full height roof panel	page 54
GK	Trailer connections RIGID (Australia)	page 55
GK1	Trailer connections TRACTOR (Australia)	page 56
GM	Windscreen wiper washer	page 57
GQ	LCM/Flasher unit	page 58
GQ1	Horn	page 59
HJ	Air heater, UADR	page 60
HJ1	Air heater, ADR	page 61
HY	Climate unit	page 62
IA	Heated seat/buzzer belt/cigar lighter	page 63
IF1	Heated adjustable mirror LHD	page 64
IF2	Heated adjustable mirror RHD	page 65
IM	Central locking, immobiliser	page 66
IN	Theft alarm	page 67
IO	BBM	page 68
IQ	Sun roof/window lift	page 69
IR	12V power supply	page 70
IR1	12V power supply	page 71
IU	Radio (before w837)	page 72
IU1	Radio (after w837)	page 73
KA	Cab tilt and brake body builder output/horameter	page 74
NA	Body builder connector PB1	page 75
NB	Body builder connector PB2	page 76
NC	Body builder connector PB3	page 77
ND	Body builder connector PB4	page 78
NE	Body builder connector PB5	page 79
XA	Bus J1708/J1587	page 80
XB	Bus J1939-1	page 81

XC	Bus J1939-2	page 82
XD	Bus J1939-7	page 83

Component wiring diagrams

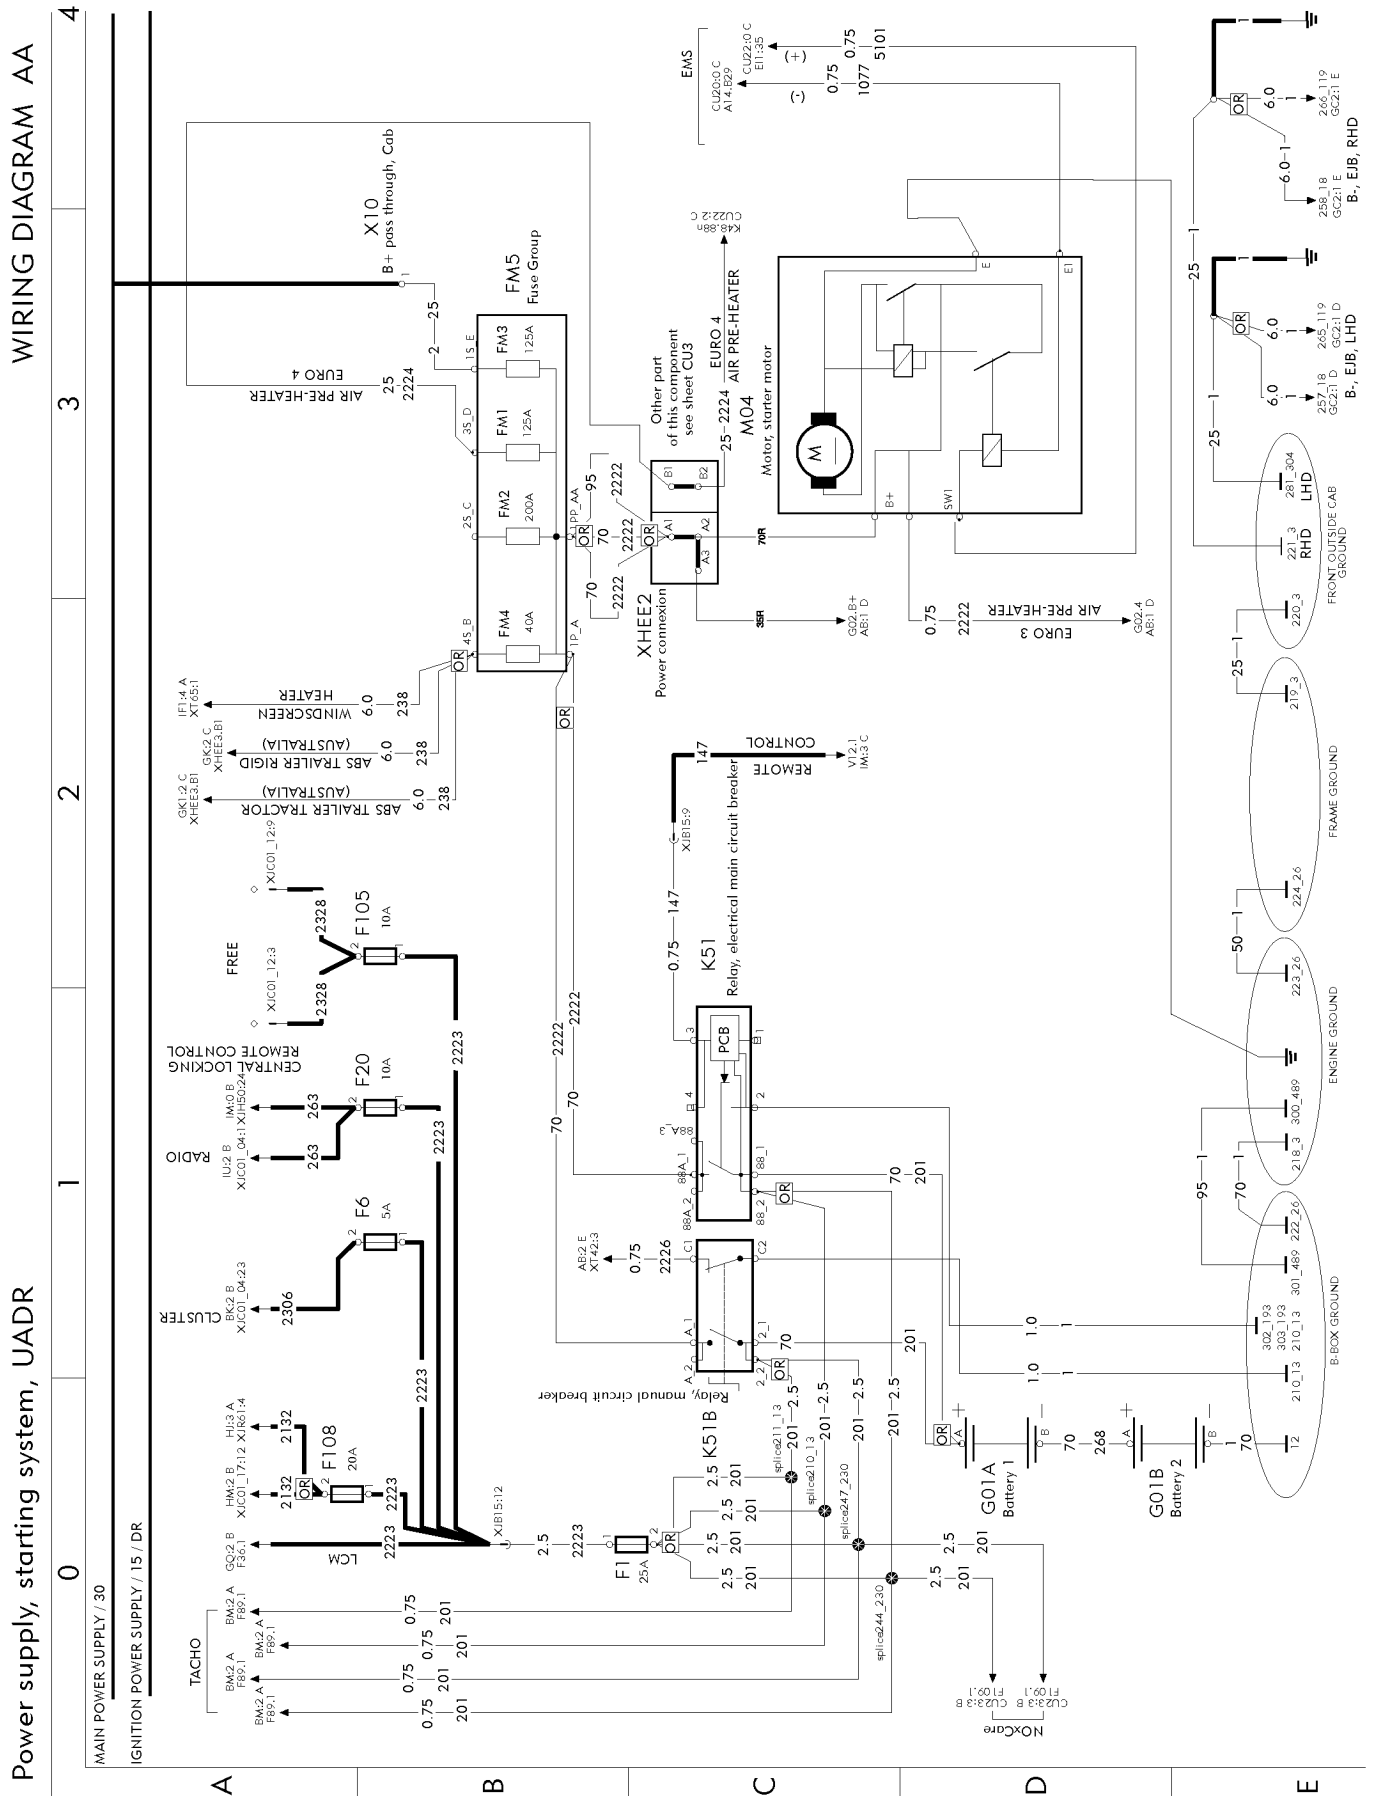

T3022192

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com