

Service Manual Trucks

Group **37**
Release **01**

Wiring diagram


FM

FH VAL-BAS4, VAL-CHD2

CHID A678743-

CHID B532897-

CHID CKD882147-

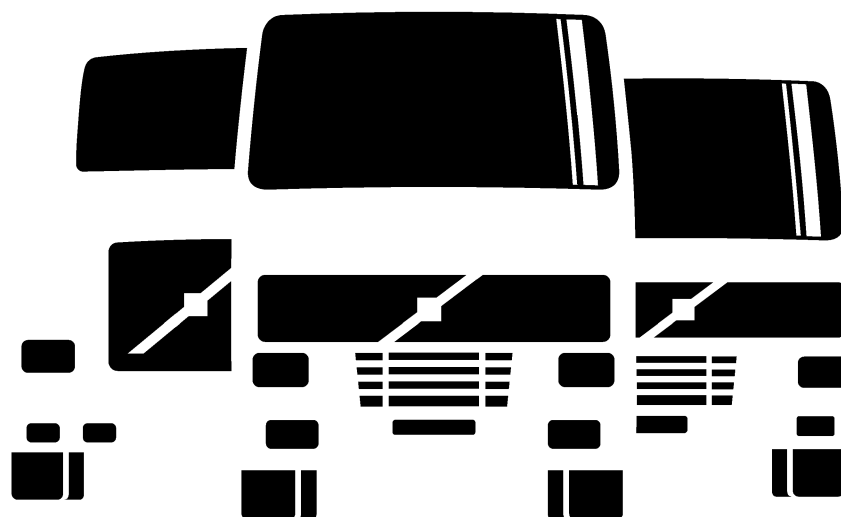

Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to September 08.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

Note: Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

Caution: Indicates an unsafe practice where damage to the product could occur.

Warning: Indicates an unsafe practice where personal injury or severe damage to the product could occur.

Danger: Indicates an unsafe practice where serious personal injury or death could occur.

Volvo Truck Corporation

Göteborg, Sweden

Order number: 20160445

© 08 Volvo Truck Corporation, Göteborg, Sweden


All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.

ENG31153.ihval


Contents

Example of wiring diagram	2
Component wiring diagram index	5
Component wiring diagrams	8
Illustrations index	119
Illustrations	120
Fuses	211
Relays	213
Wiring harness illustration index	215
Ground connections	218
List of ground connections	220
List of connectors	221
List of components	231
Abbreviations	237
Cable colour code	239
Feedback	


Example of wiring diagram

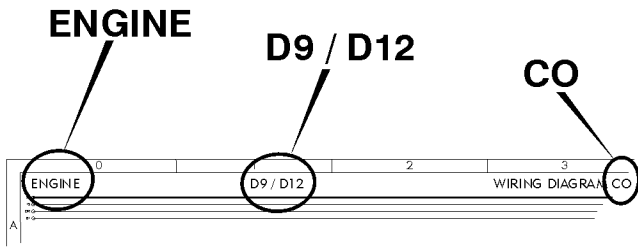


Component wiring diagram title, variant/subtitle and symbol.

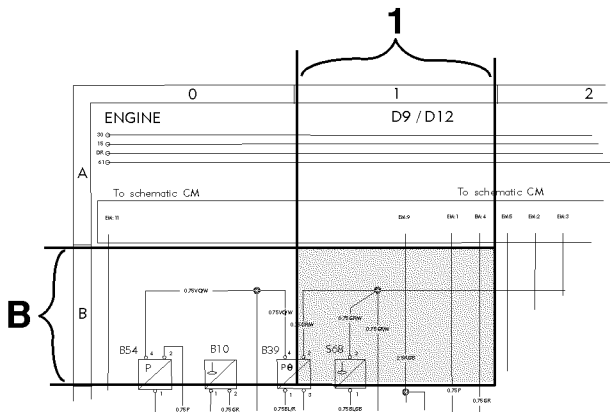


Coordinates (B 1).

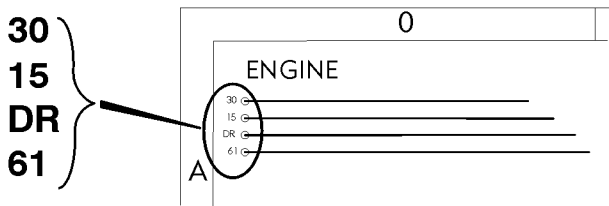


30 Voltage battery, kl.30.
15 Voltage with starter key in drive position, kl.15.
DR Voltage with starter key in drive position, preheat position and start position, kl.DR.
61 Voltage when alternator charges, kl.61.

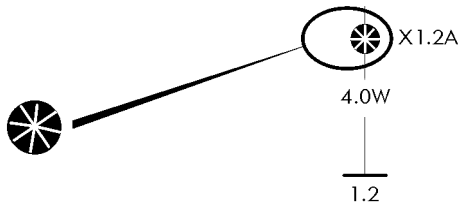

Splice.

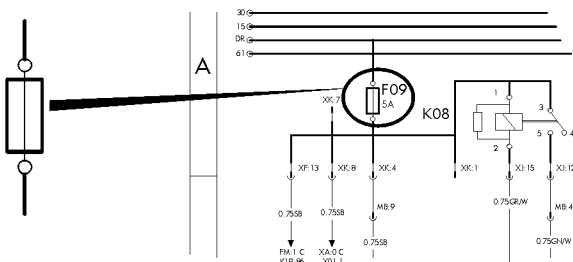


Fuse.

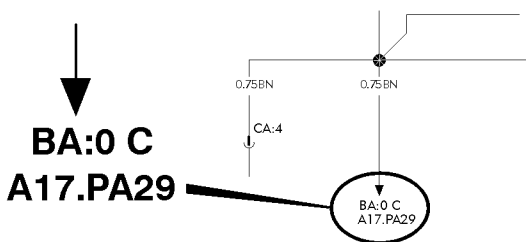


Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.


GEARTRONIC
I-SHIFT
POWERTRONIC

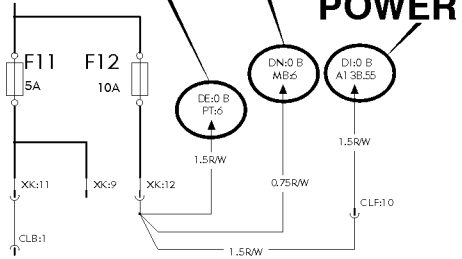


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

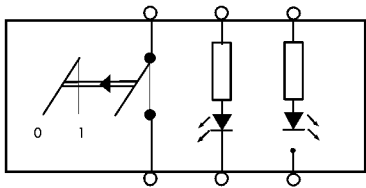


Switch.

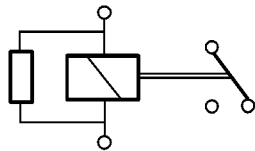


Relay.

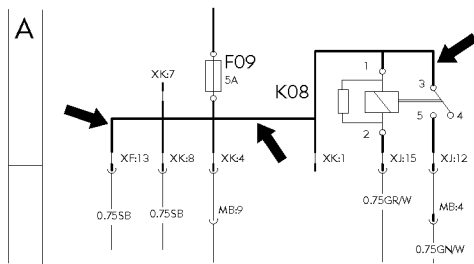


Conductor on circuit card.

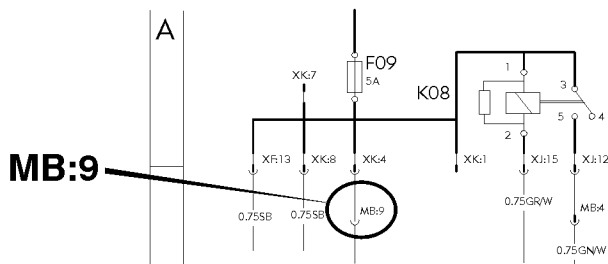


Connector MB terminal 9.

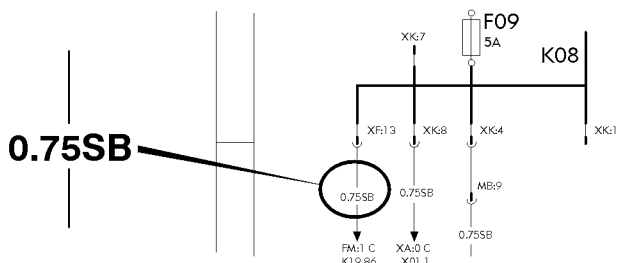


Wire area and colour.

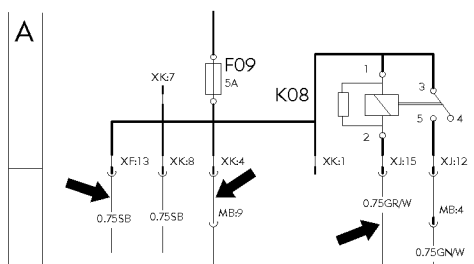


Thin lines, wires.

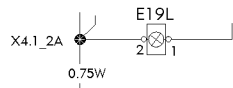 


Earth connection point 4, earth connection 1 and wire 2.

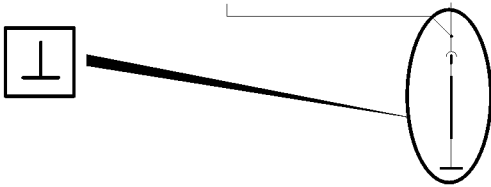

Earth connection to circuit card.

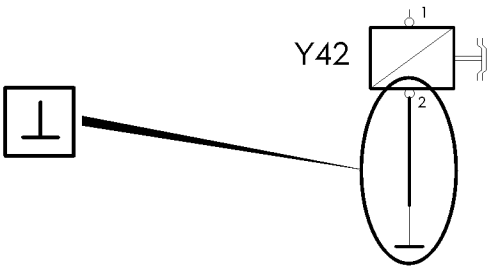

Earth connection without wire.

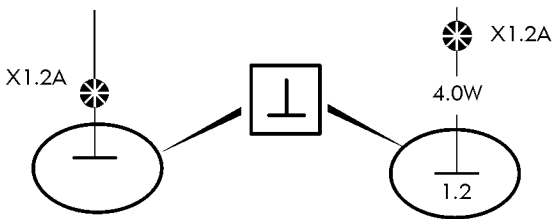

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.


Component wiring diagram index

AA	Power supply, starting system	page 9
AB	Main switch	page 10
AC	Power distribution	page 11
AE	ADR, main switch	page 12
BA	Vehicle ECU	page 13
BE	Driver Assistance System, ACC	page 14
BI	Instrument cluster	page 15
BM	Tachograph in dash	page 16
BN	Tachograph in shelf	page 17
BU	Dynafleet TIS-BAS/TIS-MED/TIS-HIGH	page 18
BX	FMS Gateway	page 19
BZ	Toll collect	page 20
BZ RHD	Toll collect	page 21
CH	Engine interface EM-JPN07	page 22
CJ	Engine interface	page 23
CO	Engine D9B, D11B, D13A	page 24
	Engine D13B, EGR-C, EM-EC06	page 25
	Engine D13B, EGR-C, EM-EC06	page 26
	Engine D13B, EM-JPN07	page 27
	Engine D13B, EM-JPN07	page 28
	Engine D16C4	page 29
	Engine D16E	page 30
CP	12V trailer ABS converter, VERS-AUS, TABS-12V	page 31
CV	SCR	page 32
DC	Gear selector ECU (I-SHIFT/POWERTRONIC)	page 33
DI	Powertronic	page 34
DI RHD	Powertronic	page 35
DM	Retarder manual gearshift	page 36
DP	I-shift	page 37
DQ	Power take off	page 38
DU	Diff-lock	page 39
EE	ABS basic, E-version	page 40
EE RHD	ABS basic, E-version	page 41
EO	EBS ECU	page 42
EO RHD	EBS ECU	page 43
EP	EBS modulators	page 44
FA	Air-suspension	page 45

FA RHD	Air-suspension	page 46
FG	Load indicator	page 47
FI	Bogie lift A-ride	page 48
FK	Bogie lift A-ride with axle load limiter	page 49
FM	Axle lock, self steered axle	page 50
FO	Electronic steered axle	page 51
FP	Dual steered front axle	page 52
FQ	Air dryer	page 53
FU	Central lubrication system	page 54
GA	LCM head lights, FH	page 55
GA2	LCM head lights, FM	page 56
GA3	LCM head lights, FM VAL-BAS2	page 57
GB	LCM trailer	page 58
GB2	LCM trailer, VAL-BAS2	page 59
GC	LCM rear lights	page 60
GC RHD	LCM rear lights	page 61
GE	Rear lights overhang	page 62
GF	Rear lights, India/Korea	page 63
GG	Trailer connections, RIGID	page 64
GH	Trailer connections, TRACTOR	page 65
GK	Trailer connections (AUS only)	page 66
GL	Identification lamps	page 67
GL2	Identification lamps, sunvisor H1	page 68
GM	Wiper, rainsensor	page 69
GQ	Horn	page 70
GR	Trailer connections TREL14	page 71
GU	Headlights adjust	page 72
HE	Fan in dash board	page 73
HG	Climate unit, CU,-BAS,-MCC,-ECC	page 74
HI	Air heater, UADR	page 75
HI2	Air heater, ADR	page 76
HM	Water heater	page 77
HP	Short stop cab heater	page 78
HY	Climate unit, CU,-HEAT,-ACMAN,-ACAUT.	page 79
HY RHD	Climate unit, CU,-HEAT,-ACMAN,-ACAUT.	page 80
IA	El. heated/adj. seat	page 81
IE	El. heat/adj. mirrors, El. window winders	page 82

IF	Foldable mirror bracket	page 83
IH	Interior light, FM, FH H1	page 84
IH2	Interior light, FH, INLI-NLD	page 85
IH3	Interior light, FM, FH INLI-NL/INLI-BAS	page 86
IH4	Interior light, H2/H3	page 87
IK	Alcolock, start prevention system	page 88
IM	Central locking, immobiliser	page 89
IQ	El. sunroof, cig. lighter, refrigerator	page 90
IQ2	Cig. lighter VAL-BAS2	page 91
IR	12V power supply	page 92
IR2	Power outlets	page 93
IS	SRS. Air-bag	page 94
IU	Audio	page 95
IU RHD	Audio	page 96
IV	Amplifier	page 97
IX	Integrated telephone	page 98
IZ	Backup camera	page 99
KA	Cab tilt	page 100
KE	Load light, 5:th wheel lamp	page 101
KI	Light sign	page 102
KM	Beacon warning light	page 103
ME	Extra fuse block, key switch relay	page 104
MF	Extra fuse block, SPDU-S	page 105
NA	Body builder (BB), auxsw-6 and swapbody	page 106
NB	Body builder (BB), tailprep and swapbody	page 107
NC	Body builder (BB), ELCE-CK, BBM, PTO2	page 108
NI	Extra spotlamps front/roof, max 4x70W	page 109
NK	Burglar alarm	page 110
NU	Body builder (BB), SPEED-DU	page 111
NX	Body builder (BB), SPDU-S	page 112
OA	Tyre pressure monitoring (TPM)	page 113
XA	Bus J1708/J1587	page 114
XB	Bus J1939	page 115
XC	Bus J1939-7, OBD	page 116
YA	Ground connector	page 117
ZA RHD	Ground/Misc.	page 118

Component wiring diagrams

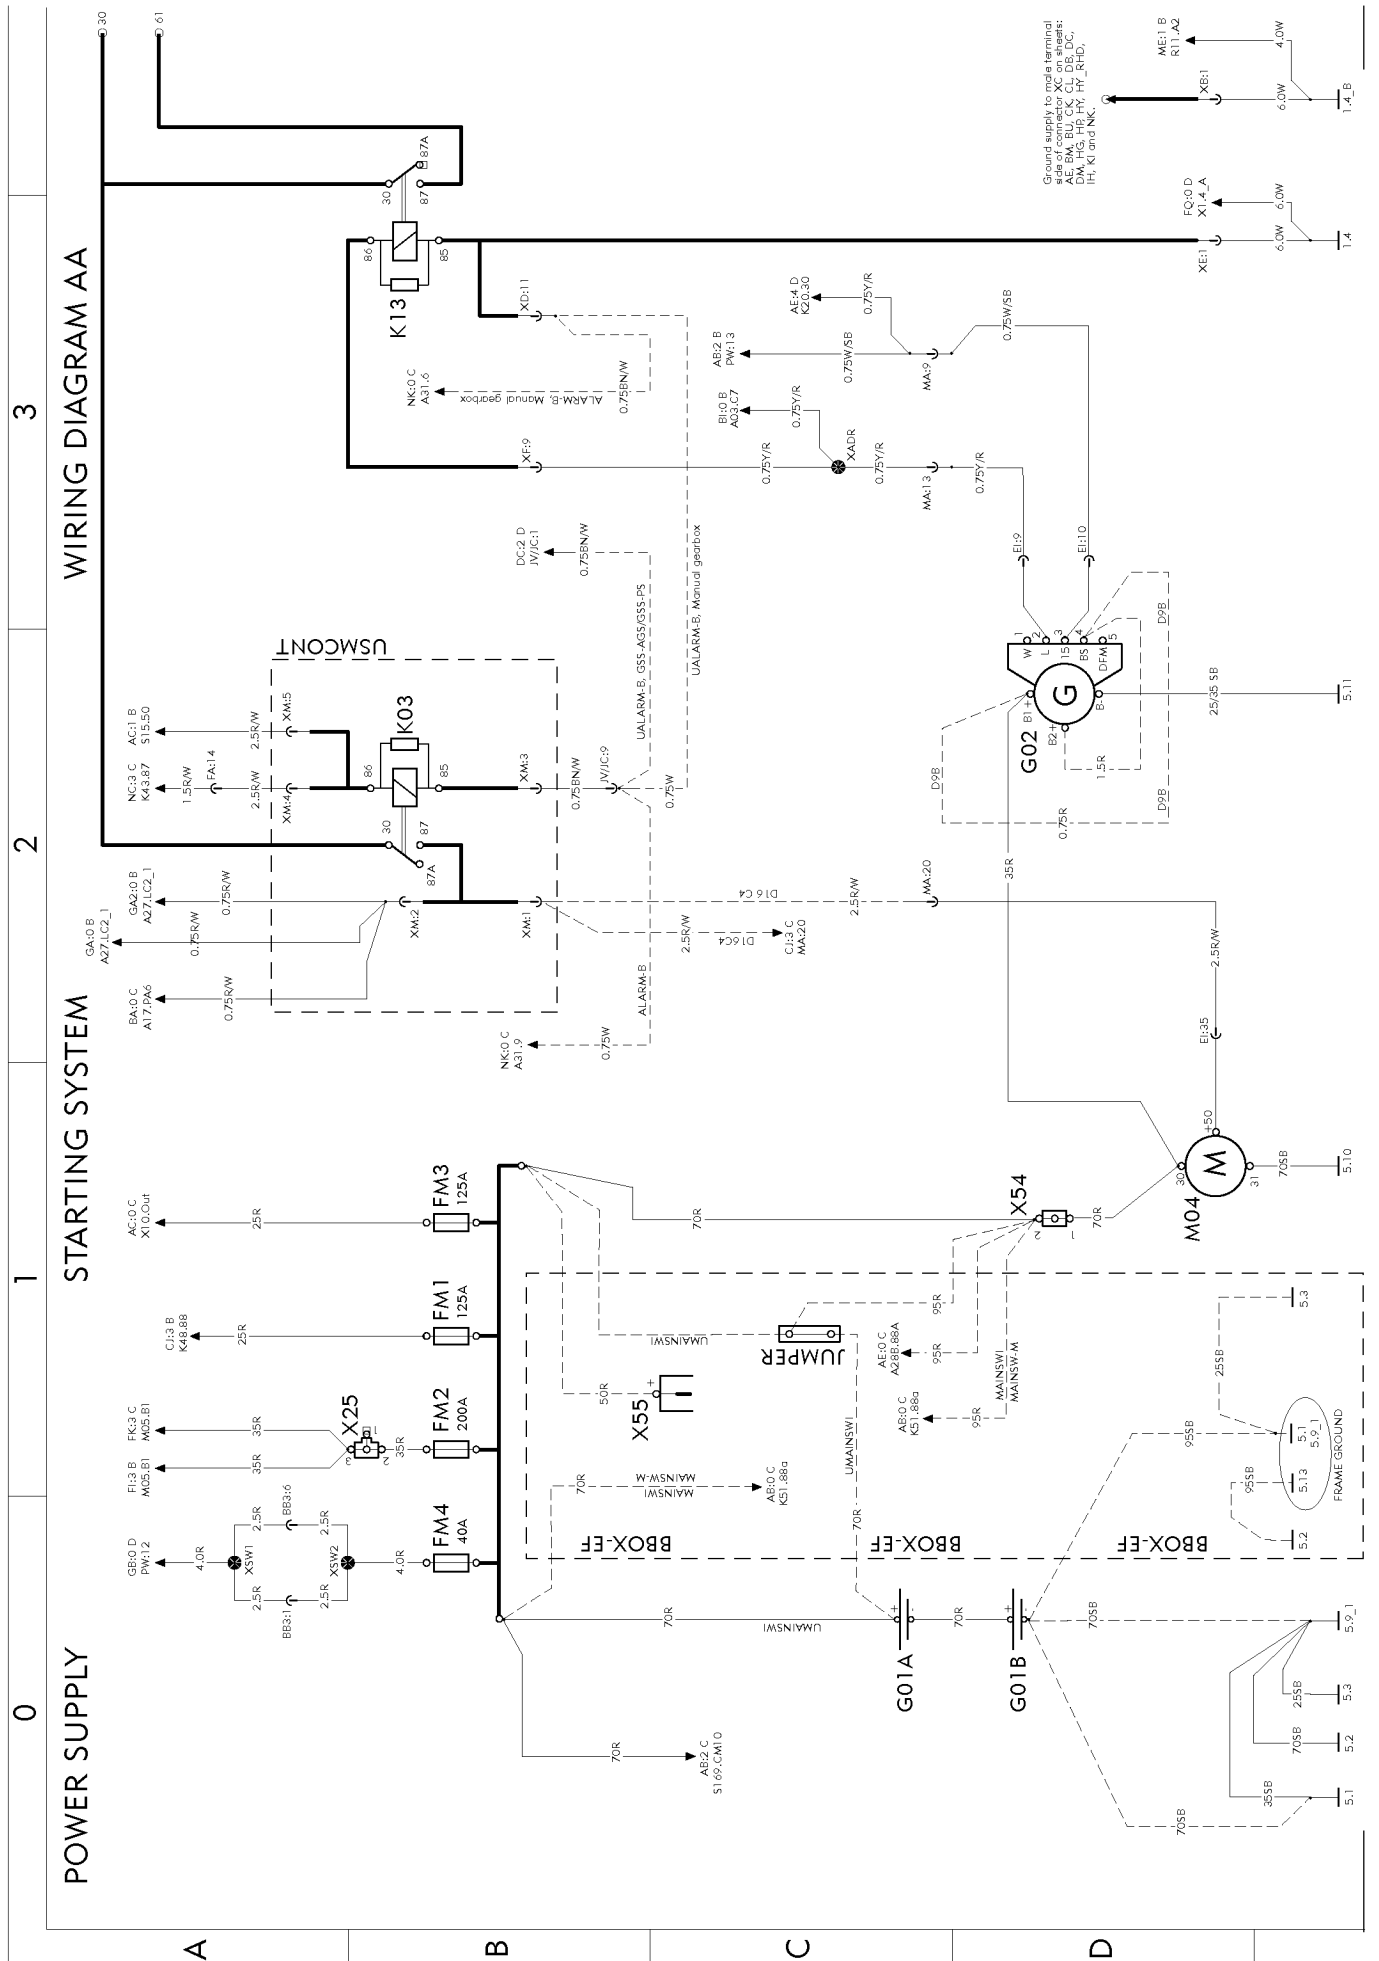

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com