


# Service Manual Trucks

Group **37**  
Release **01**

Wiring diagram  
FM, FH, NH12 VERSION2  
FM, FH CHID A615020–  
FM, FH CHID B421649–

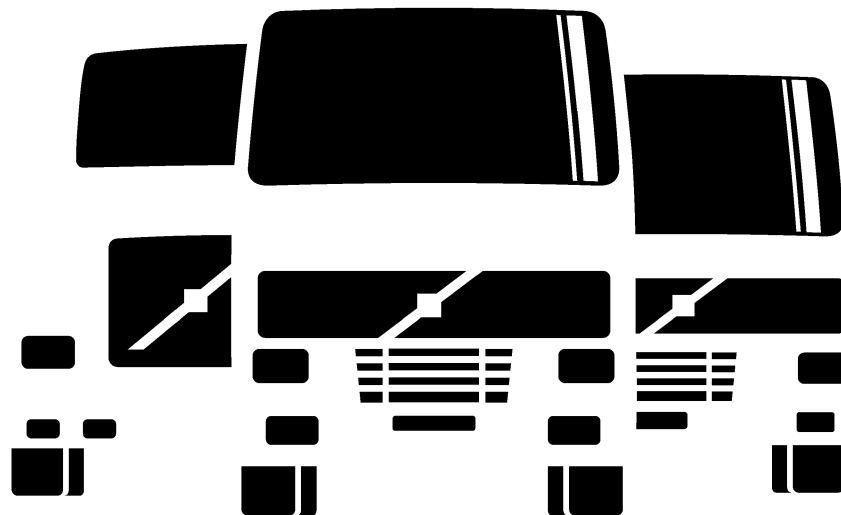

# Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to December 05.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

**Note:** Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

**Caution:** Indicates an unsafe practice where damage to the product could occur.

**Warning:** Indicates an unsafe practice where personal injury or severe damage to the product could occur.

**Danger:** Indicates an unsafe practice where serious personal injury or death could occur.

## Volvo Truck Corporation

Göteborg, Sweden

**Order number: 20046394**

© 05 Volvo Truck Corporation, Göteborg, Sweden


All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.

ENG19476


# Contents

<b>Example of wiring diagram</b> .....	2
<b>Component wiring diagram index</b> .....	5
<b>Component wiring diagrams</b> .....	8
<b>Illustrations index</b> .....	98
<b>Illustrations</b> .....	99
<b>Fuses</b> .....	185
<b>Relays</b> .....	187
<b>Wiring harness illustration index</b> .....	189
<b>Ground connections</b> .....	192
List of ground connections .....	194
<b>List of connectors</b> .....	195
<b>List of components</b> .....	204
<b>Abbreviations</b> .....	210
<b>Cable colour code</b> .....	212
<b>Feedback</b>	


# Example of wiring diagram

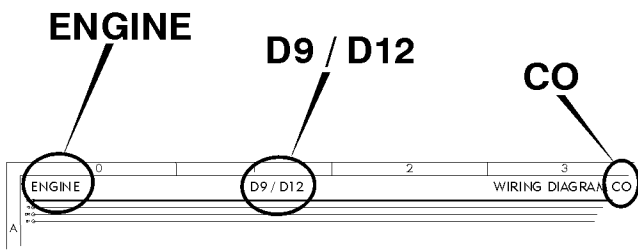


Component wiring diagram title, variant/subtitle and symbol.

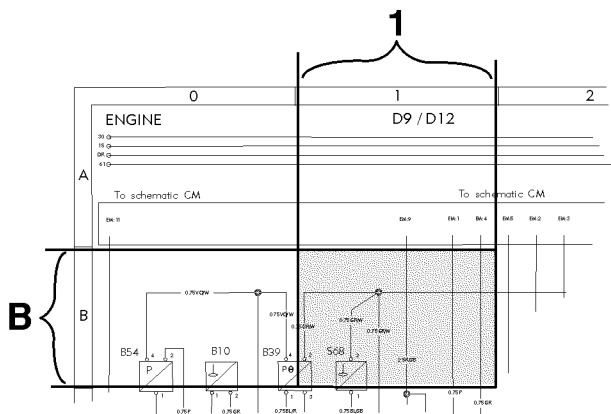


Coordinates (B 1).

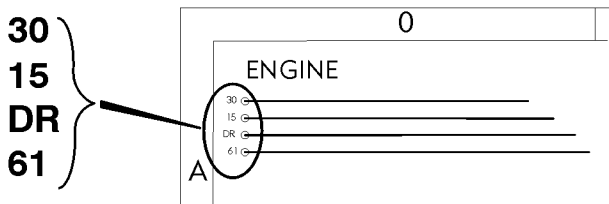


30 Voltage battery, kl.30.  
15 Voltage with starter key in drive position, kl.15.  
DR Voltage with starter key in drive position, preheat position and start position, kl.DR.  
61 Voltage when alternator charges, kl.61.

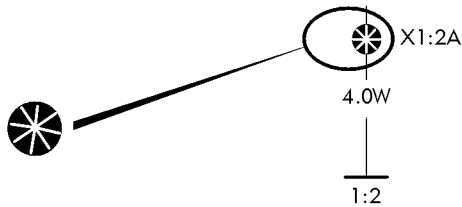

Splice.



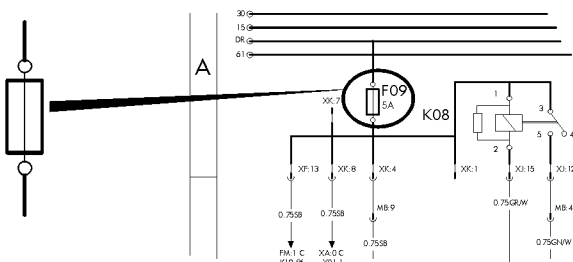


Fuse.

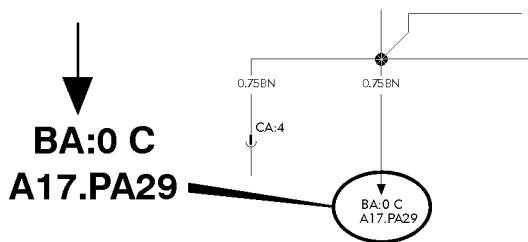

Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.


**GEARTRONIC**  
**I-SHIFT**  
**POWERTRONIC**

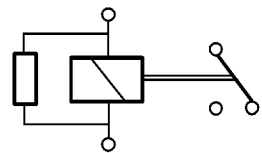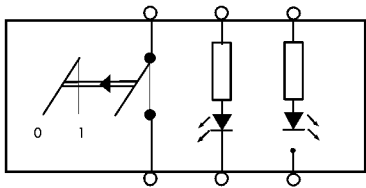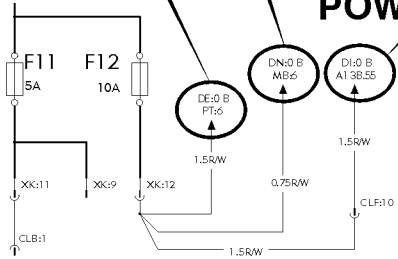


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

Switch.


Relay.

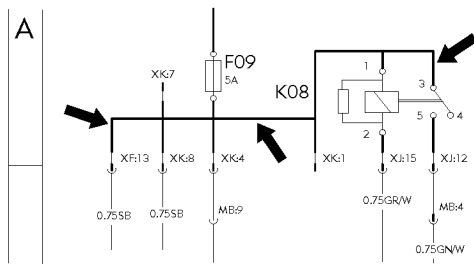


Conductor on circuit card.

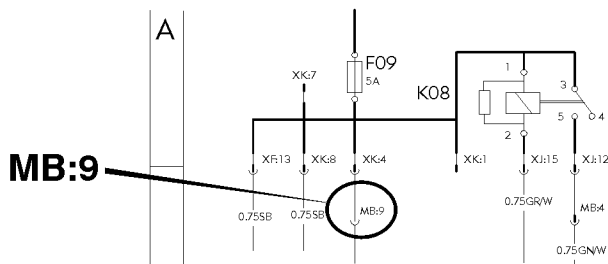


Connector MB terminal 9.

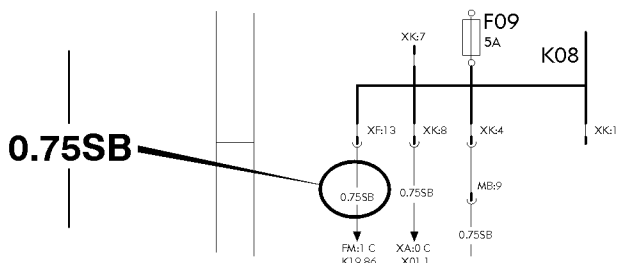

Wire area and colour.

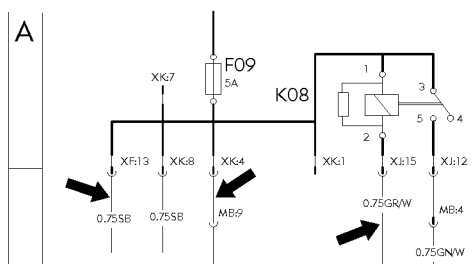

Thin lines, wires.

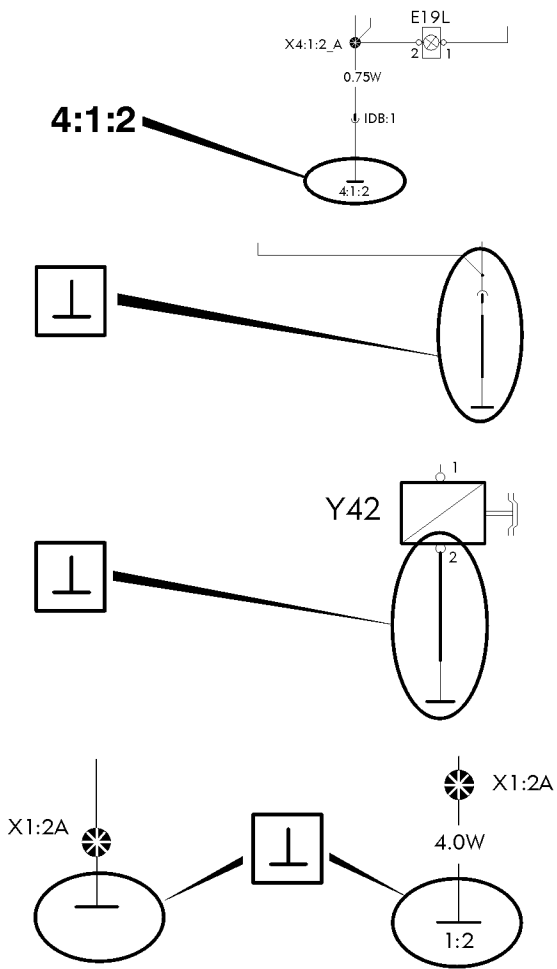

Earth connection point 4, earth connection 1 and wire 2.

Earth connection to circuit card.

Earth connection without wire.

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.

# Component wiring diagram index


<b>AA</b>	Power supply, starting system .....	page 8
<b>AB</b>	Main switch .....	page 9
<b>AC</b>	Power distribution .....	page 10
<b>AE</b>	ADR, main switch .....	page 11
<b>BA</b>	Vehicle ECU .....	page 12
<b>BE</b>	ACC Adaptive cruise control .....	page 13
<b>BI</b>	Instrument cluster .....	page 14
<b>BM</b>	Tachograph in dash .....	page 15
<b>BN</b>	Tachograph in shelf .....	page 16
<b>BU</b>	Dynafleet .....	page 17
<b>BX</b>	FMS Gateway .....	page 18
<b>BY</b>	Volvo link (VERS-SAM) .....	page 19
<b>CK</b>	Engine interface D13 .....	page 20
<b>CL</b>	Engine interface D12F, EM-JPN04 .....	page 21
<b>CM</b>	Engine interface D12D .....	page 22
	Engine interface D9A, D16C .....	page 23
<b>CO</b>	Engine D9A .....	page 24
	Engine D12D .....	page 25
	Engine D12F, EM-JPN04 .....	page 26
	Engine D13 .....	page 27
	Engine D16C .....	page 28
<b>CP</b>	ISX functions, 12V trailer ABS converter (AUS only) .....	page 29
<b>CS</b>	Engine ISX (AUS only) .....	page 30
<b>DB</b>	Gear selector ECU (GEARTRONIC) .....	page 31
<b>DC</b>	Gear selector ECU (I-SHIFT/POWERTRONIC) .....	page 32
<b>DE</b>	Geartronic automatic gearshift .....	page 33
<b>DI</b>	Powertronic .....	page 34
<b>DM</b>	Retarder manual gearshift .....	page 35
<b>DN</b>	I-shift VT2412B .....	page 36
<b>DP</b>	I-shift AT2412C/AT2512C/ATO2512C .....	page 37
<b>DQ</b>	Power take off .....	page 38
<b>DU</b>	Diff-lock .....	page 39
<b>EE</b>	ABS basic, D-version .....	page 40
<b>EI</b>	ABS/ASR D-version .....	page 41
<b>EO</b>	EBS ECU .....	page 42
<b>EP</b>	EBS modulators .....	page 43
<b>FA</b>	Air-suspension .....	page 44

<b>FG</b>	Load indikator .....	page 45
<b>FI</b>	Bogie lift A-ride .....	page 46
<b>FK</b>	Bogie lift A-ride with axle load limiter .....	page 47
<b>FM</b>	Axle lock, self steered axle .....	page 48
<b>FO</b>	Electronic steered axle .....	page 49
<b>FP</b>	Dual steered front axle .....	page 50
<b>FQ</b>	Air dryer .....	page 51
<b>FU</b>	Central lubrication system .....	page 52
<b>GA</b>	LCM head lights .....	page 53
<b>GB</b>	LCM trailer .....	page 54
<b>GC</b>	LCM rear lights .....	page 55
<b>GD</b>	HID lamps .....	page 56
<b>GE</b>	Rear lights overhang .....	page 57
<b>GF</b>	Rear lights, India/Korea .....	page 58
<b>GG</b>	Trailer connections, RIGID .....	page 59
<b>GH</b>	Trailer connections, TRACTOR .....	page 60
<b>GI</b>	LCM head lights (VERS-SAM TYPE-N) .....	page 61
<b>GK</b>	Trailer connections (AUS only) .....	page 62
<b>GM</b>	Wiper, washer .....	page 63
<b>GQ</b>	Horn .....	page 64
<b>GR</b>	Trailer connections TREL14 .....	page 65
<b>GU</b>	Headlights adjust .....	page 66
<b>HG</b>	Climate unit, CU,-BAS,-MCC,-ECC .....	page 67
<b>HI</b>	Air heater .....	page 68
<b>HM</b>	Water heater .....	page 69
<b>HP</b>	Short stop cab heater .....	page 70
<b>HY</b>	Climat unit, CU,-HEAT,-ACMAN,-ACAUT. ....	page 71
<b>HZ</b>	Air cooler, Brazil .....	page 72
<b>IA</b>	El. heated/adj. seat .....	page 73
<b>IE</b>	El. heat/adj. mirrors, El. window winders .....	page 74
<b>IF</b>	Foldable mirror bracket .....	page 75
<b>IH</b>	Interior light .....	page 76
<b>IJ</b>	Interior light, storage .....	page 77
<b>IM</b>	Central locking, immobiliser .....	page 78
<b>IQ</b>	El. sunroof, cig. lighter, refrigerator .....	page 79
<b>IR</b>	12V power supply .....	page 80
<b>IS</b>	SRS. Air-bag .....	page 81
<b>IU</b>	Radio .....	page 82



<b>IX</b>	Integrated telephone .....	page 83
<b>IZ</b>	Backup camera .....	page 84
<b>KA</b>	Cab tilt .....	page 85
<b>KE</b>	Load light, 5:th wheel lamp .....	page 86
<b>KI</b>	Light sign .....	page 87
<b>KM</b>	Beacon warning light .....	page 88
<b>ME</b>	Extra fuse block, key switch relay .....	page 89
<b>NA</b>	Body builder (BB), auxsw-6 and swapbody .....	page 90
<b>NC</b>	Body builder (BB), ELCE-CK, BBM, PTO2 .....	page 91
<b>NI</b>	Extra spotlamps front/roof, max 4x70W .....	page 92
<b>NK</b>	Burglar alarm .....	page 93
<b>NU</b>	Body builder (BB), DUAL-SPEED .....	page 94
<b>OA</b>	Tyre pressure monitoring (TPM) .....	page 95
<b>XA</b>	Bus J1708/J1587 .....	page 96
<b>XB</b>	Bus J1939 .....	page 97

# Component wiring diagrams

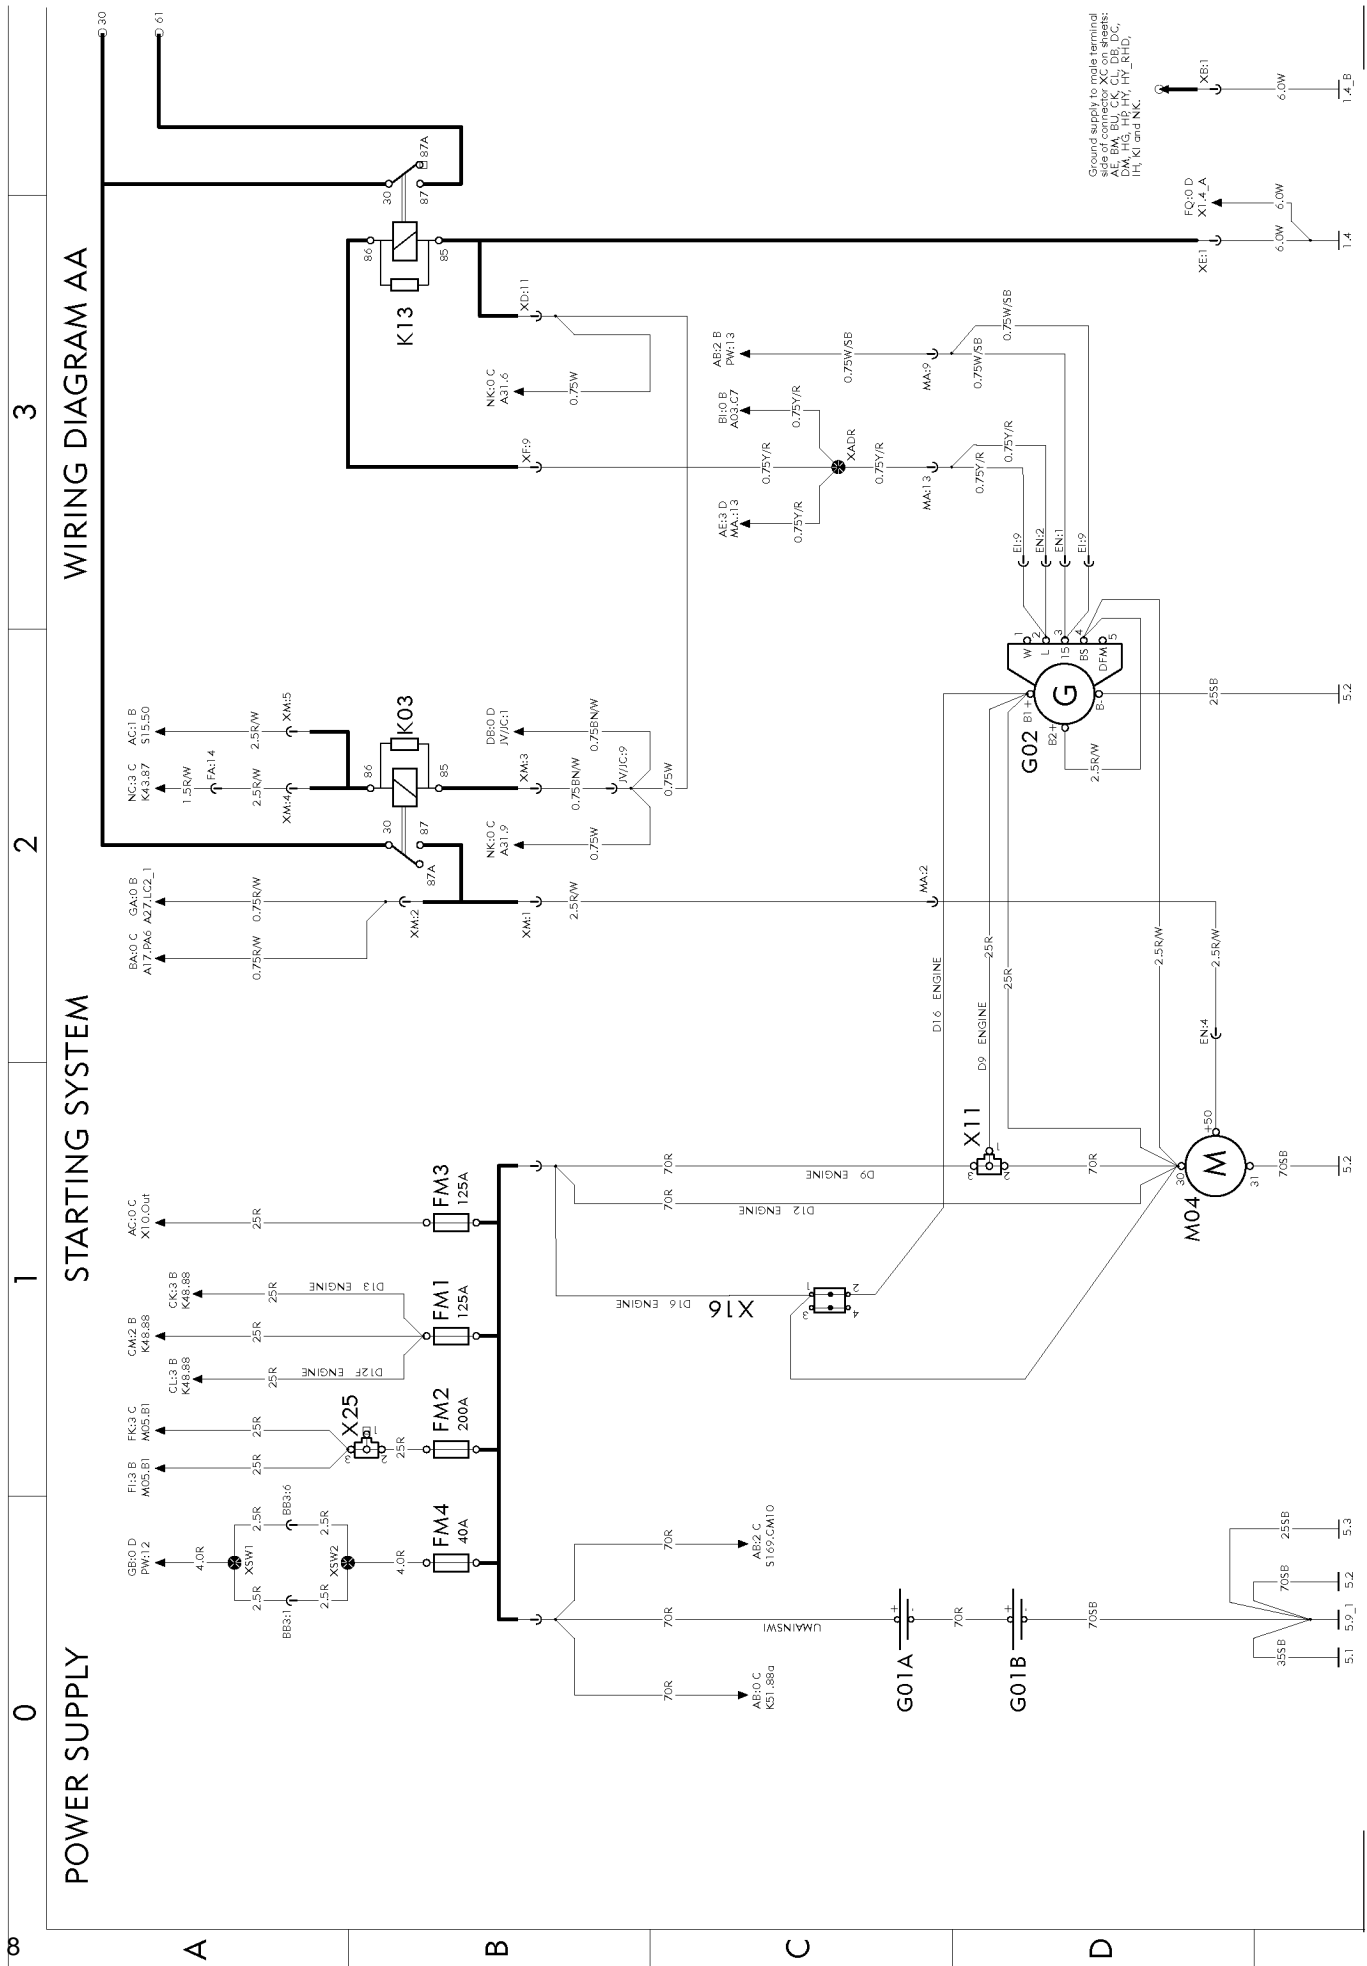

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**