


# Service Manual Trucks

Group **37**

Release **02**

Wiring diagram

FM9, FM12, FH12 VERSION2

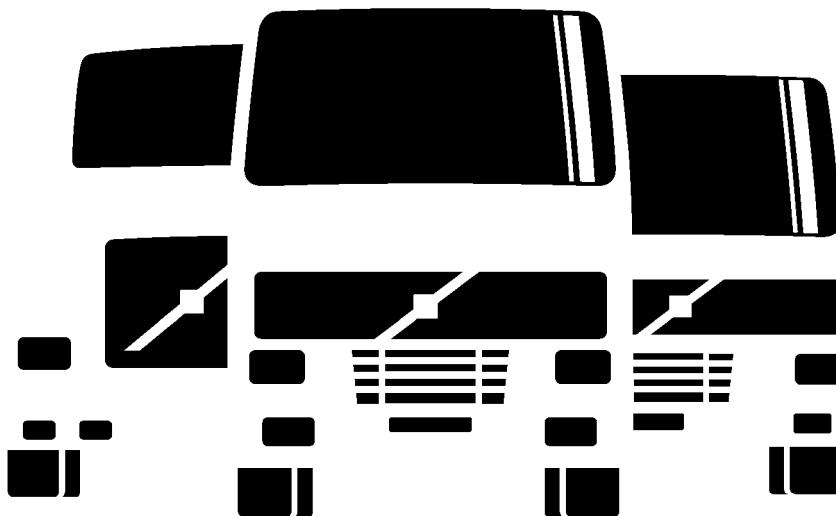

# Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to August 02.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

**Note:** Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

**Caution:** Indicates an unsafe practice where damage to the product could occur.

**Warning:** Indicates an unsafe practice where personal injury or severe damage to the product could occur.

**Danger:** Indicates an unsafe practice where serious personal injury or death could occur.

## Volvo Truck Corporation

Göteborg, Sweden

The following information will be superseded by this manual:

SM Group 37 TSP 169444

**Order number: TSP175664**

© 02 Volvo Truck Corporation, Göteborg, Sweden


All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.

ENG11869


# Contents

<b>Example of wiring diagram</b> .....	2
<b>Component wiring diagram index</b> .....	5
<b>Component wiring diagrams</b> .....	8
<b>Illustrations index</b> .....	76
<b>Illustrations</b> .....	77
<b>Fuses</b> .....	137
<b>Relays</b> .....	139
<b>Wiring harness illustration index</b> .....	141
<b>Earth connections</b> .....	144
List of earth connections .....	146
<b>List of connectors</b> .....	147
<b>List of components</b> .....	154
<b>Abbreviations</b> .....	160
<b>Cable colour code</b> .....	161
<b>Feedback</b>	


# Example of wiring diagram

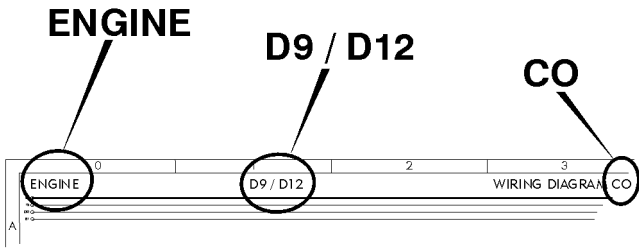


Component wiring diagram title, variant/subtitle and symbol.

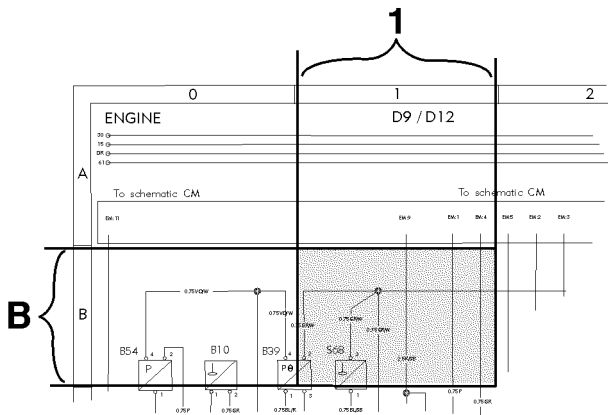


Coordinates (B 1).

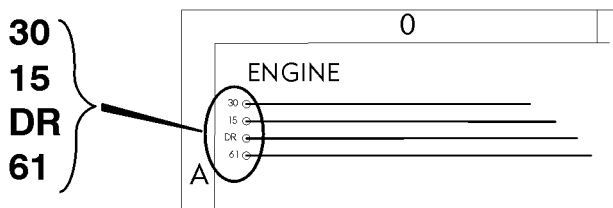


30 Voltage battery, kl.30.  
15 Voltage with starter key in drive position, kl.15.  
DR Voltage with starter key in drive position, preheat position and start position, kl.DR.  
61 Voltage when alternator charges, kl.61.

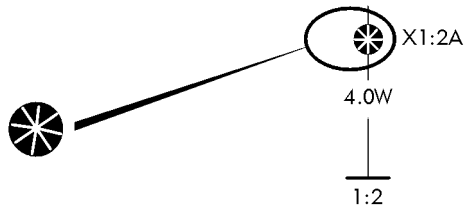

Splice.

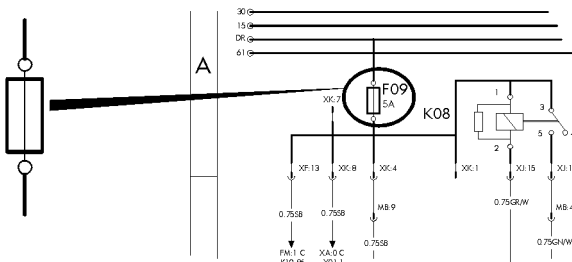

Fuse.


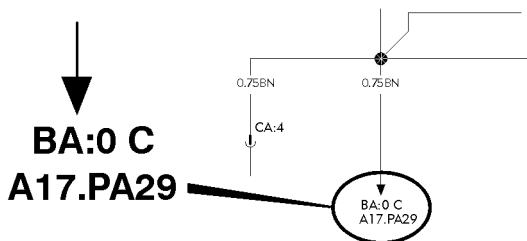


Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.


# GEARTRONIC

## I-SHIFT


## POWERTRONIC

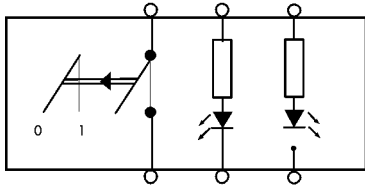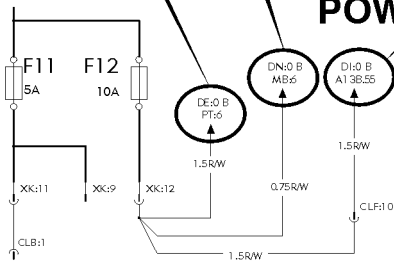


Switch.

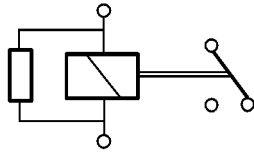


Relay.

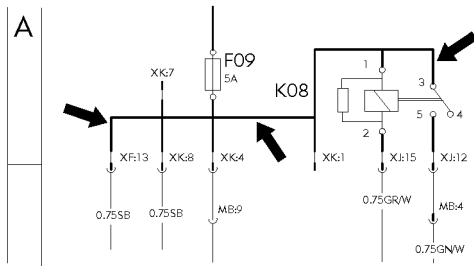


Conductor on circuit card.

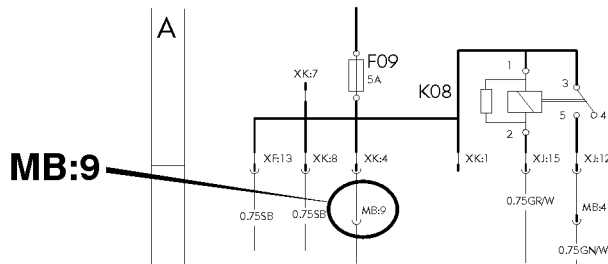

Connector MB terminal 9.

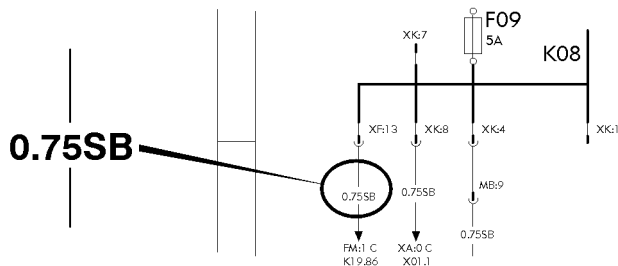


Wire area and colour.

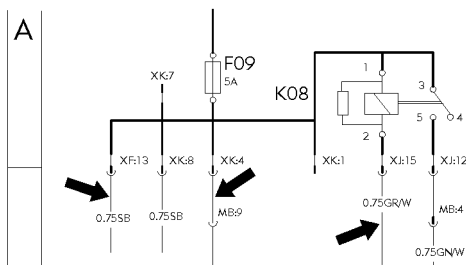


Thin lines, wires.


Earth connection point 4, earth connection 1 and wire 2.

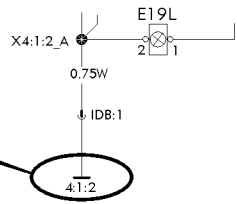


4:1:2

 


Earth connection to circuit card.

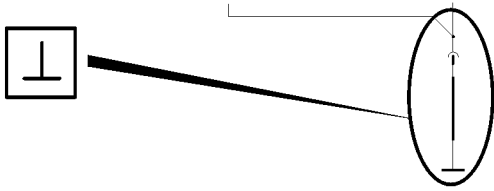

Earth connection without wire.

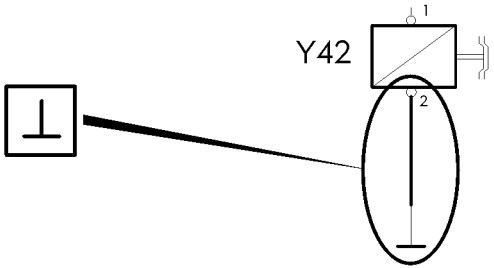

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.

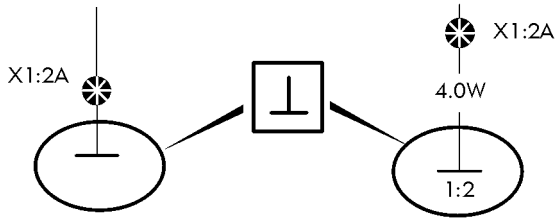

# Component wiring diagram index

<b>AA</b>	Power supply, starting system .....	page 8
<b>AE</b>	ADR, main switch .....	page 9
<b>BA</b>	Vehicle ECU .....	page 10
<b>BI</b>	Instrument cluster .....	page 11
<b>BM</b>	Tachograph in dash .....	page 12
<b>BN</b>	Tachograph in shelf .....	page 13
<b>BU</b>	Dynafleet .....	page 14
<b>CM</b>	Engine interface .....	page 15
<b>CO</b>	Engine (D9/D12) .....	page 16
<b>CP</b>	ISX functions, 12V trailer ABS converter (AUS only) .....	page 17
<b>CS</b>	Engine ISX (AUS only) .....	page 18
<b>CU</b>	Fuel filter water drain .....	page 19
<b>DB</b>	Gear selector ECU .....	page 20
<b>DE</b>	Geartronic automatic gearshift .....	page 21
<b>DI</b>	Powertronic .....	page 22
<b>DM</b>	Retarder manual gearshift .....	page 23
<b>DN</b>	I-shift .....	page 24
<b>DQ</b>	Power take off .....	page 25
<b>DU</b>	Diff-lock .....	page 26
<b>EC</b>	Trailer ABS/EBS supply .....	page 27
<b>EE</b>	ABS basic, D-version .....	page 28
<b>EI</b>	ABS/ASR D-version .....	page 29
<b>EM</b>	EBS ECU .....	page 30
<b>EN</b>	EBS modulators .....	page 31
<b>EQ</b>	ESP .....	page 32
<b>FA</b>	Air-suspension .....	page 33
<b>FG</b>	Load indikator .....	page 34
<b>FK</b>	Bogie lift A-ride .....	page 35
<b>FM</b>	Axle lock, self steered axle .....	page 36
<b>FP</b>	Hydraulic steered axle .....	page 37
<b>FQ</b>	Air dryer .....	page 38
<b>FU</b>	Central lubrication system .....	page 39
<b>GA</b>	LCM head lights .....	page 40

<b>GB</b>	LCM trailer, HL-HID .....	page 41
<b>GC</b>	LCM rear lights .....	page 42
<b>GK</b>	Trailer connections (AUS only) .....	page 43
<b>GM</b>	Wiper, washer .....	page 44
<b>GQ</b>	Horn .....	page 45
<b>GU</b>	Headlights adjust .....	page 46
<b>HG</b>	Climate unit, CU,-BAS,-MCC,-ECC .....	page 47
<b>HI</b>	Air heater .....	page 48
<b>HM</b>	Water heater .....	page 49
<b>HP</b>	Short stop cabheater .....	page 50
<b>HY</b>	Climat unit, CU,-HEAT,-ACMAN,-ACAUT. ....	page 51
<b>IA</b>	El. heated/adj. seat .....	page 52
<b>IE</b>	El. heat/adj. mirrors, El. window winders .....	page 53
<b>IF</b>	Foldable mirror bracket .....	page 54
<b>IH</b>	Interior light .....	page 55
<b>IM</b>	Central locking, immobiliser .....	page 56
<b>IQ</b>	El. sunroof, cig. lighter, refrigerator .....	page 57
<b>IR</b>	12V power supply .....	page 58
<b>IS</b>	SWM, SRS. Air-bag .....	page 59
<b>IU</b>	Radio .....	page 60
<b>IX</b>	Intergrated telephone .....	page 61
<b>IZ</b>	Backup camera .....	page 62
<b>KA</b>	Cab tilt .....	page 63
<b>KE</b>	Load light, 5:th wheel lamp .....	page 64
<b>KI</b>	Light sign .....	page 65
<b>KM</b>	Beacon warning light .....	page 66
<b>ME</b>	Extra fuse block, key switch relay .....	page 67
<b>NA</b>	Body builder (BB), auxsw-6 and swapbody .....	page 68
<b>NC</b>	Body builder (BB), ELCE-CK, BBM, PTO2 .....	page 69
<b>NI</b>	Extra spotlamps front/roof, max 4x70W .....	page 70
<b>NK</b>	Burglar alarm .....	page 71
<b>NR</b>	Body builder (BB), tipper tractor "HYDRKIT" .....	page 72
<b>NU</b>	Body builder (BB), DUAL-SPEED .....	page 73
<b>XA</b>	Bus J1708/J1587 .....	page 74
<b>XB</b>	Bus J1939 .....	page 75




# Component wiring diagrams

WIRING DIAGRAM AA

STARTING SYSTEM

POWER SUPPLY

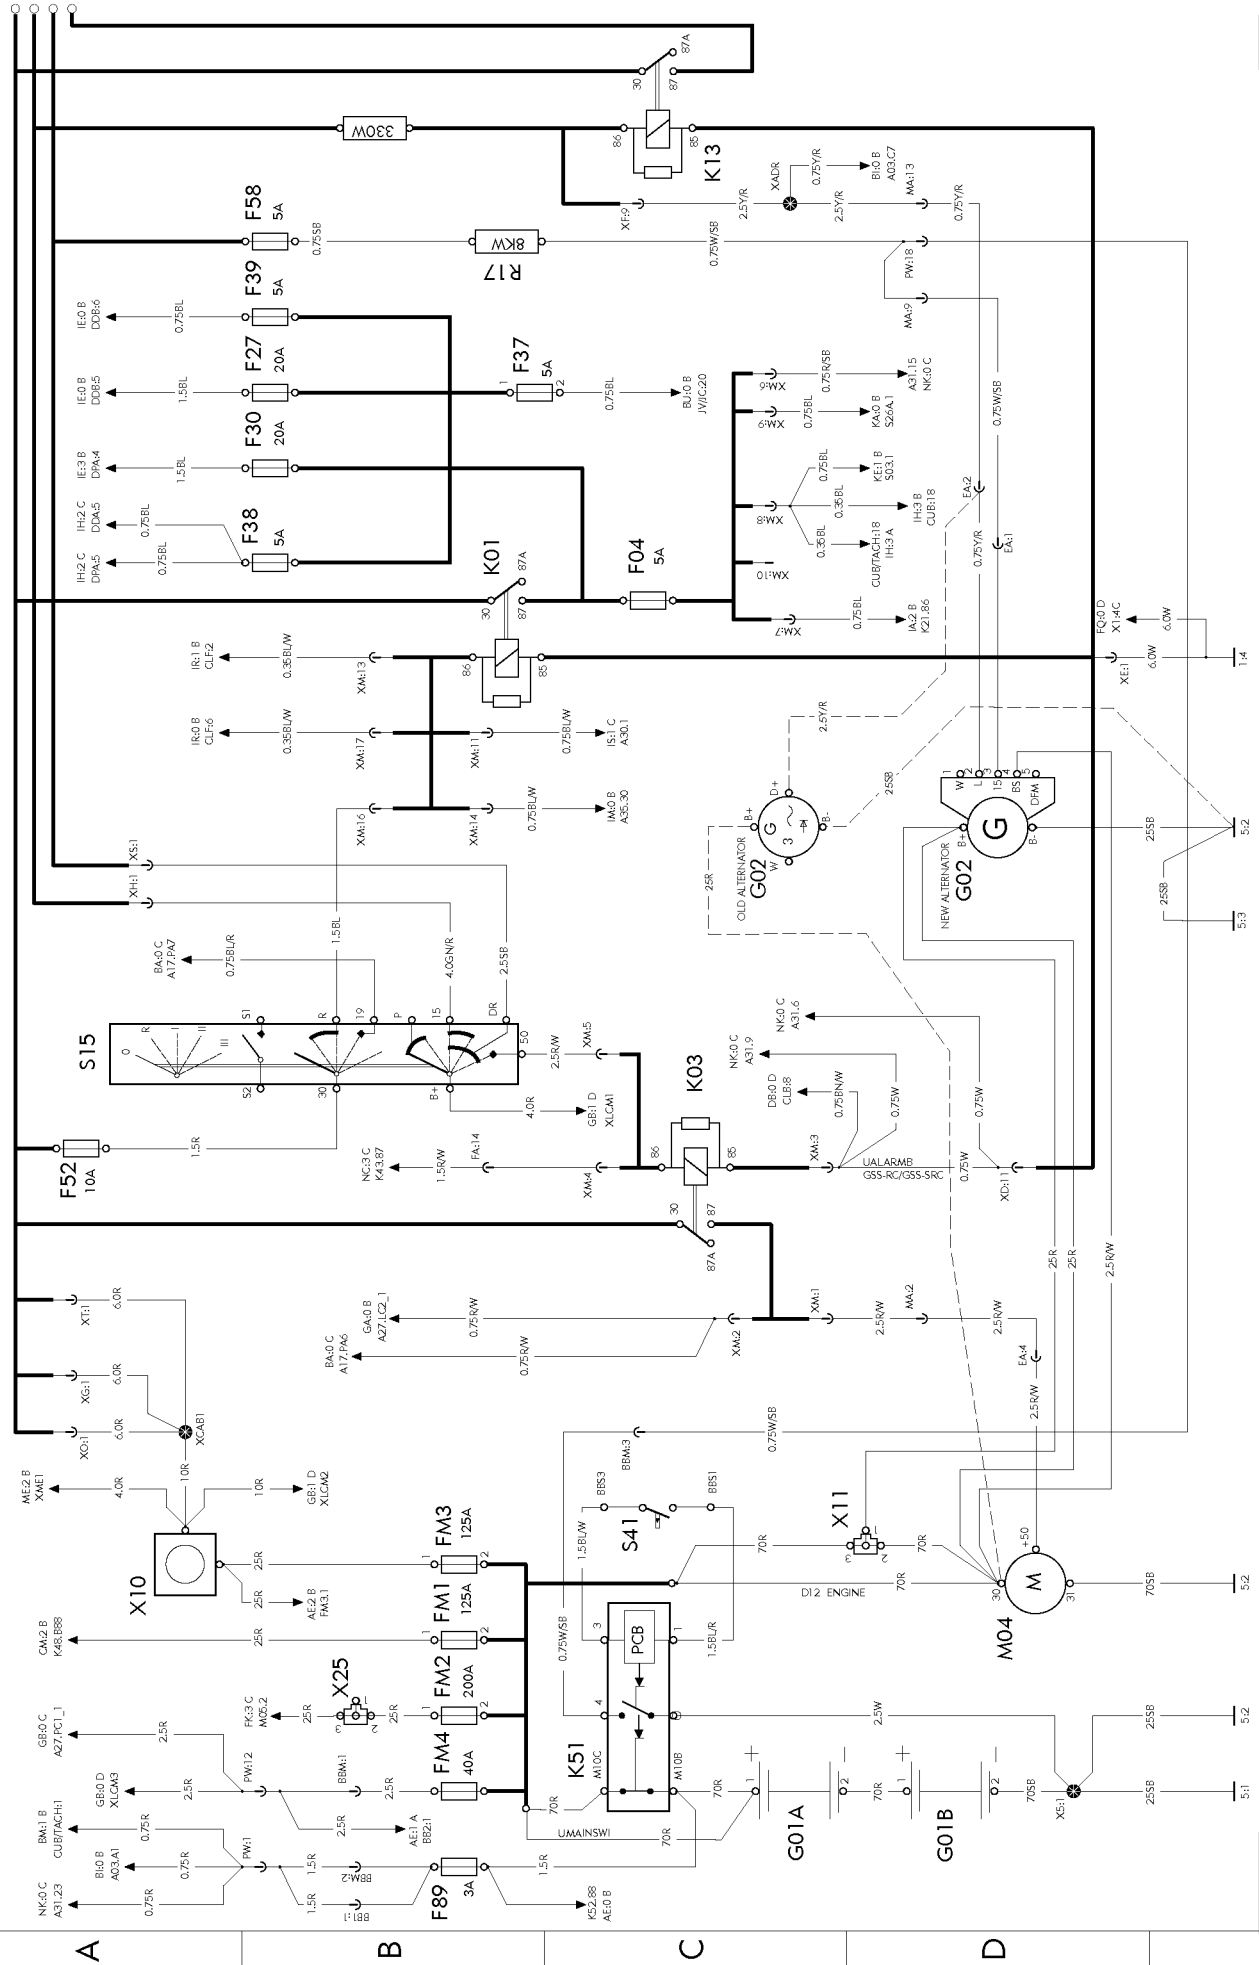

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**