


# Service Manual Trucks

Group **37**  
Release **01**

Wiring diagram  
FM9, FM12, FH12, FH16, NH12 VERSION2  
FM, FH CHID A 591628-  
FM, FH CHID B 381169-

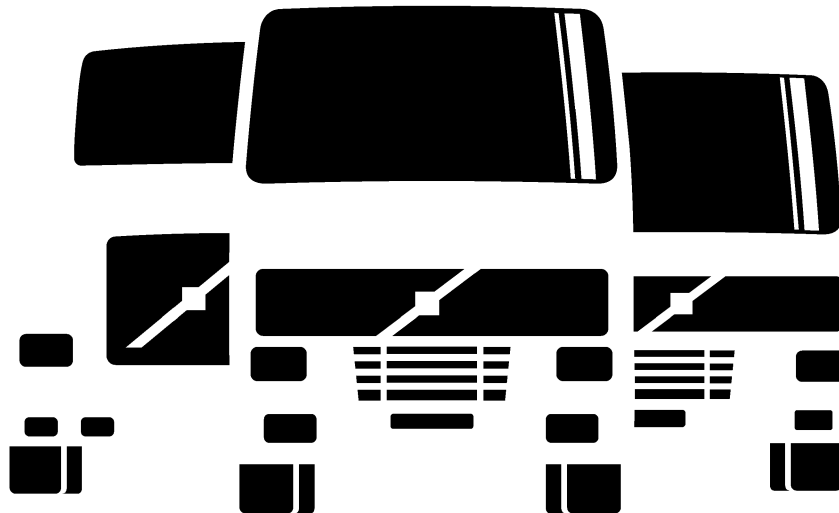

# Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to September 04.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

**Note:** Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

**Caution:** Indicates an unsafe practice where damage to the product could occur.

**Warning:** Indicates an unsafe practice where personal injury or severe damage to the product could occur.

**Danger:** Indicates an unsafe practice where serious personal injury or death could occur.

## Volvo Truck Corporation

Göteborg, Sweden

**Order number: 20014938**

© 04 Volvo Truck Corporation, Göteborg, Sweden

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.




ENG15719

# Contents

<b>Example of wiring diagram</b> .....	2
<b>Component wiring diagram index</b> .....	5
<b>Component wiring diagrams</b> .....	8
<b>Illustrations index</b> .....	88
<b>Illustrations</b> .....	89
<b>Fuses</b> .....	167
<b>Relays</b> .....	169
<b>Wiring harness illustration index</b> .....	171
<b>Earth connections</b> .....	174
List of earth connections .....	176
<b>List of connectors</b> .....	177
<b>List of components</b> .....	185
<b>Abbreviations</b> .....	191
<b>Cable colour code</b> .....	193
<b>Feedback</b>	




**GEARTRONIC**  
**I-SHIFT**  
**POWERTRONIC**

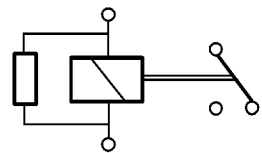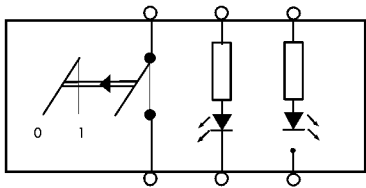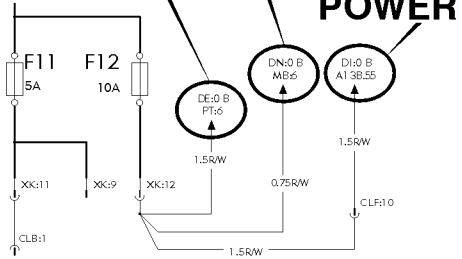


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

Switch.


Relay.

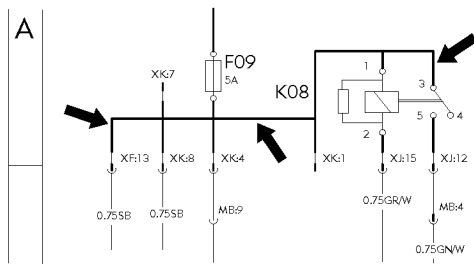


Conductor on circuit card.

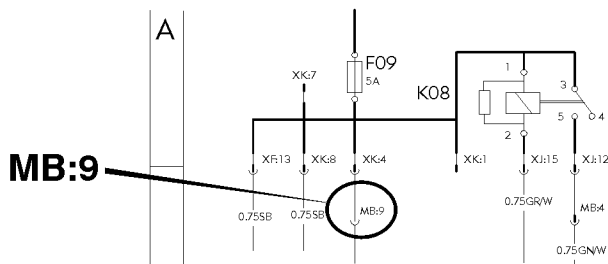


Connector MB terminal 9.

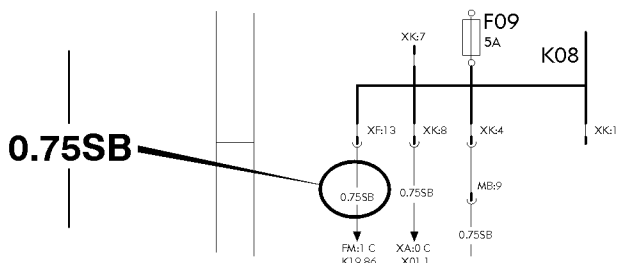

Wire area and colour.

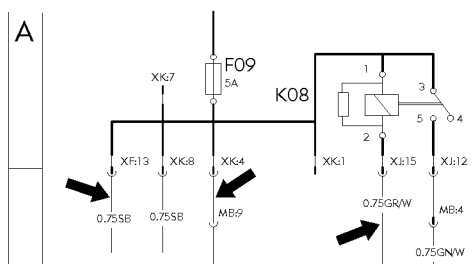

Thin lines, wires.

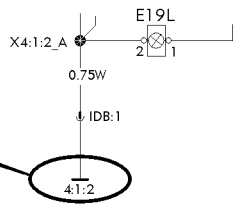


**4:1:2**


Earth connection point 4, earth connection 1 and wire 2.



Earth connection to circuit card.

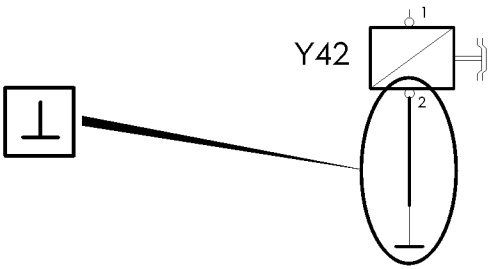

Earth connection without wire.

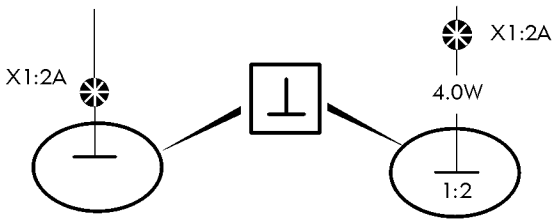

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.

# Component wiring diagram index


<b>AA</b>	Power supply, starting system .....	page 8
<b>AB</b>	Remote main switch .....	page 9
<b>AC</b>	Power distribution .....	page 10
<b>AE</b>	ADR, main switch .....	page 11
<b>BA</b>	Vehicle ECU .....	page 12
<b>BE</b>	ACC Adaptive cruise control .....	page 13
<b>BI</b>	Instrument cluster .....	page 14
<b>BM</b>	Tachograph in dash .....	page 15
<b>BN</b>	Tachograph in shelf .....	page 16
<b>BU</b>	Dynafleet .....	page 17
<b>BX</b>	FMS Gateway .....	page 18
<b>BY</b>	Volvo link (VERS-SAM) .....	page 19
<b>CM</b>	Engine interface .....	page 20
<b>CO</b>	Engine D9 .....	page 21
	Engine D12 .....	page 22
	Engine D16 .....	page 23
<b>CP</b>	ISX functions, 12V trailer ABS converter (AUS only) .....	page 24
<b>CS</b>	Engine ISX (AUS only) .....	page 25
<b>CU</b>	Fuel filter water drain .....	page 26
<b>DB</b>	Gear selector ECU .....	page 27
<b>DE</b>	Geartronic automatic gearshift .....	page 28
<b>DI</b>	Powertronic .....	page 29
<b>DM</b>	Retarder manual gearshift .....	page 30
<b>DN</b>	I-shift .....	page 31
<b>DQ</b>	Power take off .....	page 32
<b>DU</b>	Diff-lock .....	page 33
<b>EE</b>	ABS basic, D-version .....	page 34
<b>EI</b>	ABS/ASR D-version .....	page 35
<b>EO</b>	EBS ECU .....	page 36
<b>EP</b>	EBS modulators .....	page 37
<b>FA</b>	Air-suspension .....	page 38
<b>FG</b>	Load indikator .....	page 39
<b>FI</b>	Bogie lift A-ride .....	page 40
<b>FK</b>	Bogie lift A-ride with axle load limiter .....	page 41
<b>FM</b>	Axle lock, self steered axle .....	page 42
<b>FO</b>	Electronic steered axle .....	page 43
<b>FP</b>	Hydraulic steered axle .....	page 44

<b>FQ</b>	Air dryer .....	page 45
<b>FU</b>	Central lubrication system .....	page 46
<b>GA</b>	LCM head lights .....	page 47
<b>GB</b>	LCM trailer .....	page 48
<b>GC</b>	LCM rear lights .....	page 49
<b>GE</b>	Rear lights overhang .....	page 50
<b>GF</b>	Rear lights, India/Korea .....	page 51
<b>GG</b>	Trailer connections, RIGID .....	page 52
<b>GH</b>	Trailer connections, TRACTOR .....	page 53
<b>GK</b>	Trailer connections (AUS only) .....	page 54
<b>GM</b>	Wiper, washer .....	page 55
<b>GQ</b>	Horn .....	page 56
<b>GU</b>	Headlights adjust .....	page 57
<b>HG</b>	Climate unit, CU,-BAS,-MCC,-ECC .....	page 58
<b>HI</b>	Air heater .....	page 59
<b>HM</b>	Water heater .....	page 60
<b>HP</b>	Short stop cab heater .....	page 61
<b>HY</b>	Climat unit, CU,-HEAT,-ACMAN,-ACAUT. ....	page 62
<b>HZ</b>	Air cooler, Brazil .....	page 63
<b>IA</b>	El. heated/adj. seat .....	page 64
<b>IE</b>	El. heat/adj. mirrors, El. window winders .....	page 65
<b>IF</b>	Foldable mirror bracket .....	page 66
<b>IH</b>	Interior light .....	page 67
<b>IM</b>	Central locking, immobiliser .....	page 68
<b>IQ</b>	El. sunroof, cig. lighter, refrigerator .....	page 69
<b>IR</b>	12V power supply .....	page 70
<b>IS</b>	SWM, SRS. Air-bag .....	page 71
<b>IU</b>	Radio .....	page 72
<b>IX</b>	Integrated telephone .....	page 73
<b>IZ</b>	Backup camera .....	page 74
<b>KA</b>	Cab tilt .....	page 75
<b>KE</b>	Load light, 5:th wheel lamp .....	page 76
<b>KI</b>	Light sign .....	page 77
<b>KM</b>	Beacon warning light .....	page 78
<b>ME</b>	Extra fuse block, key switch relay .....	page 79
<b>NA</b>	Body builder (BB), auxsw-6 and swapbody .....	page 80
<b>NC</b>	Body builder (BB), ELCE-CK, BBM, PTO2 .....	page 81
<b>NI</b>	Extra spotlamps front/roof, max 4x70W .....	page 82



<b>NK</b>	Burglar alarm .....	page 83
<b>NU</b>	Body builder (BB), DUAL-SPEED .....	page 84
<b>OA</b>	Tyre pressure monitoring (TPM) .....	page 85
<b>XA</b>	Bus J1708/J1587 .....	page 86
<b>XB</b>	Bus J1939 .....	page 87

# Component wiring diagrams

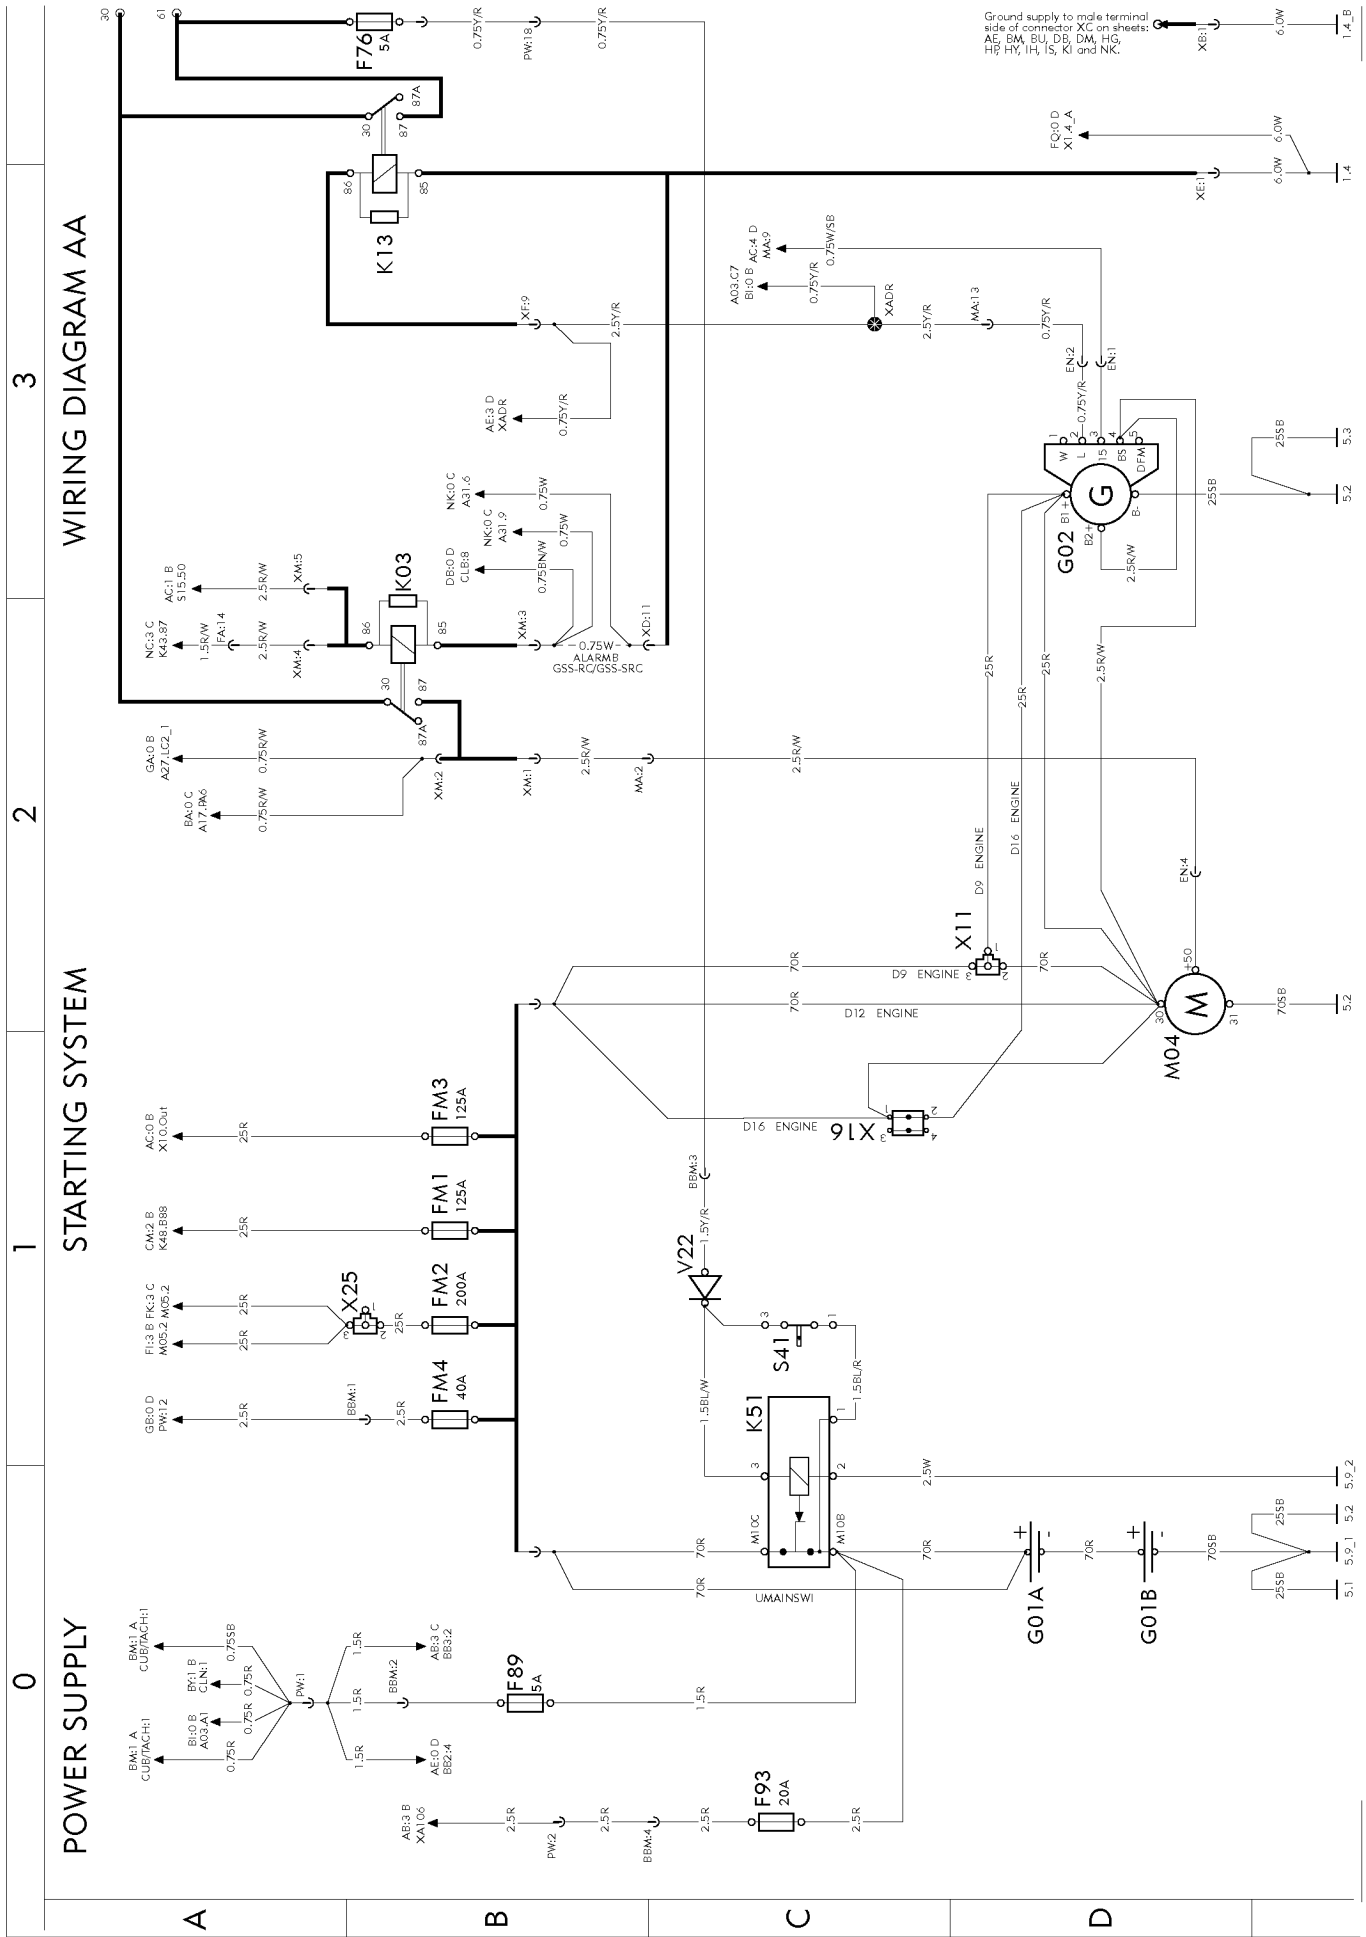

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**