

YANMAR SERVICE MANUAL

CRAWLER CARRIER

MODEL C12R(EP)

FOREWORD

This service manual outlines procedures for servicing YANMAR construction machinery. It contains specifications, servicing instructions and handling cautions. To obtain the maximum life and performance from YANMAR construction machinery, read this manual carefully and follow its instructions.

Please note that all dimensions and numerical values in this manual are for service reference, and are not inspection standards. Descriptions and specifications in this manual are subject to change without notice due to design improvements, etc.

CONTENTS

CHAPTER 1

GENERAL CAUTIONS FOR MAINTENANCE WORK

1-1 Correct Work	1-1
1-2 Safety Precautions	1-1
1-3 Preparations	1-1
1-4 Cautions for Disassembly and Reassembly	1-1
1-5 Cautions for Removal and Installation of Hydraulic Equipment	1-2
1-6 Cautions for Removal and Installation of Hydraulic Piping	1-2
1-7 Cautions for Handling Seals	1-3
1-8 Correct Installation of Hydraulic Hose	1-3
1-9 Specifications of Hydraulic Hose	1-6
1-10 Air Release Procedure for H.S.T. System	1-11

CHAPTER 2

TECHNICAL DATA

2-1 Specifications	2-1-1
2-2 Machine Dimensions	2-2-1
2-3 Hydraulic Circuit Schematic	2-3-1
2-4 Wiring Diagram	2-4-1
2-5 Weight of Components	2-5-1

CHAPTER 3

SERVICE STANDARDS

3-1 Machine Performance	3-1-1
3-2 Engine	3-2-1
3-3 Undercarriage	3-3-1
3-4 Control Devices	3-4-1
3-5 Hydraulic Cylinder	3-5-1
3-6 Work Implement	3-6-1
3-7 List of Tightening Torque	3-7-1
3-7-1 Machine	3-7-1

CHAPTER 4

ENGINE

4-1 Measurement, Inspection and Adjustment	4-1-1
4-1-1 Measuring the Compression Pressure	4-1-1
4-1-2 Adjusting the Valve Clearance	4-1-2
4-1-3 Checking the V-belt Tension	4-1-3
4-1-4 Checking the Fuel Injection Valve	4-1-3
4-1-5 Checking and Adjusting the Fuel Injection Timing	4-1-6
4-1-6 Adjusting the Maximum (or Minimum) Idling Speed	4-1-9
4-1-7 Checking the Cooling Water System and Radiator for Water Leakage	4-1-9
4-1-8 Checking the Sensors	4-1-10

4-2 Measurement Procedure, Service Data and Corrective Action.....	4-2-1
4-2-1 Cylinder Head.....	4-2-1
4-2-2 Cylinder Block	4-2-6
4-2-3 Valve Rocker Arm	4-2-8
4-2-4 Piston and Piston Rings	4-2-10
4-2-5 Connecting Rod.....	4-2-13
4-2-6 Cam Shaft	4-2-16
4-2-7 Crank Shaft	4-2-17
4-2-8 Gears.....	4-2-20
4-2-9 Trochoid Pump.....	4-2-21
4-3 Precautions for Reassembly	4-3-1
4-4 Fuel Injection System	4-4-1
4-4-1 Fuel Injection Pump.....	4-4-1
4-4-2 Fuel Injection Valve	4-4-1
4-4-3 Governor Mechanism	4-4-2
4-4-4 Specifications of Fuel Injection Pump	4-4-5
4-5 Electrical Equipment	4-5-1
4-5-1 Starter Motor	4-5-1
4-5-2 Alternator.....	4-5-2
4-5-3 Glow Plug	4-5-4

CHAPTER 5 STRUCTURE AND OPERATION

5-1 Component Parts	5-1-1
5-2 Mechanical Diagram of Power Transmission	5-2-1
5-3 Power Transmission.....	5-3-1
5-3-1 Outline of H.S.T.....	5-3-1
5-3-2 Features of H.S.T.....	5-3-1
5-4 Pulley and Velt	5-4-1
5-5 Transmission Case.....	5-5-1
5-5-1 Transmission Shaft and Gear.....	5-5-2
5-5-2 Side Clutch Hoke and Steering Brake.....	5-5-3
5-6 Track Frame	5-6-1
5-7 Idler and Track Roller	5-7-1
5-7-1 Idler, Track Roller and Carrier Roller.....	5-7-1
5-8 Hydraulic Equipment Layout	5-8-1

CHAPTER 6 HYDRAULIC EQUIPMENT

6-1 Outline	6-1-1
6-2 H.S.T.....	6-2-1
6-3 Control Valve.....	6-3-1
6-4 Pressure Measurement Procedure	6-4-1
6-4-1 H.S.T	6-4-1
6-4-2 Control Valve.....	6-4-2

CHAPTER 7 STRUCTURE AND OPERATION

7-1 Electrical Equipment of Machine	7-1-1
7-1-1 Parts Layout of Electrical Equipment	7-1-1
7-1-2 Monitor and Alarm Systems	7-1-2
7-1-3 Wiring Diagram.....	7-1-5
7-1-4 Circuit Description of Engine Start and Stop	7-1-6
7-1-5 Circuit Description of Battery Charging	7-1-7
7-2 Undercarriage	7-2-1
7-2-1 Remove and Installation of Rubber Crawler.....	7-2-1
7-2-2 Inspection and Adjustment of Rubber Crawler.....	7-2-2
7-2-3 Disassembly and Reassembly of Idler	7-2-3
7-2-4 Disassembly and Reassembly of Track Roller (Carrier Roller).....	7-2-4
7-3 Control Equipment	7-3-1
7-3-1 Structure and Comportment Parts.....	7-3-1
7-3-2 Inspection and Adjustment of Travel Pedal.....	7-3-9
7-3-3 Checking and Adjusting the Brake Pedal	7-3-12
7-3-4 Inspection and Adjustment of Parking Brake	7-3-13
7-3-5 Inspection and Adjustment of F/R Lever	7-3-14
7-3-6 Inspection and Adjustment of Accelerator Lever.....	7-3-15
7-3-7 Adjustment Procedure for Travel Speed Select Lever	7-3-16
7-4 Power Transmission.....	7-4-1
7-4-1 Removal and Reinstallation of Engine	7-4-1
7-4-2 Transmission	7-4-5
7-4-3 Replacement of Drive Belt.....	7-4-14
7-5 Hydraulic Equipment	7-5-1
7-5-1 Hydraulic Cylinder	7-5-1
7-5-2 Hydraulic Oil Tank	7-5-3
7-5-3 Hydraulic Piping	7-5-5
7-6 Wagon	7-6-1

CHAPTER 8 PERIODIC INSPECTION AND SERVICING

8-1 List of Periodic Inspection and Servicing.....	8-1
--	-----

CHAPTER 9 FUEL, LUBE OIL AND GREASE RECOMMENDED

9. Fuel, Lube Oil and Grease Recommended	9-1
--	-----

CHAPTER 10 TROUBLESHOOTING

10-1 Troubleshooting	10-1-1
10-1-1 Machine and Engine.....	10-1-1
10-1-2 H.S.T.	10-1-9

CHAPTER 1

GENERAL CAUTIONS FOR MAINTENANCE WORK

1-1 Correct Work.....	1-1
1-2 Safety Precautions.....	1-1
1-3 Preparations	1-1
1-4 Cautions for Disassembly and Reassembly	1-1
1-5 Cautions for Removal and Installation of Hydraulic Equipment.....	1-2
1-6 Cautions for Removal and Installation of Hydraulic Piping	1-2
1-7 Cautions for Handling Seals	1-3
1-8 Correct Installation of Hydraulic Hose	1-3
1-9 Specifications of Hydraulic Hose	1-6
1-10 Air Release Procedure for H.S.T. System	1-11

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com