

YANMAR ***SERVICE MANUAL***

CRAWLER CARRIER

MODEL C30R-2

YANMAR SERVICE MANUAL

MODEL
C30R-2

FOREWORD

This service manual outlines procedures for servicing YANMAR construction machinery. It contains specifications, servicing instructions and handling cautions. To obtain the maximum life and performance from YANMAR construction machinery, read this manual carefully and follow its instructions.

Please note that all dimensions and numerical values in this manual are for service reference, and are not inspection standards. Descriptions and specifications in this manual are subject to change without notice due to design improvements, etc.

WARNING

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

WARNING

California Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.

Wash hands after handling.

CONTENTS

CHAPTER 1

GENERAL CAUTIONS FOR MAINTENANCE WORK

1-1 Correct Work	1-1
1-2 Safety Precautions	1-1
1-3 Preparations	1-1
1-4 Cautions for Disassembly and Reassembly	1-1
1-5 Cautions for Removal and Installation of Hydraulic Equipment	1-2
1-6 Cautions for Removal and Installation of Hydraulic Piping	1-2
1-7 Cautions for Handling Seals	1-3
1-8 Correct Installation of Hydraulic Hose	1-3
1-9 Specifications of Hydraulic Hose	1-6
1-10 Air Release Procedure for H.S.T. System	1-11

CHAPTER 2

TECHNICAL DATA

2-1 Specifications	2-1-1
2-2 Machine Dimensions	2-2-1
2-3 Power Transmission Mechanical Diagram	2-3-1
2-4 Hydraulic Circuit Diagram	2-4-1
2-5 Electric Wiring Diagram	2-5-1
2-6 Weight of Components	2-6-1

CHAPTER 3

SERVICE STANDARDS

3-1 Machine Performance	3-1-1
3-2 Engine	3-2-1
3-3 Power Train Equipment	3-3-1
3-4 Undercarriage	3-4-1
3-5 Control Devices	3-5-1
3-6 Hydraulic Cylinder	3-6-1
3-7 Work Implement	3-7-1
3-8 List of Tightening Torque	3-8-1
3-8-1 Machine	3-8-1
3-8-2 Engine	3-8-3
3-8-3 Tightening Torque for General Bolts and Nuts	3-8-3

CHAPTER 4

ENGINE

4-1 General	4-1-1
4-1-1 How to Read This Manual	4-1-1
4-1-2 Precautions for Service Work	4-1-3
4-1-3 Engine External Views	4-1-4
4-1-4 Structural Description	4-1-4
4-1-5 Exhaust Gas Emission Regulation	4-1-5
4-2 Troubleshooting	4-2-1
4-2-1 Quick Reference Table for Troubleshooting	4-2-1
4-2-2 Troubleshooting by Measuring Compression Pressure	4-2-4

4-3 Inspection and Adjustment.....	4-3-1
4-3-1 Oil Inspection.....	4-3-1
4-3-2 Cooling Water Inspection	4-3-1
4-3-3 Inspecting Water Leak from Cooling Water System and Radiator	4-3-1
4-3-4 Fan Belt Tension Inspection and Adjustment.....	4-3-2
4-3-5 Adjusting the Valve Clearance	4-3-3
4-3-6 Inspecting the Fuel Injection Valve Injection Pressure and Spray Pattern.....	4-3-5
4-3-7 Fuel Injection Timing Adjustment / Fuel Injection Pump Inspection and Adjustment	4-3-9
4-3-8 Sensor Inspection.....	4-3-12
4-3-9 Battery Inspection.....	4-3-13
4-3-10 Adjusting Operation.....	4-3-15
4-3-11 Long Storage.....	4-3-16
4-3-12 Periodic Maintenance Schedule.....	4-3-17
4-4 Engine Body.....	4-4-1
4-4-1 Introduction.....	4-4-1
4-4-2 Cylinder Head.....	4-4-2
4-4-3 Gear Train and Camshaft.....	4-4-11
4-4-4 Cylinder Block	4-4-16
4-5 Lubrication System.....	4-5-1
4-5-1 Lubrication System Diagram	4-5-1
4-5-2 Trochoid Pump Components.....	4-5-1
4-5-3 Disassembly (Reverse the Procedure Below for Assembly)	4-5-1
4-5-4 Servicing Points.....	4-5-2
4-5-5 Parts Inspection and Measurement.....	4-5-2
4-6 Cooling System	4-6-1
4-6-1 Cooling Water System.....	4-6-1
4-6-2 Cooling Water Pump Components.....	4-6-1
4-6-3 Disassembly (Reverse the Procedure Below for Assembly)	4-6-2
4-6-4 Servicing Points.....	4-6-2
4-7 Fuel Injection Pump / Governor.....	4-7-1
4-7-1 Introduction.....	4-7-1
4-7-2 Fuel Injection Pump.....	4-7-1
4-8 Starting motor.....	4-8-1
4-8-1 Specifications	4-8-1
4-8-2 Configuration Drawing.....	4-8-2
4-8-3 Troubleshooting.....	4-8-3
4-8-4 Component Names and Disassembly Procedure	4-8-4
4-8-5 Disassembly Procedure	4-8-5
4-8-6 Inspection and Maintenance	4-8-7
4-8-7 Assembly.....	4-8-11
4-8-8 Adjustment	4-8-12
4-8-9 Service Standards	4-8-13
4-9 Alternator.....	4-9-1
4-9-1 Components	4-9-1
4-9-2 Specifications	4-9-2
4-9-3 Connection Diagram.....	4-9-2
4-9-4 Standard Performance Curve.....	4-9-3

CHAPTER 5

STRUCTURE AND OPERATION

5-1 Component Parts	5-1-1
5-2 Power Transmission Mechanism	5-2-1
5-3 Structure of Transmission	5-3-1
5-4 Steering Mechanism	5-4-1
5-5 Auxiliary Equipment for Brake	5-5-1
5-6 Engine Start/Stop Circuit.....	5-6-1
5-7 Charge/Generation Circuit.....	5-7-1
5-8 Hydraulic Equipment Layout	5-8-1

CHAPTER 6

HYDRAULIC EQUIPMENT

6-1 Outline.....	6-1-1
6-2 H.S.T.	6-2-1
6-2-1 Piston Pump	6-2-1
6-2-2 Charge (Gear) Pump	6-2-29
6-2-3 Piston Motor	6-2-30
6-2-4 Troubleshooting.....	6-2-49
6-3 Control Valve.....	6-3-1
6-4 Flow Divider	6-4-1
6-5 Pressure Adjustment.....	6-5-1
6-5-1 Relief Valve	6-5-1
6-5-2 H.S.T.	6-5-2
6-5-3 Steering Clutch and Brake	6-5-3
6-5-4 Control Valve.....	6-5-4

CHAPTER 7

ADJUSTMENT AND REPAIR

7-1 Electric Equipment of Vehicle.....	7-1-1
7-1-1 Wiring and Parts Layout	7-1-1
7-1-2 Monitor and Alarm System	7-1-3
7-2 Undercarriage	7-2-1
7-2-1 Removal and Installation of Rubber Crawler.....	7-2-1
7-2-2 Disassembly and Reassembly of Idler and Grease Adjuster	7-2-3
7-2-3 Disassembly and Reassembly of Carrier Roller	7-2-8
7-2-4 Disassembly and Reassembly of Track Roller.....	7-2-11
7-3 Controls.....	7-3-1
7-3-1 Assembly of Brake System	7-3-1
7-3-2 Assembly of Inching Wire.....	7-3-3
7-3-3 Assembly of Foot Accelerator	7-3-5
7-3-4 Assembly of Steering Lever, F/R Lever and Dump Lever	7-3-6
7-3-5 Inspection and Adjustment of Foot Accelerator.....	7-3-11
7-3-6 Inspection and Adjustment of Brake System.....	7-3-12
7-3-7 Inspection and Adjustment of Parking Brake	7-3-13

7-4 Power Transmission.....	7-4-1
7-4-1 Removal and Installation of Engine.....	7-4-1
7-4-2 Removal and Installation of Brake (Clutch) Assembly	7-4-5
7-4-3 Removal and Installation of Transmission.....	7-4-8
7-4-4 Disassembly and Reassembly of Transmission	7-4-15
7-4-5 Final Case	7-4-28
7-5 Hydraulic Equipment	7-5-1
7-5-1 Removal and Installation of Steering Valve and Flow Divider.....	7-5-1
7-5-2 Removal and Installation of H.S.T. (Hydraulic Pump and Motor).....	7-5-4
7-5-3 Hydraulic Cylinder	7-5-8
7-5-4 Hydraulic Oil Tank.....	7-5-10
7-5-5 Hydraulic Piping	7-5-12
7-6 Wagon.....	7-6-1

CHAPTER 8

PERIODIC INSPECTION AND SERVICING

8-1 List of Periodic Inspection and Servicing.....	8-1
--	-----

CHAPTER 9

FUEL, LUBE OIL AND GREASE RECOMMENDED

9. Fuel, Lube Oil and Grease Recommended	9-1
--	-----

CHAPTER 10

TROUBLESHOOTING

10-1 Non-breakdowns	10-1-1
10-2 Precautions for H.S.T. Troubleshooting	10-2-1
10-3 Troubleshooting	10-3-1
10-3-1 Machine and Engine.....	10-3-1
10-3-2 Electrical Equipment on Panel	10-3-12

GENERAL CAUTIONS FOR MAINTENANCE WORK

- 1-1 Correct Work..... 1-1
- 1-2 Safety Precautions..... 1-1
- 1-3 Preparations 1-1
- 1-4 Cautions for Disassembly and Reassembly 1-1
- 1-5 Cautions for Removal and Installation of Hydraulic Equipment 1-2
- 1-6 Cautions for Removal and Installation of Hydraulic Piping 1-2
- 1-7 Cautions for Handling Seals 1-3
- 1-8 Correct Installation of Hydraulic Hose 1-3
- 1-9 Specifications of Hydraulic Hose 1-6
- 1-10 Air Release Procedure for H.S.T. System 1-11

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com