

YANMAR[®] ***SERVICE MANUAL***

EXCAVATOR

MODEL *SV100*

YANMAR[®] SERVICE MANUAL

MODEL

SV1000

FOREWORD

This service manual outlines procedures for servicing YANMAR construction machinery. It contains specifications, servicing instructions and handling cautions. To obtain the maximum life and performance from YANMAR construction machinery, read this manual carefully and follow its instructions.

Please note that all dimensions and numerical values in this manual are for service reference, and are not inspection standards. Descriptions and specifications in this manual are subject to change without notice due to design improvements, etc.

WARNING

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

WARNING

California Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.

Wash hands after handling.

CONTENTS

CHAPTER 1

GENERAL CAUTIONS FOR MAINTENANCE WORK

1-1 Correct Work	1-1
1-2 Safety Precautions	1-1
1-3 Preparations	1-1
1-4 Cautions for Disassembly and Reassembly	1-1
1-5 Cautions for Removal and Installation of Hydraulic Equipment	1-2
1-6 Cautions for Removal and Installation of Hydraulic Piping	1-2
1-7 Cautions for Handling Seals	1-3
1-8 Correct Installation of Hydraulic Hose	1-3
1-9 Specifications of Hydraulic Hose	1-6
1-10 Air Release of Hydraulic Equipment	1-11

CHAPTER 2

TECHNICAL DATA

2-1 Specifications	2-1-1
2-2 Outline Drawing and Working Area	2-2-1
2-2-1 Quick coupler	2-2-1
2-2-2 W/O Quick coupler	2-2-2
2-3 Weight List of Main Parts	2-3-1
2-4 Lifting Capacity List	2-4-1
2-4-1 SV100	2-4-1

CHAPTER 3

SERVICE STANDARDS

3-1 Machine Performance	3-1-1
3-2 Engine	3-2-1
3-3 Undercarriage	3-3-1
3-3-1 Rubber Crawler Specifications	3-3-1
3-3-2 Steel Crawler Specifications	3-3-2
3-3-3 Common Specifications of Steel & Rubber Crawlers	3-3-3
3-4 Controls	3-4-1
3-5 Hydraulic Equipment	3-5-1
3-5-1 Hydraulic Cylinders	3-5-1
3-6 Implement	3-6-1
3-6-1 Front Attachments (Quick Coupler Type)	3-6-1
3-6-2 Blade Moving Device	3-6-2
3-6-3 Bucket Teeth	3-6-2
3-7 List of Tightening Torque	3-7-1
3-7-1 Machine	3-7-1
3-7-2 Engine	3-7-4
3-7-3 Tightening Torque for General Bolts and Nuts	3-7-4

CHAPTER 4

ENGINE

4-1 General	4-1-1
4-1-1 How to Read This Manual	4-1-1
4-1-2 Precautions for Service Work	4-1-3
4-1-3 Engine External Views	4-1-4
4-1-4 Structural Description	4-1-4
4-1-5 Exhaust Gas Emission Regulation	4-1-5
4-2 Troubleshooting	4-2-1
4-2-1 Quick Reference Table for Troubleshooting	4-2-1
4-2-2 Troubleshooting by Measuring Compression Pressure	4-2-4
4-3 Inspection and Adjustment	4-3-1
4-3-1 Oil Inspection	4-3-1
4-3-2 Cooling Water Inspection	4-3-1
4-3-3 Inspecting Water Leak from Cooling Water System and Radiator	4-3-1
4-3-4 Fan Belt Tension Inspection and Adjustment	4-3-2
4-3-5 Adjusting the Valve Clearance	4-3-3
4-3-6 Inspecting the Fuel Injection Valve Injection Pressure and Spray Pattern	4-3-5
4-3-7 Fuel Injection Timing Adjustment / Fuel Injection Pump Inspection and Adjustment	4-3-9
4-3-8 Sensor Inspection	4-3-12
4-3-9 Battery Inspection	4-3-13
4-3-10 Adjusting Operation	4-3-15
4-3-11 Long Storage	4-3-16
4-3-12 Periodic Maintenance Schedule	4-3-17
4-4 Engine Body	4-4-1
4-4-1 Introduction	4-4-1
4-4-2 Cylinder Head	4-4-2
4-4-3 Gear Train and Camshaft	4-4-10
4-4-4 Cylinder Block	4-4-15
4-5 Lubrication System	4-5-1
4-5-1 Lubrication System Diagram	4-5-1
4-5-2 Trochoid Pump Components	4-5-1
4-5-3 Disassembly (Reverse the Procedure Below for Assembly)	4-5-2
4-5-4 Servicing Points	4-5-2
4-5-5 Parts Inspection and Measurement	4-5-2
4-6 Cooling System	4-6-1
4-6-1 Cooling Water System	4-6-1
4-6-2 Cooling Water Pump Components	4-6-1
4-6-3 Disassembly (Reverse the Procedure Below for Assembly)	4-6-2
4-6-4 Servicing Points	4-6-2
4-7 Fuel Injection Pump / Governor	4-7-1
4-7-1 Introduction	4-7-1
4-7-2 Fuel Injection Pump	4-7-1

4-8 Turbocharger : Disassembly, Inspection and Reassembly	4-8-1
4-8-1 Structure and Functions	4-8-1
4-8-2 Service Standards and Tightening Torque	4-8-4
4-8-3 Periodic Inspection Procedure	4-8-5
4-8-4 Disassembly Procedure	4-8-9
4-8-5 Washing and Inspection procedure	4-8-12
4-8-6 Reassembly Procedure	4-8-16
4-8-7 Handling after Disassembly and Reassembly	4-8-19
4-8-8 Troubleshooting	4-8-20
4-9 Starting motor	4-9-1
4-9-1 Specifications	4-9-1
4-9-2 Configuration Drawing	4-9-2
4-9-3 Troubleshooting	4-9-3
4-9-4 Component Names and Disassembly Procedure	4-9-4
4-9-5 Disassembly Procedure	4-9-5
4-9-6 Inspection and Maintenance	4-9-7
4-9-7 Assembly	4-9-11
4-9-8 Adjustment	4-9-12
4-9-9 Service Standards	4-9-13
4-10 Alternator	4-10-1
4-10-1 Specifications	4-10-1
4-10-2 Section View	4-10-2
4-10-3 Troubleshooting	4-10-3
4-10-4 Parts Names and Disassembly Procedure	4-10-4
4-10-5 Inspection and Overhaul	4-10-7
4-10-6 Assembly	4-10-11
4-10-7 Service Standards	4-10-12
4-10-8 Performance Test	4-10-13
4-11 Special Service Tools	4-11-1
4-11-1 Special Tools	4-11-1
4-11-2 Measuring Instruments	4-11-3
4-12 Service Standards	4-12-1
4-12-1 Engine Turning	4-12-1
4-12-2 Engine Body	4-12-2
4-12-3 Lubricating Oil System (Trochoid Pump)	4-12-6
4-12-4 Tightening Torques for Main Parts	4-12-7

CHAPTER 5

HYDRAULIC SYSTEM

5-1 Outline (Quick Coupler Type)	5-1-1
5-1-1 Control Valve Operation	5-1-3
5-1-2 Additional Operation of Control Valve	5-1-4
5-2 Hydraulic Circuit Schematic	5-2-1

5-3 Circuit Operation	5-3-1
5-3-1 Boom	5-3-1
5-3-2 Arm	5-3-2
5-3-3 Bucket	5-3-3
5-3-4 Swing	5-3-4
5-3-5 Boom Swing	5-3-5
5-3-6 Blade	5-3-6
5-3-7 Travel	5-3-7
5-3-8 Non-deviation Travel (with Boom, Arm, Bucket or Boom Swing Operation)	5-3-8
5-3-9 Simultaneous Operation of Boom Up and Arm Retract	5-3-9
5-3-10 Simultaneous Operation of Boom Up and Bucket	5-3-10
5-3-11 Simultaneous Operation of Boom Up and Swing	5-3-11
5-3-12 Simultaneous Operation of Arm and Bucket	5-3-12
5-3-13 Hydraulic P.T.O.	5-3-13
5-3-14 Travel Alarm	5-3-14
5-3-15 Quick Coupler	5-3-15
5-3-16 2nd P.T.O.	5-3-16
5-4 Pressure Adjustment	5-4-1
5-4-1 Relief Valves	5-4-1
5-4-2 Swing Brake Valve	5-4-3
5-4-3 Cut-off Valve	5-4-4

CHAPTER 6

HYDRAULIC EQUIPMENT

6-1 Hydraulic Pump	6-1-1
6-2 Control Valve	6-2-1
6-2-1 Hydraulic Circuit Schematic and Parts Name	6-2-1
6-2-2 Operation of Each Spool Section	6-2-2
6-2-3 Relief Valves	6-2-27
6-3 Pilot Valve	6-3-1
6-4 Swing Motor	6-4-1
6-5 Travel Motor	6-5-1
6-5-1 Specifications	6-5-1
6-5-2 Model Labeling	6-5-1
6-5-3 External Dimensions	6-5-2
6-5-4 Basic Configuration and Drawing	6-5-3
6-5-5 Operating Description	6-5-6
6-5-6 Troubleshooting	6-5-12
6-5-7 Disassembly	6-5-14
6-5-8 Service Preparations	6-5-31
6-5-9 Assembly	6-5-33
6-5-10 Performance Confirmation Test	6-5-48
6-5-11 Clearance Adjustment Parts Dimensions Table	6-5-49
6-6 Pilot Check Valve (Quick Coupler Type)	6-6-1

CHAPTER 7

ADJUSTMENT AND REPAIR

7-1 Electric Equipment of the Machine.....	7-1-1
7-1-1 Parts Layout of Electrical Equipment	7-1-1
7-1-2 Monitor and Alarm Systems	7-1-4
7-1-3 Wiring Diagram.....	7-1-7
7-1-4 Stop Motor Operation	7-1-9
7-1-5 Removal and Reinstallation of Engine	7-1-11
7-1-6 Removal and Reinstallation of Starter Motor.....	7-1-21
7-1-7 Removal and Reinstallation of Radiator	7-1-22
7-1-8 Removal and Reinstallation of Fan Belt and Compressor Driving Belt	7-1-25
7-1-9 Removal and Reinstallation of Fuel Injection Pump.....	7-1-26
7-2 Undercarriage	7-2-1
7-2-1 Outline	7-2-1
7-2-2 Compatibility of Main Parts.....	7-2-1
7-2-3 Points of Reassembly (Rubber Crawler Type).....	7-2-2
7-2-4 Points of Reassembly (Steel Crawler Type).....	7-2-3
7-2-5 Removal and Reinstallation of Crawler	7-2-4
7-2-6 Disassembly and Reassembly of Steel Crawler.....	7-2-7
7-2-7 Disassembly and Reassembly of Front Idler.....	7-2-9
7-2-8 Disassembly and Reassembly of Track Roller	7-2-11
7-2-9 Installation of Floating Seal	7-2-13
7-2-10 Disassembly and Reassembly of Carrier Roller.....	7-2-14
7-3 Controls	7-3-1
7-3-1 Control Train.....	7-3-1
7-3-2 Mechanical Control Linkage	7-3-2
7-3-3 Adjustment of Travel Levers.....	7-3-4
7-3-4 Adjustment of Boom Swing Pedal	7-3-5
7-3-5 Adjustment of Blade Lever	7-3-5
7-3-6 Adjustment of Lock Lever.....	7-3-6
7-3-7 Adjustment Procedure of P.T.O. Pedal	7-3-7
7-3-8 Adjustment Procedure of P.T.O. Pedal Lock.....	7-3-7
7-3-9 Adjustment of Accelerator Lever	7-3-8
7-4 Swing Bearing	7-4-1
7-4-1 Removal and Reinstallation of Swing Bearing	7-4-1
7-5 Hydraulic Equipment	7-5-1
7-5-1 Removal and Reinstallation of Hydraulic Pump	7-5-1
7-5-2 Removal and Reinstallation of Control Valve	7-5-5
7-5-3 Removal and Reinstallation of Swing Motor.....	7-5-8
7-5-4 Removal and Reinstallation of Swivel Joint.....	7-5-10
7-5-5 Disassembly and Reassembly of Swivel Joint	7-5-13
7-5-6 Disassembly and Reassembly of Hydraulic Cylinders	7-5-16
7-5-7 Hydraulic Oil Tank	7-5-20
7-5-8 Piping Layout.....	7-5-26

7-6 Implement	7-6-1
7-6-1 Removal and Reinstallation of Implement.....	7-6-1
7-6-2 Quick Coupler.....	7-6-9
7-7 Air Conditioner	7-7-1
7-7-1 Removal and Reinstallation of Air Conditioner.....	7-7-1

CHAPTER 8

PERIODIC INSPECTION AND SERVICING

8-1 List of Periodic Inspection and Servicing.....	8-1
--	-----

CHAPTER 9

FUEL, LUBE OIL AND GREASE RECOMMENDED

9. Fuel, Lube Oil and Grease Recommended.....	9-1
---	-----

CHAPTER 10

TROUBLESHOOTING

10-1 Non-breakdowns	10-1-1
10-1-1 Natural Release of Bucket.....	10-1-1
10-1-2 Discontinuous Arm Movement	10-1-1
10-1-3 Thermal Shock of Travel Motor	10-1-2
10-1-4 Elongation of Boom Swing Cylinder on 68 degrees Swing	10-1-3
10-1-5 Time Lag on Travel Speed Switching.....	10-1-4
10-1-6 Fluctuation in Oil Level of Hydraulic Oil Tank due to Temperature Change	10-1-5
10-1-7 Operation of Quick Coupler Cylinder.....	10-1-6
10-2 Troubleshooting	10-2-1
10-2-1 Machine and Engine.....	10-2-1
10-2-2 Electrical Equipment on Panel	10-2-23

CHAPTER 11

REFERENCE DATA

11-1 Specifications for Attachment.....	11-1
---	------

GENERAL CAUTIONS FOR MAINTENANCE WORK

1-1 Correct Work.....	1-1
1-2 Safety Precautions.....	1-1
1-3 Preparations	1-1
1-4 Cautions for Disassembly and Reassembly	1-1
1-5 Cautions for Removal and Installation of Hydraulic Equipment	1-2
1-6 Cautions for Removal and Installation of Hydraulic Piping	1-2
1-7 Cautions for Handling Seals	1-3
1-8 Correct Installation of Hydraulic Hose	1-3
1-9 Specifications of Hydraulic Hose	1-6
1-10 Air Release of Hydraulic Equipment	1-11

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com