

YANMAR

SERVICE MANUAL

EXCAVATOR

MODEL *SV₁₅/SV₁₇(EX)*

YANMAR SERVICE MANUAL

**MODEL
5V17 (EX)**

FOREWORD

This service manual outlines procedures for servicing YANMAR construction machinery. It contains specifications, servicing instructions and handling cautions. To obtain the maximum life and performance from YANMAR construction machinery, read this manual carefully and follow its instructions.

Please note that all dimensions and numerical values in this manual are for service reference, and are not inspection standards. Descriptions and specifications in this manual are subject to change without notice due to design improvements, etc.

CONTENTS

CHAPTER 1

GENERAL CAUTIONS FOR MAINTENANCE WORK

1-1 Correct Work	1-1
1-2 Safety Precautions	1-1
1-3 Preparations	1-1
1-4 Cautions for Disassembly and Reassembly	1-1
1-5 Cautions for Removal and Installation of Hydraulic Equipment	1-2
1-6 Cautions for Removal and Installation of Hydraulic Piping	1-2
1-7 Cautions for Handling Seals	1-3
1-8 Correct Installation of Hydraulic Hose	1-3
1-9 Specifications of Hydraulic Hose	1-6
1-10 Air Release of Hydraulic Equipment	1-11

CHAPTER 2

TECHNICAL DATA

2-1 Specifications	2-1-1
2-2 Outline Drawing and Working Area	2-2-1
2-3 Weight List of Main Parts	2-3-1
2-4 Lifting Capacity List	2-4-1

CHAPTER 3

SERVICE STANDARDS

3-1 Machine Performance	3-1-1
3-2 Engine	3-2-1
3-3 Undercarriage	3-3-1
3-3-1 Rubber Crawler Specifications	3-3-1
3-4 Controls	3-4-1
3-5 Hydraulic Equipment	3-5-1
3-5-1 Hydraulic Cylinders	3-5-1
3-6 Implement	3-6-1
3-6-1 Front Attachments	3-6-1
3-6-2 Blade Moving Device	3-6-2
3-6-3 Bucket Teeth	3-6-2
3-7 List of Tightening Torque	3-7-1
3-7-1 Machine	3-7-1
3-7-2 Engine	3-7-3
3-7-3 Tightening Torque for General Bolts and Nuts	3-7-3

CHAPTER 4

ENGINE

4-1 General	4-1-1
4-1-1 Engine External Views	4-1-1
4-1-2 Exhaust Gas Emission Regulation	4-1-2
4-2 Measurement, Inspection and Adjustment	4-2-1
4-2-1 Measuring the Compression Pressure	4-2-1
4-2-2 Adjusting the Valve Clearance	4-2-2
4-2-3 Checking the V-belt Tension	4-2-3

4-2-4 Checking the Fuel Injection Valve	4-2-3
4-2-5 Checking and adjusting the Fuel Injection Timing	4-2-5
4-2-6 Adjusting the Maximum (or Minimum) Idling Speed.....	4-2-7
4-2-7 Checking the Cooling Water System and Radiator for Water Leakage	4-2-7
4-2-8 Checking the Sensors	4-2-8
4-3 Measurement Procedure, Service Data and Corrective Action.....	4-3-1
4-3-1 Cylinder Head.....	4-3-1
4-3-2 Cylinder Block	4-3-6
4-3-3 Valve Rocker Arm	4-3-8
4-3-4 Piston and Piston Rings	4-3-10
4-3-5 Connecting Rod.....	4-3-13
4-3-6 Cam Shaft	4-3-16
4-3-7 Crank Shaft	4-3-17
4-3-8 Gears.....	4-3-20
4-3-9 Trochoid Pump	4-3-21
4-4 Precautions for Reassembly	4-4-1
4-5 Fuel Injection Pump / Governor.....	4-5-1
4-5-1 Introduction.....	4-5-1
4-5-2 Fuel Injection Pump.....	4-5-1

CHAPTER 6 HYDRAULIC EQUIPMENT

6-1 Hydraulic Pump	6-1-1
6-1-1 SV15.....	6-1-1
6-1-2 SV17(EX)	6-1-16
6-2 Control Valve.....	6-2-1
6-3 Pilot Valve	6-3-1
6-4 Swing Motor	6-4-1
6-5 Travel Motor	6-5-1
6-5-1 SV15.....	6-5-1
6-5-2 SV17(EX)	6-5-24

CHAPTER 7 ADJUSTMENT AND REPAIR

7-1 Electric Equipment of Machine	7-1-1
7-1-1 Parts Layout of Electrical Equipment	7-1-1
7-1-2 Monitor and Alarm Systems	7-1-2
7-1-3 Wiring Diagram.....	7-1-5
7-1-4 Circuit Description of Engine Start and Stop, and Battery Charging	7-1-6
7-1-5 Removal and Reinstallation of Engine	7-1-8
7-1-6 Removal and Reinstallation of Starter Motor.....	7-1-15
7-1-7 Removal and Reinstallation of Fuel Injection Pump.....	7-1-16
7-1-8 Removal and Reinstallation of Fuel Tank.....	7-1-18
7-1-9 Removal and Reinstallation of Radiator	7-1-21

7-2 Undercarriage	7-2-1
7-2-1 Outline	7-2-1
7-2-2 Points of Reassembly.....	7-2-2
7-2-3 Crawler Tension Adjustment Procedure.....	7-2-3
7-2-4 Removal and Reinstallation of Crawler	7-2-4
7-2-5 Disassembly and Reassembly of Idler	7-2-5
7-2-6 Disassembly and Reassembly of Track Roller.....	7-2-7
7-2-7 Removal and Reinstallation of Track Gauge Change Cylinder	7-2-9
7-3 Controls	7-3-1
7-3-1 Control Train.....	7-3-1
7-3-2 Mechanical Control Linkage	7-3-2
7-3-3 Adjustment of Travel Levers.....	7-3-4
7-3-4 Adjustment of Boom Swing Pedal	7-3-5
7-3-5 Adjustment of Blade Lever (Track Gauge Change Lever)	7-3-5
7-3-6 Adjustment of Lock Lever Switch	7-3-6
7-3-7 Adjustment of Accelerator Lever	7-3-7
7-3-8 Adjustment of P.T.O. Pedal.....	7-3-8
7-4 Swing Bearing	7-4-1
7-5 Hydraulic Equipment	7-5-1
7-5-1 Removal and Reinstallation of Hydraulic Pump	7-5-1
7-5-2 Removal and Reinstallation of Control Valve	7-5-4
7-5-3 Removal and Reinstallation of Swing Motor.....	7-5-7
7-5-4 Removal and Reinstallation of Swivel Joint.....	7-5-10
7-5-5 Disassembly and Reassembly of Swivel Joint	7-5-13
7-5-6 Disassembly and Reassembly of Hydraulic Cylinders	7-5-16
7-5-7 Hydraulic Oil Tank	7-5-20
7-5-8 Piping Layout.....	7-5-24
7-6 Implement	7-6-1
7-6-1 Removal and Reinstallation of Implement.....	7-6-1

CHAPTER 8 PERIODIC INSPECTION AND SERVICING

8-1 List of Periodic Inspection and Servicing.....	8-1
--	-----

CHAPTER 9 FUEL, LUBE OIL AND GREASE RECOMMENDED

9. Fuel, Lube Oil and Grease Recommended	9-1
--	-----

CHAPTER 10 TROUBLESHOOTING

10-1 Non-Breakdowns.....	10-1-1
10-1-1 Natural Release of Bucket.....	10-1-1
10-1-2 Discontinuous Arm Movement	10-1-1
10-1-3 Drifting of Upperstructure on Quick Travel Operation	10-1-2
10-1-4 Thermal Shock of Travel Motor	10-1-3
10-1-5 Time Lag on Travel Speed Switching.....	10-1-4
10-1-6 Fluctuation in Oil Level of Hydraulic Oil Tank Due to Temperature Change.....	10-1-5

10-2 Troubleshooting	10-2-1
10-2-1 Machine and Engine.....	10-2-1
10-2-2 Electrical Equipment on Panel	10-2-22

CHAPTER 11 REFERENCE DATA

11-1 Specifications for Attachment.....	11-1
---	------

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com