 


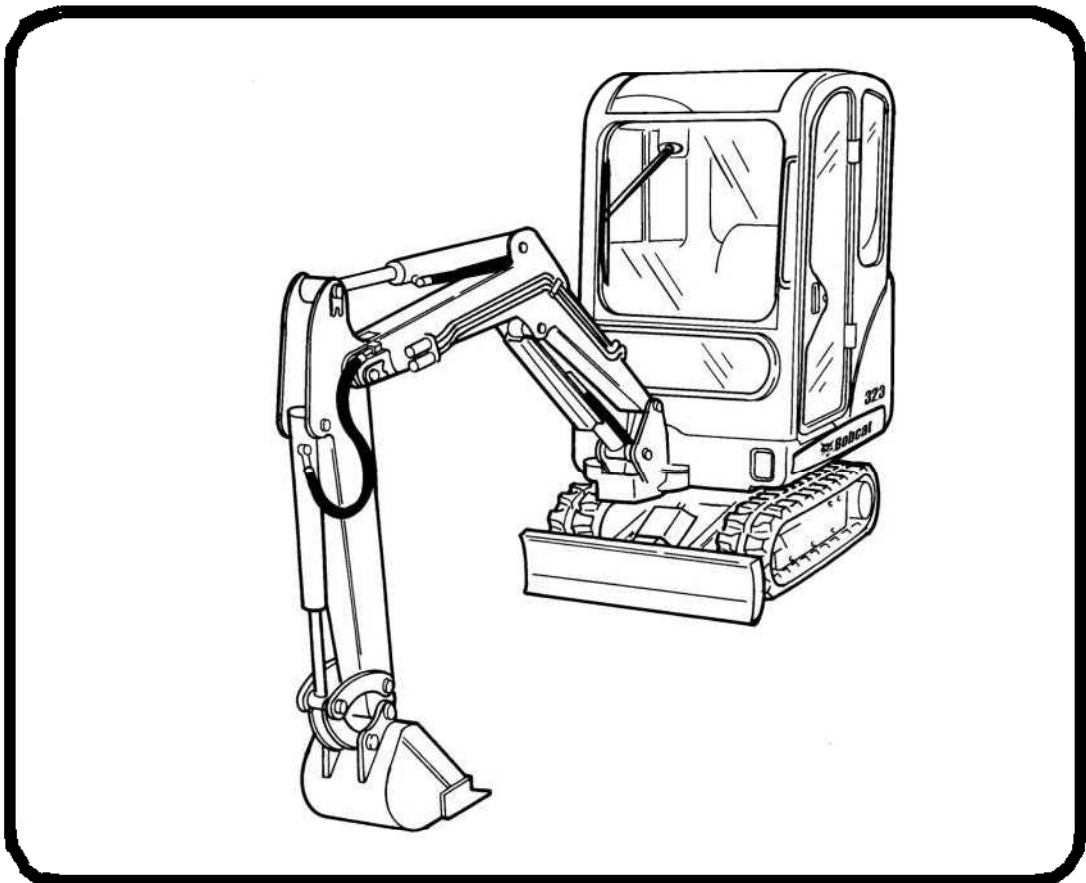

Bobcat®

Service Manual 323 Compact Excavator

S/N A9JZ11001 & Above



MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
CORRECT



B-10731A

- ⚠ Never service the Bobcat Compact Excavator without instructions.


CORRECT

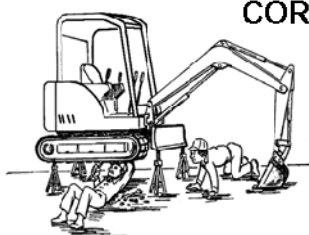

B-19964

- ⚠ Use the correct procedure to lift and support the excavator.

 
CORRECT

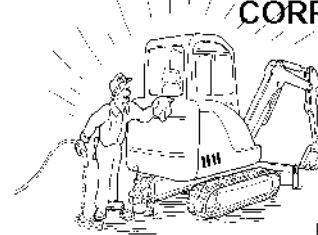

B-19959

- ⚠ Cleaning and maintenance are required daily.

 
WRONG

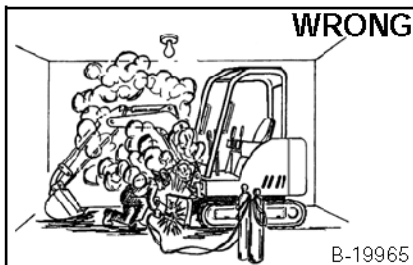

B-19965

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

 
WRONG

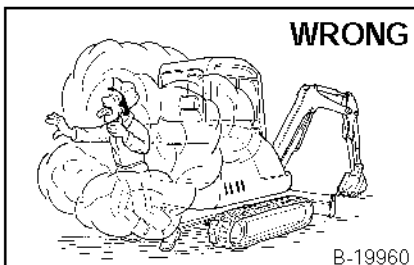

B-19960

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

 
WRONG

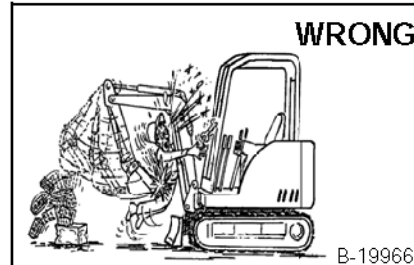

B-19966

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

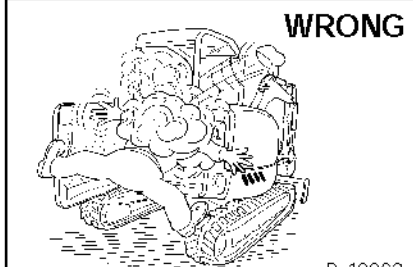

B-19962

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

 WRONG

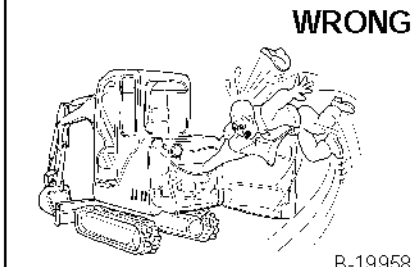

B-19958

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

WRONG



B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0805



ALPHABETICAL INDEX

AIR CLEANER	60-01	LEFT CONSOLE	40-01
AIRCLEANER SERVICE	10-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
ALTERNATOR	50-01	LEFT PEDAL	40-01
ALTERNATOR BELT	10-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
ARM	40-01	LIFTING THE EXCAVATOR	10-01
ARM CYLINDER	20-01	LIGHTS.....	50-01
		LUBRICATION OF THE HYD. EXCAVATOR.....	10-01
BATTERY.....	50-01		
BLADE	30-01	MAIN RELIEF VALVE	20-01
BLADE CONTROL.....	40-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
BLADE CYLINDER	20-01	MICROSWITCH	50-01
BLADE EXTENSION TRAY	40-01		
BLADE/TRACK EXPANSION SOLENOID BLOCK	20-01	OIL COOLER.....	20-01
BOOM.....	40-01	OPERATOR CAB (ROPS/TOPS)	10-01
BOOM CYLINDER.....	20-01		
BOOM SWING CYLINDER.....	20-01	PORT RELIEF VALVES.....	20-01
BUCKET	40-01	PRESSURE REDUCING VALVE.....	20-01
BUCKET CYLINDER	20-01		
		RADIATOR	60-01
CAB.....	40-01	RECONDITIONING THE ENGINE	60-01
CONTROL CONSOLE LOCKOUTS	10-01	RIGHT CONSOLE	40-01
CONTROL LINKAGE ASSEMBLY.....	40-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
CONTROL PATTERN SELECTOR VALVE.....	20-01	RIGHT PEDAL AND LINKAGE	40-01
CONVERSIONS	SPEC-01	ROPS CANOPY.....	40-01
CROSSPORT RELIEF VALVES	20-01		
		SEAT AND SEAT MOUNT	40-01
ELECTRICAL SYSTEM.....	50-01	SEAT BELT.....	10-01
ENGINE	60-01	SERVICE SCHEDULE	10-01
ENGINE COMPONENTS AND TESTING	60-01	SPARK ARRESTOR MUFFLER.....	10-01 & 60-01
ENGINE COOLING SYSTEM.....	10-01	SPECIFICATIONS	SPEC-01
ENGINE FLYWHEEL	60-01	STARTER	50-01
ENGINE LUBRICATION SYSTEM.....	10-01	SWING CIRCLE GEAR	30-01
ENGINE SPECIFICATIONS.....	SPEC-01	SWING FRAME	40-01
ENGINE SPEED CONTROL	40-01	SLEW LOCK.....	40-01
		SWING MOTOR	20-01
FLOORMAT AND FLOORPLATES.....	40-01	SWIVEL JOINT	20-01
FUEL, COOLANT AND LUBRICANTS	SPEC-01		
FUEL LEVEL SENDER.....	50-01	TAILGATE	40-01
FUEL SYSTEM	10-01	TORQUE SPECIFICATIONS	SPEC-01
FUEL TANK.....	40-01	TRACK DAMAGE IDENTIFICATION.....	30-01
		TRACK FRAME	30-01
HEATER AIR FILTERS	10-01	TRACK IDLER.....	30-01
HEATER.....	70-01	TRACK FRAME EXPANSION CYLINDER.....	20-01
HORN	40-01	TRACK ROLLER	30-01
HYDRAULIC CONNECTION SPECIFICATIONS	SPEC-01	TRACKS	30-01
HYDRAULIC CONTROL VALVE	20-01	TRANSPORTING THE EXCAVATOR.....	10-01
HYDRAULIC FILTER MOUNT	20-01	TRAVEL CONTROLS	40-01
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01	TRAVEL MOTOR.....	10-01 & 20-01
HYDRAULIC PUMP.....	20-01	TROUBLESHOOTING	60-01
HYDRAULIC PUMP STARTUP	20-01	TWO SPEED SWITCH	50-01
HYDRAULIC RESERVOIR	20-01	TWO-SPEED BOOST SWITCH	50-01
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01	UPPERSTRUCTURE	40-01
		UPPERSTRUCTURE SLEW LOCK	10-01

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com