

 
**331
331E
334**



Bobcat®

Service Manual

**331 - S/N 234311001 - 234312999
331E - S/N 234411001 - 234411999
334 - S/N 234511001 - 234512999
(G Series)**

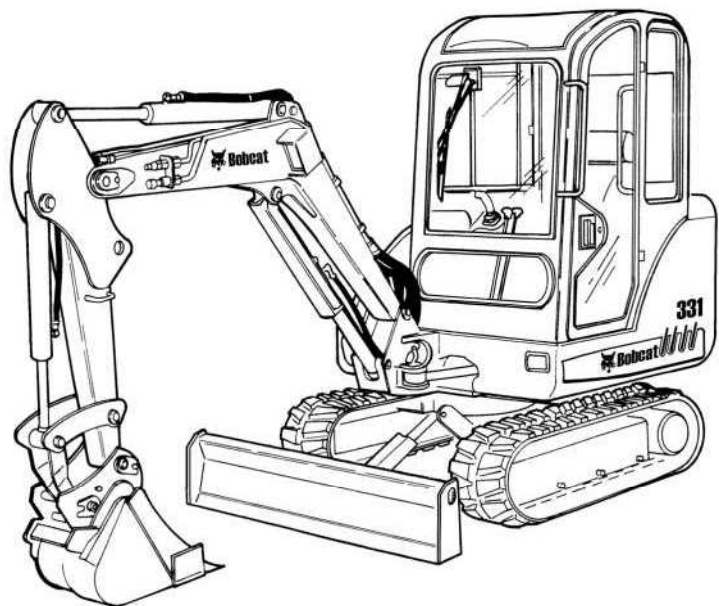

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

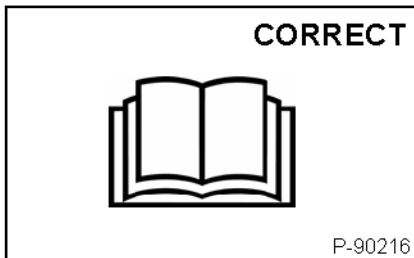

 
⚠ Never service the Bobcat Excavator without instructions.

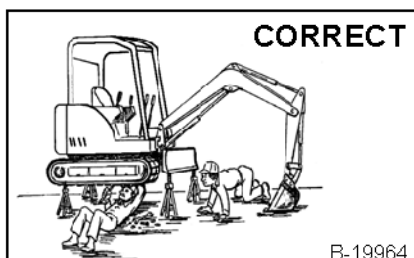

 
⚠ Use the correct procedure to lift and support the excavator.

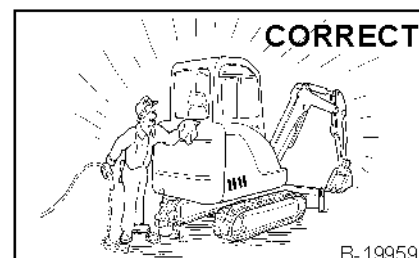

 
⚠ Cleaning and maintenance are required daily.

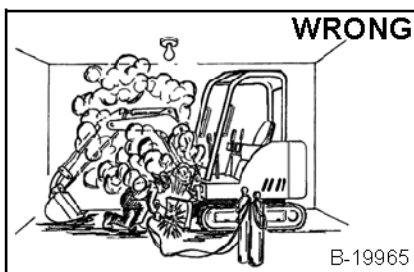


⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

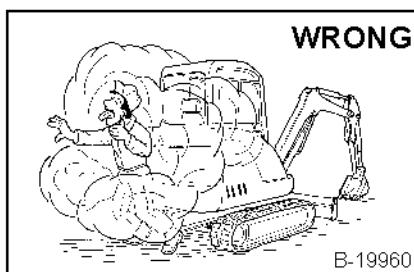

 
⚠ Vent exhaust to outside when engine must be run for service.
⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

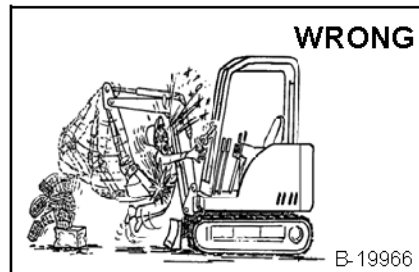

 
⚠ Always lower the bucket and blade to the ground before doing any maintenance.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

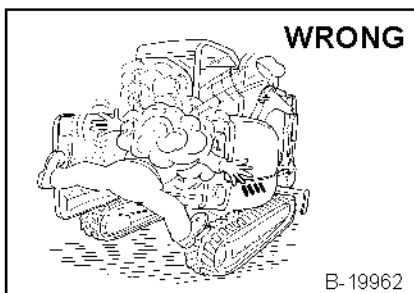

 ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

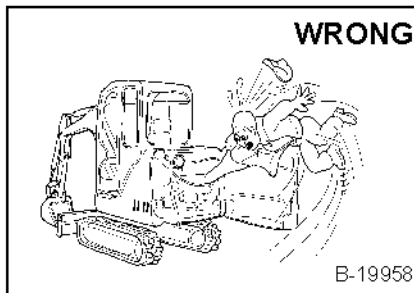

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

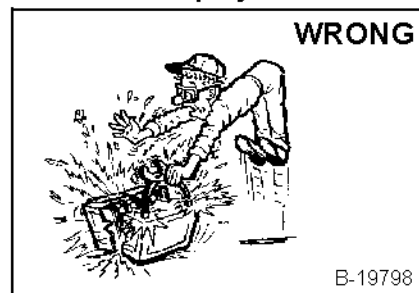 

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact.
⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409



Bobcat®

ALPHABETICAL INDEX

| | | | |
|--------------------------------------|--------------|--|--------------|
| AIR CLEANER | 10-01, 60-01 | GENERAL AIR CONDITIONING SERVICE | 70-01 |
| AIR CONDITIONING SERVICE | 70-01 | HEATER A/C FAN | 70-01 |
| AIR CONDITIONING SYSTEM FLOW | 70-01 | HEATER COIL | 70-01 |
| ALTERNATOR | 50-01 | HEATER AIR FILTER (WITH CAB OPTION ONLY) | 10-01 |
| ARM CYLINDER | 20-01 | HEATER VALVE | 70-01 |
| BASIC TROUBLESHOOTING | 70-01 | HORN | 40-01 |
| BATTERY | 50-01 | HYDRAULIC CONTROL VALVE | 20-01 |
| BLADE | 30-01 | HYDRAULIC CONNECTION SPECS | SPEC-01 |
| BLADE CONTROL | 40-01 | HYDRAULIC FLUID SPECIFICATIONS | SPEC-01 |
| BLADE CYLINDER | 20-01 | HYDRAULIC FILTER MOUNT | 20-01 |
| BOOM | 40-01 | HYDRAULIC PUMP | 20-01 |
| BOOM CYLINDER | 20-01 | HYDRAULIC RESERVOIR | 20-01 |
| BOOM SWING CYLINDER | 20-01 | HYDRAULIC SYSTEM | 10-01 |
| BUCKET | 40-01 | HYDRAULIC SYSTEM INFORMATION | 20-01 |
| BUCKET CYLINDER | 20-01 | LEFT CONTROL LEVER (JOYSTICK) | 20-01 |
| BUILD UP VALVE | 20-01 | LEFT CONSOLE | 40-01 |
| CAB | 40-01 | LIFTING AND BLOCKING THE EXCAVATOR | 10-01 |
| CASE DRAIN FILTER | 20-01 | LIFTING THE EXCAVATOR | 10-01 |
| CLAMP | 40-01 | LIGHTS | 50-01 |
| CLAMP CYLINDER | 20-01 | LUBRICATION OF THE HYDRAULIC EXCAVATOR | 10-01 |
| COMPONENTS | 70-01 | MAIN RELIEF VALVES | 20-01 |
| COMPRESSOR | 70-01 | MANIFOLD ASSEMBLY/ACCUMULATOR | 20-01 |
| CONDENSOR | 70-01 | OIL COOLER | 20-01 |
| CONVERSIONS | SPEC-01 | OPERATOR CAB (ROPS/TOPS) | 10-01 |
| CONTROL PATTERN SELECTOR VALVE | 20-01 | PORT RELIEF VALVES | 20-01 |
| COOLING SYSTEM | 10-01 | PRESSURE REDUCING VALVE | 20-01 |
| CROSS PORT RELIEF VALVES | 20-01 | PRESSURE RELIEF VALVE | 70-01 |
| DIAGNOSTICS SERVICE CODES | 50-01 | PRESSURE SWITCH | 70-01 |
| DIRECT TO TANK VALVE | 20-01 | RADIATOR | 60-01 |
| ELECTRICAL SYSTEM INFORMATION | 50-01 | RECEIVER/DRIER | 70-01 |
| ENGINE | 60-01 | RECONDITIONING THE ENGINE | 60-01 |
| ENGINE ACCESSORY DRIVE BELT | 10-01 | REGULAR MAINTENANCE | 70-01 |
| ENGINE COMPONENTS AND TESTING | 60-01 | RIGHT CONTROL LEVER (JOYSTICK) | 20-01 |
| ENGINE FLYWHEEL | 60-01 | RIGHT CONSOLE | 40-01 |
| ENGINE LUBRICATION SYSTEM | 10-01 | RIGHT PEDAL AND LINKAGE | 40-01 |
| ENGINE SPECIFICATIONS | SPEC-01 | RIGHT SIDE COVER | 10-01, 40-01 |
| ENGINE SPEED CONTROL | 40-01 | ROPS CANOPY | 40-01 |
| EXTENDIBLE ARM | 40-01 | | |
| EVAPORATOR | 70-01 | | |
| EVAPORATOR/HEATER UNIT | 70-01 | | |
| EXPANSION VALVE | 70-01 | | |
| EXTENDIBLE ARM CYLINDER | 20-01 | | |
| FLOOR MAT AND FLOOR PLATE | 40-01 | | |
| FUEL, COOLANT AND LUBRICANTS | SPEC-01 | | |
| FUEL LEVEL SENDER | 50-01 | | |
| FUEL SYSTEM | 10-01 | | |
| FUEL TANK | 40-01 | | |

Continued On Next Page

ALPHABETICAL INDEX (CONT'D)

| | |
|---------------------------------------|--------------|
| SAFETY | 70-01 |
| SEAT AND SEAT MOUNT | 40-01 |
| SEAT BELT | 10-01 |
| SERVICE SCHEDULE | 10-01 |
| SPARK ARRESTOR MUFFLER | 10-01, 60-01 |
| SPECIFICATIONS | SPEC-01 |
| STANDARD AND LONG ARM | 40-01 |
| STARTER | 50-01 |
| SWING CIRCLE GEAR | 30-01 |
| SWING FRAME | 40-01 |
| SWING MOTOR | 20-01 |
| SWING MOTOR DRIVE CARRIER | 20-01 |
| SWIVEL JOINT | 20-01 |
| SYSTEM CHARGING AND RECLAMATION | 70-01 |
| SYSTEM TROUBLESHOOTING CHART | 70-01 |
| | |
| TAILGATE | 10-01, 40-01 |
| TEMPERATURE/PRESSURE | 70-01 |
| THERMOSTAT | 70-01 |
| TORQUE SPECIFICATIONS | SPEC-01 |
| TRACK DAMAGE IDENTIFICATION | 30-01 |
| TRACK FRAME | 30-01 |
| TRACK IDLER | 30-01 |
| TRACK ROLLER | 30-01 |
| TRACKS | 30-01 |
| TRANSPORTING THE EXCAVATOR | 10-01 |
| TRAVEL CONTROLS | 40-01 |
| TRAVEL MOTOR | 10-01, 20-01 |
| TROUBLESHOOTING | 60-01 |
| TWO SPEED SWITCH | 50-01 |
| | |
| UPPERSTRUCTURE | 40-01 |
| UPPERSTRUCTURE SLEW LOCK | 10-01 |
| | |
| X-CHANGE TM | 40-01 |

CONTENTS

| | |
|--|---------|
| FOREWORD..... | III |
| SAFETY INSTRUCTIONS | VI |
| SERIAL NUMBER LOCATIONS..... | XI |
| DELIVERY REPORT..... | XII |
| BOBCAT EXCAVATOR IDENTIFICATION | XIII |
| SAFETY AND MAINTENANCE..... | 10-01 |
| HYDRAULIC SYSTEM..... | 20-01 |
| UNDERCARRIAGE..... | 30-01 |
| UPPERSTRUCTURE & SWING SECTION | 40-01 |
| ELECTRICAL SYSTEM AND ANALYSIS..... | 50-01 |
| ENGINE SERVICE | 60-01 |
| HEATING, VENTILATION, AIR CONDITIONING | 70-01 |
| SPECIFICATIONS..... | SPEC-01 |

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

UNDERCARRIAGE

**UPPERSTRUCTURE
& SWING
SECTION**

**ELECTRICAL
SYSTEM AND
ANALYSIS**

**ENGINE
SERVICE**

**HEATING,
VENTILATION,
AIR CONDITIONING**

SPECIFICATIONS

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com