
Perkins 100 Series

Models 102-05, 103-07, 103-10, 103-13, 103-15, 104-19,
104-22

WORKSHOP MANUAL

102-05 **Two cylinder diesel engines**

103-07 **Three cylinder diesel engines**
103-10
103-13
103-15

104-19 **Four cylinder diesel engines**
104-22

Publication TPD 1377E, Issue 4

© Proprietary information of Perkins Engines Company Limited, all rights reserved.


The information is correct at the time of print.

Published in September 2003 by Technical Publications.

PERKINS
100
SERIES

Perkins
Engines

WORKSHOP MANUAL

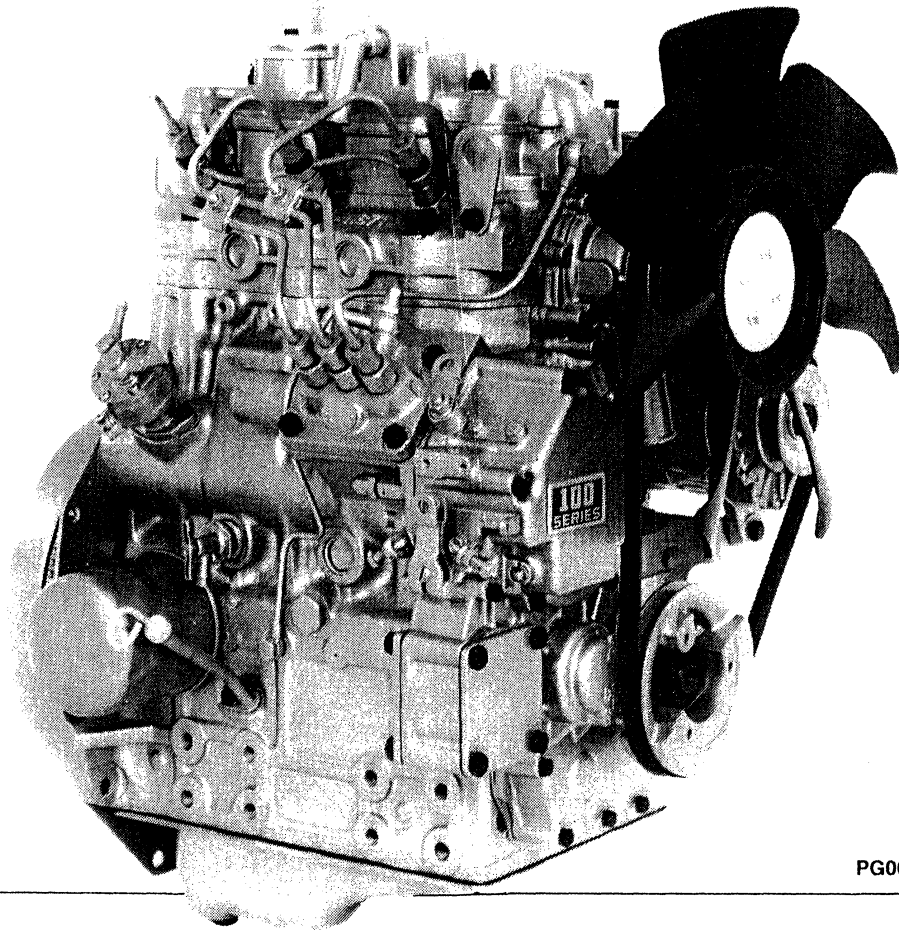

PG000

Perkins 100 Series:

103-12/103-13/103-15/104-19

Part# 6SE904

This publication is written in
Perkins Approved Clear English

PACE

Chapters

- 1 General information
- 2 Specifications
- 3 Cylinder head assembly
- 4 Piston and connecting rod assemblies
- 5 Crankshaft assembly
- 6 Timing case and drive assembly
- 7 Cylinder block assembly
- 8 Engine timing
- 9 Aspiration system
- 10 Lubrication system
- 11 Fuel system
- 12 Cooling system
- 13 Flywheel and housing
- 14 Electrical equipment
- 15 Auxiliary equipment
- 16 Special tools

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Safety precautions	2
Engine preservation	4
POWERPART recommended consumable products	5
Engine I.D. location	7
Engine views - 3 cylinder front and rear	8
Engine views - 2 cylinder front and 4 cylinder front	9
Engine lift equipment	10
Viton seals	11
Safety cautions, when an engine is cleaned	11
Engines that conform to Emissions Levels	11
Compression test data	12

2 Specifications

Basic engine data	13
Thread Sealant	14
Recommended torque tensions	14
Data and dimensions	15
Injection timing	15
Cylinder bore dimensions	16
Piston and piston ring dimensions	17
Gudgeon pin	18
Crankshaft deflection	19
Crankshaft inspection	19
Crankshaft journal diameters	20
Crankshaft pin diameters	21
Bearing holder	22
Undersize bearing shell chart	23
Crankshaft bearing bush	24

3 Cylinder head assembly

Rocker cover and inlet manifold

Operation 3-1 To remove and to fit	25
--	----

Rocker assembly

Operation 3-2 To remove and to fit	26
--	----

Rocker shaft (102-05, 103-07, 103-10)

Operation 3-3 To dismantle, to inspect and to assemble	27
--	----

Rocker shaft (103-13, 103-15, 104-19, 104-22)

Operation 3-4 To dismantle, to inspect and to assemble	28
--	----

Fan and mounting

Operation 3-5 To remove	29
-------------------------------	----

Exhaust manifold and gasket

Operation 3-6 To remove and to fit 30

Fuel injection pipes / fuel return pipes

Operation 3-7 To remove and to fit 31

Oil pipes

Operation 3-8 To remove and to fit 32

Atomisers

Operation 3-9 To remove and to fit 33

Busbar / glowplugs

Operation 3-10 To remove and to fit 34

Head bolts

Operation 3-11 To remove and to fit 35

Cylinder head gasket

Operation 3-12 To remove and to fit 36

Operation 3-13 To select the correct thickness of cylinder head gasket 37

Head bolts - all variants

Operation 3-14 Tightening sequence 38

Valve and valve springs

Operation 3-15 To remove and to fit 39

Valve spring

Operation 3-16 To inspect 40

Valve stem diameter and thickness of valve head

Operation 3-17 To inspect 41

Valve guide clearance

Operation 3-18 To inspect 42

Cylinder head

Operation 3-19 To check the distortion of the lower face 43

Valve seat width

Operation 3-20 To correct 44

Valve depth

Operation 3-21 To correct 45

Valve seat contact face	
Operation 3-22 Lapping	46
Valve tip clearance	
Operation 3-23 To check	47
4 Piston and connecting rod assemblies	
Big end bearing and cap	
Operation 4-1 To remove and to fit	49
Piston and connecting rod	
Operation 4-2 To dismantle and to assemble	50
Operation 4-3 To fit	51
Piston and piston ring	
Operation 4-4 To inspect	52
Operation 4-5 To measure piston ring clearance	53
Piston ring and block	
Operation 4-6 To inspect	54
Small end bush	
Operation 4-7 To remove and to fit	55
Connecting rod	
Operation 4-8 To inspect	56
5 Crankshaft assembly	
Crankshaft pulley	
Operation 5-1 To remove and to fit	57
Flywheel, backplate and oil seal	
Operation 5-2 To remove and to fit	58
Crankshaft retainer setscrews and crankshaft	
Operation 5-3 To remove and to fit	59
Bearing clearance	
Operation 5-4 To check	61

Main bearings

- Operation 5-5 To dismantle and to assemble (two and three cylinder engines) 62
 Operation 5-6 To dismantle and to assemble (four cylinder engines) 63

6 Timing case and drive assembly**Fuel injection pump**

- Operation 6-1 To remove and to fit 65

Timing cover

- Operation 6-2 To remove and to fit 66

Slider

- Operation 6-3 To remove and to fit 67

Camshaft retainer plate

- Operation 6-4 To remove and to fit 68

Camshaft and cam followers

- Operation 6-5 To remove 69
 Operation 6-6 To fit 70

Camshaft assembly

- Operation 6-7 To inspect 71

Max fuel screw and max speed screw

- Operation 6-8 To locate 72
 Operation 6-9 To remove and to fit 73

Idler gear and oil pump

- Operation 6-10 To remove and to fit 75

Idler hub

- Operation 6-11 To fit 76

Gear teeth backlash

- Operation 6-12 To check backlash 77

Oil pump end float

- Operation 6-13 To check 78

Governor spring

- Operation 6-14 To locate and to check 79

Oil seal protector

Operation 6-15 To fit 80

Timing cover

Operation 6-16 To fit 81

7 Cylinder block assembly**Front bush**

Operation 7-1 To fit 83

Cylinder block top face

Operation 7-2 To inspect 84

8 Engine timing**Fuel injection pump timing**

Operation 8-1 To check timing 85

9 Aspiration system**Breather system**

Operation 9-1 To clean and renew 89

10 Lubrication system**Oil filter canister**

Operation 10-1 To remove and to fit 91

Pressure relief valve

Operation 10-2 To remove and to fit 92

Lubricating oil sump

Operation 10-3 To remove and to fit 93

Strainer and suction pipe

Operation 10-4 To remove and to fit 94

Lubricating oil pump

Operation 10-5 To remove, to fit and to inspect 95

Oil pressure switch

Operation 10-6 To remove and to fit	96
---	----

11 Fuel system**Atomisers**

Operation 11-1 To remove	97
Operation 11-2 To fit	98

Fuel lift pump

Operation 11-3 To remove and to fit early fuel lift pump	99
Operation 11-4 To remove and to fit the latest fuel lift pump	100
Operation 11-5 To dismantle and to assemble the early fuel lift pump	101

Fuel injection pump

Operation 11-6 To remove and to fit	102
Operation 11-7 Banjo Bolt	103

Vent points

Operation 11-8 To eliminate air from the fuel system	104
--	-----

12 Cooling system**Fan and mounting**

Operation 12-1 To remove and to fit	105
---	-----

Coolant pump

Operation 12-2 To remove and to fit	106
---	-----

Thermostat

Operation 12-3 To remove and to fit	108
Operation 12-4 To test and inspect	109

13 Flywheel and housing**Flywheel**

Operation 13-1 To remove and to fit	111
Operation 13-2 To inspect	112

Flywheel housing (if fitted)

Operation 13-3 To remove and to fit	113
---	-----

14 Electrical equipment

Electrical shut off solenoid (ESOS)

Operation 14-1 To remove and to fit 115

Alternator

Operation 14-2 To remove and to fit 116

Operation 14-3 Alternator Testing 117

Starter motor

Operation 14-4 To remove and to fit 119

Operation 14-5 Starter Motor Testing 120

Wiring diagram 14 and 15 amp alternator - 102-05, 103-07, 103-10 121

Wiring diagram 40 amp alternator - 103-10 (when fitted with optional alternator) .. 122

Wiring diagram 55 amp alternator - 103-15, 104-19, 104-22 123

Wiring diagram 40 amp alternator - 103-13 124

Auto shutdown wiring diagram 125

Auto shutdown wiring diagram 14 and 15 amp alternator - 102-05, 103-07, 103-10 126

Auto shutdown wiring diagram 40 amp alternator - 103-10
(when fitted with optional alternator) 127

Auto shutdown wiring diagram 40 amp alternator - 103-13 128

Auto shutdown wiring diagram 40 amp alternator - 103-15, 104-19, 104-22 129

15 Auxiliary equipment

Radiator Anti-Vibration mountings 131

16 Special tools

Special tools list 133

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com