
Perkins New 1000 Series

Models AJ to AS and YG to YK

WORKSHOP MANUAL

4 and 6 cylinder diesel engines for industrial and agricultural applications

Publication TPD 1350E, Issue 4.

© Proprietary information of Perkins Engines Company Limited, all rights reserved.
The information is correct at the time of print.
Published in December 2001 by Technical Publications.

This publication is written in
Perkins Approved Clear English



Chapters

- 1 General information**
- 2 Specifications**
- 3 Cylinder head assembly**
- 4 Piston and connecting rod assemblies**
- 5 Crankshaft assembly**
- 6 Timing case and drive assembly**
- 7 Cylinder block assembly**
- 8 Engine timing**
- 9 Aspiration system**
- 10 Lubrication system**
- 11 Fuel system**
- 12 Cooling system**
- 13 Flywheel and housing**
- 14 Electrical equipment**
- 15 Auxiliary equipment**
- 16 Special tools**

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Engine views	2
Engine identification	3
Safety precautions	5
Viton seals	6
Engine lift equipment	7
POWERPART recommended consumable products	8

2 Specifications

Basic engine data	11
Data and dimensions	12
Thread sealant	35
Standard torque tensions	36
Specific torque tensions	37
Compression test data	40

3 Cylinder head assembly

General description 41

Rocker cover

Operation 3-1 To remove 42
 Operation 3-2 To fit 43

Rocker assembly

Operation 3-3 To remove and to fit 44
 Operation 3-4 To dismantle and to assemble 45
 Operation 3-5 To inspect and to correct 45

Valve tip clearances

Operation 3-6 To check and to adjust (four cylinder engines) 46
 Operation 3-7 To check and to adjust (six cylinder engines) 47

Valve springs

Operation 3-8 To change the valve springs (with cylinder head fitted) 48

Manifolds

Operation 3-9 To remove and to fit an intake manifold 50
 Operation 3-10 To remove and to fit an exhaust manifold (one-piece) 52
 Operation 3-11 To remove and to fit an exhaust manifold (three-piece) 54

Cylinder head assembly

Operation 3-12 To remove 56
 Operation 3-13 To fit (engine types AJ to AQ and YG to YK) 58
 Operation 3-14 To fit (engine types AR and AS) 61

Valves and valve springs

Operation 3-15 To remove 64
 Operation 3-16 To fit 65
 Operation 3-17 To inspect and to correct 66

Valve guides

Operation 3-18 To inspect 67
 Operation 3-19 To remove 68
 Operation 3-20 To fit 69

Cylinder head

Operation 3-21 To inspect and to correct 70
 Operation 3-22 To correct a valve seat with a valve seat cutter 71
 Operation 3-23 To fit valve seat inserts 73

4 Piston and connecting rod assemblies

General description	75
Big end bearing	
Operation 4-1 To remove	77
Operation 4-2 To fit	78
Operation 4-3 To inspect	78
Piston and connecting rod	
Operation 4-4 To remove	79
Operation 4-5 To fit	80
Operation 4-6 To check the piston height above the cylinder block	82
Piston rings	
Operation 4-7 To remove	83
Operation 4-8 To fit	84
Piston and connecting rod assembly	
Operation 4-9 To dismantle	85
Operation 4-10 To assemble	86
Operation 4-11 To check the length of a connecting rod	87
Piston and piston rings	
Operation 4-12 To inspect	88
Connecting rod	
Operation 4-13 To inspect	89
Partially finished small end bush	
Operation 4-14 To remove and to fit	90
Piston cooling jets	
Operation 4-15 To remove and to fit	91
Operation 4-16 To check the jet alignment	92

5 Crankshaft assembly

General description	93
Crankshaft pulley	
Operation 5-1 To remove and to fit (four cylinder engines)	95

Crankshaft pulley and damper	
Operation 5-2 To remove (six cylinder engines)	96
Operation 5-3 To fit (six cylinder engines)	97
Operation 5-4 To inspect	98
Rear oil seal assembly	99
Operation 5-5 To remove and to fit (one-piece assembly)	99
Operation 5-6 To remove and to fit (two-piece assembly)	102
Operation 5-7 To renew the rear end oil seal (two-piece assembly)	103
Operation 5-8 To remove and to fit a wear sleeve	104
Thrust washers	
Operation 5-9 To check crankshaft end-float	105
Operation 5-10 To remove	106
Operation 5-11 To fit	107
Main bearings	
Operation 5-12 To remove (with the crankshaft in position)	108
Operation 5-13 To fit	109
Operation 5-14 To inspect	109
Crankshaft	
Operation 5-15 To remove	110
Operation 5-16 To fit	111
Operation 5-17 To inspect	113
Balancer unit	
Operation 5-18 To remove and to fit	114
Operation 5-19 To dismantle	115
Operation 5-20 To assemble	117
Operation 5-21 To inspect	120
Operation 5-22 To remove and to fit the needle roller bearings for the drive shaft	121
Operation 5-23 To remove and to fit the bushes for the balance weights	122
6 Timing case and drive assembly	
General description	123
Timing case cover	
Operation 6-1 To remove	124
Operation 6-2 To fit	125
Front oil seal	
Operation 6-3 To remove	127
Operation 6-4 To fit	128
Operation 6-5 To remove and to fit a wear sleeve	130

Idler gear and hub	
Operation 6-6 To remove	131
Operation 6-7 To fit	133
Idler gear and hub for the compressor	
Operation 6-8 To remove	135
Operation 6-9 To fit	136
Fuel pump gear	137
Operation 6-10 To remove	137
Operation 6-11 To fit	139
Camshaft gear	
Operation 6-12 To remove and to fit	141
Crankshaft gear	
Operation 6-13 To remove and to fit	142
Timing case	
Operation 6-14 To remove	143
Operation 6-15 To fit	144
Camshaft and tappets	
Operation 6-16 To remove	146
Operation 6-17 To fit	147
7 Cylinder block assembly	
General description	149
Cylinder block	
Operation 7-1 To dismantle	150
Operation 7-2 To assemble	151
Operation 7-3 To inspect	152
Operation 7-4 To remove and to fit a new type 'D' plug to the tappet chamber	153
Cylinder liner	
Operation 7-5 To inspect	155
Operation 7-6 To remove	156
Operation 7-7 To fit a service liner	158
Operation 7-8 To fit a partially finished liner	161
Cylinder bore, engine types AR and AS	
Operation 7-9 To inspect	164

8 Engine timing

General description	165
Engine timing	
Operation 8-1 To set number 1 piston to TDC on the compression stroke	167
Operation 8-2 Another method to set number 1 piston to TDC	168
Operation 8-3 To check the valve timing	169
Operation 8-4 To check the timing of the fuel injection pump	170

9 Aspiration system

General description	171
Turbocharger	
Operation 9-1 To remove	173
Operation 9-2 To fit	174
Operation 9-3 To clean the impeller and the compressor casing	176
Operation 9-4 To remove and to fit the actuator assembly of the waste-gate unit	177
Operation 9-5 To check and adjust the operation of the waste-gate	178
Turbocharger faults	179
List of possible causes	180
Open engine breather	181
Operation 9-6 To clean and to renew	181
Operation 9-7 To Inspect	183
Closed engine breather	184
Operation 9-8 To renew the breather valve assembly	185

10 Lubrication system

General description - four cylinder engine lubrication system	187
General description - Six cylinder engine lubrication system	188
Filter canister	
Operation 10-1 To renew	191
Filter head	
Operation 10-2 To remove and to fit	192
Sump	
Operation 10-3 To remove and to fit	193

Oil strainer and suction pipe	
Operation 10-4 To remove and to fit	194
Operation 10-5 To inspect and to correct	195
Lubricating oil pump	196
Operation 10-6 To remove	196
Operation 10-7 To fit	197
Operation 10-8 To inspect	198
Lubricating oil pump idler gear shaft	199
Operation 10-9 To remove (six cylinder engines)	199
Operation 10-10 To fit (six cylinder engines)	201
Operation 10-11 To remove and to fit (four cylinder engines)	202
Relief valve	
Operation 10-12 To remove and to fit	203
Operation 10-13 To dismantle and to assemble	204
Operation 10-14 To inspect	204
Flexible oil pipes	205
Operation 10-15 To remove	205
Operation 10-16 To fit	206
Operation 10-17 To Inspect	207

11 Fuel system

General description	209
Cold start advance unit	212
Typical fuel system	215
Fuel filters	216
Fuel filter element	
Operation 11-1 To renew - separate element type	217
Operation 11-2 To renew - canister type	218
Operation 11-3 To renew - quick release canister type	219
Atomisers	220
Operation 11-4 To remove	221
Operation 11-5 To fit	222

Fuel lift pump

Operation 11-6 To remove and to fit	224
Operation 11-7 To dismantle	225
Operation 11-8 To assemble	226
Operation 11-9 To test	227

Bosch fuel injection pump 228

Operation 11-10 To remove	230
Operation 11-11 To fit	232
Operation 11-12 To adjust	234

Lucas/Delphi DP 200 Series fuel injection pump 235

Operation 11-13 To remove	237
Operation 11-14 To fit	239
Operation 11-15 To adjust	242
Operation 11-16 Electrical shut off solenoid (ESOS)	243

Stanadyne fuel injection pump 245

Operation 11-17 To remove	248
Operation 11-18 To fit	249
Operation 11-19 To adjust	251

Air in the fuel system 254

Operation 11-20 To eliminate air from the fuel system	254
---	-----

12 Cooling system**General description** 257**Thermostats**

Operation 12-1 To remove	258
Operation 12-2 To fit	259
Operation 12-3 To test	260

Coolant pump - early gear driven pumps 261

Operation 12-4 To remove	261
Operation 12-5 To fit	262
Operation 12-6 To dismantle	263
Operation 12-7 To assemble	264
Operation 12-8 To remove and to fit a pressed steel cover (early coolant pumps)	267

Coolant pump - latest gear driven pumps 268

Operation 12-9 To remove	268
Operation 12-10 To fit	269
Operation 12-11 To dismantle	270
Operation 12-12 To assemble	273

New 1000 Series

Coolant pump - belt driven	277
Operation 12-13 To remove	277
Operation 12-14 To fit	279
Operation 12-15 To remove high position pump	281
Operation 12-16 To fit high position pump	283
Operation 12-17 To dismantle	285
Operation 12-18 To assemble	286
Fan	
Operation 12-19 To remove and to fit	289
Fan drive (engines with gear driven coolant pumps)	
Operation 12-20 To remove and to fit	290
Lubricating oil cooler	
Operation 12-21 To remove (four cylinder turbocharged engines)	291
Operation 12-22 To fit (four cylinder turbocharged engines)	292
Operation 12-23 To dismantle and to assemble (four cylinder engines)	293
Operation 12-24 To remove (six cylinder turbocharged engines)	294
Operation 12-25 To fit (six cylinder turbocharged engines)	296
Operation 12-26 To dismantle and to assemble (six cylinder engines)	298
Operation 12-27 To remove and to fit (canister type)	300
Operation 12-28 To remove and to fit cooler bypass valve	300
Intercoolers	301
Horizontally mounted intercooler	
Operation 12-29 To remove	302
Operation 12-30 To fit	304
Vertically mounted intercooler	
Operation 12-31 To remove	306
Operation 12-32 To fit	307
Operation 12-33 To clean and to inspect	309
13 Flywheel and housing	
General description	311
Flywheel	
Operation 13-1 To remove and to fit	311
Ring gear	
Operation 13-2 To remove and to fit	312
Flywheel housing	
Operation 13-3 To remove and to fit	313

14 Electrical equipment

Alternators	315
Operation 14-1 To check the drive belts	316
Operation 14-2 To adjust drive belt tension	317
Operation 14-3 To remove and to fit the drive belts	318
Operation 14-4 To remove and to fit the alternator	319
Operation 14-5 To maintain	319
Operation 14-6 Fault diagnosis	320
Starter motors	322
Operation 14-7 To remove and to fit	323
Operation 14-8 To maintain the brush gear and the commutator	324
Operation 14-9 To test on the engine	324
Operation 14-10 Fault diagnosis	325
Starting aids	326
Operation 14-11 To remove and to fit a fuelled starting aid	326
Operation 14-12 To remove and to fit a twin-fuelled starting aid	327
Operation 14-13 To check the fuelled starting aid	328
Operation 14-14 To remove and to fit a port heater	328

15 Auxiliary equipment

Bendix Compressor

Operation 15-1 To remove	330
Operation 15-2 To fit	331

Knorr-Bremse compressor

Operation 15-3 To remove	333
Operation 15-4 To fit	334
Operation 15-5 To remove the reed valves	336
Operation 15-6 To fit the reed valves	337
Operation 15-7 To remove the top unloader valve	338
Operation 15-8 To fit the top unloader valve	339
Operation 15-9 To remove the crankshaft / connecting rod / piston / piston rings	340
Operation 15-10 To fit the crankshaft / connecting rod / piston / piston rings	341

Power steering pump

Operation 15-11 To remove and to fit	343
--	-----

Adaptor for a hydraulic pump or a steering pump with a splined drive

Operation 15-12 To remove and to fit	344
Operation 15-13 To dismantle	345
Operation 15-14 To assemble	346

Exhauster

Operation 15-15 To remove and to fit 347

16 Special tools

List of special tools 350

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com