
Perkins Peregrine and New Generation 1300 Series

Models WD to WJ

WORKSHOP MANUAL

Peregrine 6 cylinder diesel engines for automotive applications

1300 Series 6 cylinder diesel engines for agricultural and industrial applications

Publication TPD 1347E, Issue 2.

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in June 1998 by Technical Publications,

Perkins Engines Company Limited, Peterborough PE1 5NA, England

Chapters

- 1 General information**
- 2 Specifications**
- 3 Cylinder head assembly**
- 4 Piston and connecting rod assemblies**
- 5 Crankshaft assembly**
- 6 Timing case and drive assembly**
- 7 Cylinder block assembly**
- 8 Engine timing**
- 9 Aspiration system**
- 10 Lubrication system**
- 11 Fuel system**
- 12 Cooling system**
- 13 Flywheel and housing**
- 14 Electrical equipment**
- 15 Auxiliary equipment**
- 16 Special tools**

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Engine identification	3
Safety precautions	4
Engine lift equipment	6
POWERPART recommended consumable products	7

2 Specifications

Basic engine data	9
Data and dimensions	10
Recommended torque settings	19

3 Cylinder head assembly

General description	23
Rocker cover	
Operation 3-1 To remove	24
Operation 3-2 To fit	25
Rocker assembly	
Operation 3-3 To remove	26
Operation 3-4 To dismantle and inspect	27

Operation 3-5 To assemble	28
---------------------------------	----

Cylinder head

Operation 3-6 To remove	29
Operation 3-7 To fit	30

Valves and valve springs

Operation 3-8 To remove	33
Operation 3-9 To fit	34
Operation 3-10 To inspect and to correct	35
Operation 3-11 To inspect a valve rotator	37

Valve guides

Operation 3-12 To inspect a valve guide	38
Operation 3-13 To remove	38
Operation 3-14 To fit	39

Cylinder head

Operation 3-15 To inspect and to correct	40
Operation 3-16 To correct a valve seat with a valve seat cutter	42
Operation 3-17 To fit valve seat inserts	43
Operation 3-18 To renew atomiser sleeves	44
Operation 3-19 To set the valve tip clearance	46

4 Piston and connecting rod assemblies

General description	49
----------------------------------	-----------

Big end bearing

Operation 4-1 To remove	50
Operation 4-2 To fit	51
Operation 4-3 To inspect	51

Piston and connecting rod assembly

Operation 4-4 To remove	52
Operation 4-5 To fit	53
Operation 4-6 To dismantle and assemble (WD, WE, WF and WG engines)	55
Operation 4-7 To dismantle and assemble (WH and WJ engines)	56
Operation 4-8 To inspect	57

Connecting rod

Operation 4-9 To inspect	58
--------------------------------	----

Small end bush

Operation 4-10 To remove and to fit	58
---	----

Piston rings

Operation 4-11 To remove and to fit	59
Operation 4-12 To inspect	60

5 Crankshaft assembly

General description	61
Crankshaft pulley/damper assembly	
Operation 5-1 To remove	62
Operation 5-2 To fit	63
Operation 5-3 To inspect	64
Rear oil seal housing assembly	65
Operation 5-4 To remove the oil seal housing	65
Operation 5-5 To fit the oil seal housing	66
Operation 5-6 To renew the rear oil seal and wear sleeve assembly	68
Crankshaft	
Operation 5-7 To remove	70
Operation 5-8 To fit	72
Operation 5-9 To inspect	74
Crankshaft gear	
Operation 5-10 To renew	75
Thrust bearing	
Operation 5-11 To check crankshaft end-float	76
Operation 5-12 To remove and to fit	77
Main bearings	
Operation 5-13 To remove	78
Operation 5-14 To fit	79
Operation 5-15 To inspect	80

6 Timing case and drive assembly

General description	81
Components of the timing case	82
Timing case cover	
Operation 6-1 To remove	83
Operation 6-2 To fit	84
Idler gears	

Operation 6-3 To remove	85
Operation 6-4 To fit	86
Fuel injection pump gear	87
Operation 6-5 To remove and to fit	87
Timing case backplate	
Operation 6-6 To remove	88
Operation 6-7 To fit	89
Camshaft and tappets	90
Operation 6-8 To remove	91
Operation 6-9 To fit	92
Operation 6-10 To inspect	93
Camshaft bushes	94
Operation 6-11 To renew	95

7 Cylinder block assembly

General description	97
Cylinder block	
Operation 7-1 To dismantle and to assemble	98
Operation 7-2 To inspect	99
Cylinder liner	
Operation 7-3 To remove	100
Operation 7-4 To fit	102
Operation 7-5 To inspect	103

8 Engine timing

General description	105
Operation 8-1 To set number one cylinder to TDC on the compression stroke	105
Operation 8-2 To check the valve timing (with a feeler gauge)	106
Operation 8-3 To check the valve timing (with a dial test indicator)	106
Operation 8-4 To check and set the timing of the fuel injection pump	107
Operation 8-5 To find the setting for timing the fuel injection pump	109
Static timing chart	110

9 Aspiration system

General description	111
Turbocharger	
Operation 9-1 To remove	112
Operation 9-2 To fit	113
Operation 9-3 To dismantle	114
Operation 9-4 To assemble	115
Operation 9-5 To inspect	116
Operation 9-6 To clean the impeller and compressor casing	117
Operation 9-7 To remove and to fit the actuator assembly of the waste-gate unit	118
Operation 9-8 To check and to adjust the actuator assembly of the waste-gate unit	119
Turbocharger faults	121

10 Lubrication system

General description	123
Lubrication system flow diagram	124
Filter canister	
Operation 10-1 To renew the canister of the lubricating oil filter	125
Filter head and oil cooler assembly	
Operation 10-2 To remove	127
Operation 10-3 To fit	128
Operation 10-4 To inspect	129
Oil temperature / pressure control valve	
Operation 10-5 To remove and to fit	130
Operation 10-6 To test	130
Pressure regulating valve	
Operation 10-7 To remove and to fit	131
Operation 10-8 To inspect	131
Sump	
Operation 10-9 To remove and to fit (arrangement 1)	133
Operation 10-10 To remove and to fit (arrangement 2)	135
Oil strainer and suction pipe	
Operation 10-11 To remove and to fit	136
Lubricating oil pump	
Operation 10-12 To remove	137
Operation 10-13 To fit	138
Operation 10-14 To inspect	140

Front oil seal	141
Operation 10-15 To renew	141
Pressure relief valve	142
Operation 10-16 To remove and to fit	142
Operation 10-17 To inspect	142
Breather system	143
Operation 10-18 To clean	143

11 Fuel system

General description	145
Fuel filter	
Operation 11-1 Fuel pre-filter	147
Operation 11-2 To renew the fuel strainer and the canister of the fuel filter	147
Atomiser	
Operation 11-3 Atomiser fault	148
Operation 11-4 To renew an atomiser	148
Fuel lift pump	150
Operation 11-5 To remove and to fit	150
Operation 11-6 To dismantle	151
Operation 11-7 To assemble	152
Fuel injection pump	153
Operation 11-8 To remove	153
Operation 11-9 To fit	155
Operation 11-10 To set the adjustment of the speed control	157
Operation 11-11 To eliminate air from the fuel system	158

12 Cooling system

General description	159
Cooling system flow diagram	160
Filter canister	
Operation 12-1 To renew the canister of the coolant filter/ inhibitor	161
Thermostat	
Operation 12-2 To remove and to fit	162
Operation 12-3 To test	162

Coolant pump	
Operation 12-4 To remove and to fit	163
Fan	
Operation 12-5 To remove and to fit	164
Fan drive	
Operation 12-6 To remove and to fit	164
Fan drive belt	165
Operation 12-7 To remove and to fit	165

13 Flywheel and housing

General description	167
Flywheel	167
Operation 13-1 To remove and to fit	167
Ring gear	
Operation 13-2 To remove and to fit	168
Flywheel housing	
Operation 13-3 To remove and to fit	169

14 Electrical equipment

Alternators	171
Operation 14-1 To remove and to fit	172
Operation 14-2 To maintain	172
Alternator fault diagnosis	173
Starter motors	175
Operation 14-3 To remove and to fit	175
Operation 14-4 To maintain	176
Operation 14-5 To test on the engine	177
Stop control solenoid	179
Operation 14-6 To remove and to fit	179
Operation 14-7 To inspect	180
Operation 14-8 To adjust	180

15 Auxiliary equipment

Compressors	181
Operation 15-1 To remove and to fit	182
Power steering pump	
Operation 15-2 To remove and to fit	183

16 Special tools

List of special tools	185
------------------------------------	-----

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com