
Perkins

Peregrine EDi and 1300 Series EDi

Models WK to WS

WORKSHOP MANUAL

- | | |
|--------------------|--|
| Peregrine | 6 cylinder turbocharged diesel engines
with electronic management system for
automotive applications |
| 1300 Series | 6 cylinder turbocharged diesel engines
with electronic management system for
agricultural and industrial applications |

Publication TPD 1353E, Issue 3

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in April 2001 by Technical Publications,

Perkins Engines Company Limited, Peterborough PE1 5NA, England

This publication is written in
Perkins Approved Clear English



Chapters

- 1 General information**
- 2 Specifications**
- 3 Cylinder head assembly**
- 4 Piston and connecting rod assemblies**
- 5 Crankshaft assembly**
- 6 Timing case and drive assembly**
- 7 Cylinder block assembly**
- 8 Engine timing**
- 9 Turbocharger**
- 10 Lubrication system**
- 11 Fuel system**
- 12 Cooling system**
- 13 Flywheel and housing**
- 14 Electrical equipment**
- 15 Auxiliary equipment**
- 16 Special tools**
- 17 Fault diagnosis**

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Engine views	2
Engine identification	3
Safety precautions	4
Engine lift equipment	6
POWERPART recommended consumable products	7

2 Specifications

Basic engine data	9
Data and dimensions	10
Recommended torque settings	19

3 Cylinder head assembly

General description	21
Rocker cover	
Operation 3-1 To remove	22
Operation 3-2 To fit	23
Engine breather elements	
Operation 3-3 To renew	24
Rocker assembly	
Operation 3-4 To remove	25
Operation 3-5 To fit	26
Operation 3-6 To dismantle and inspect	27
Operation 3-7 To assemble	28
Cylinder head assembly	
Operation 3-8 To remove	29
Operation 3-9 To fit	30
Valves and valve springs	
Operation 3-10 To remove	33
Operation 3-11 To fit	34
Operation 3-12 To inspect and to correct	35
Operation 3-13 To inspect a valve rotator	37
Valve guides	
Operation 3-14 To inspect a valve guide	38
Operation 3-15 To remove	39
Operation 3-16 To fit	40
Cylinder head	
Operation 3-17 To inspect and to correct	41
Operation 3-18 To correct a valve seat with a valve seat cutter	43
Operation 3-19 To fit valve seat inserts	44
Operation 3-20 To renew injector unit sleeves	45
Operation 3-21 To set the valve tip clearance	48

4 Piston and connecting rod assemblies

General description	51
Big end bearing	
Operation 4-1 To remove	52
Operation 4-2 To fit	53
Operation 4-3 To inspect	54
Piston and connecting rod assembly	
Operation 4-4 To remove	55
Operation 4-5 To fit	56
Operation 4-6 To dismantle and assemble (one-piece pistons)	58
Operation 4-7 To dismantle and assemble (two-piece pistons)	59
Operation 4-8 To inspect	60
Connecting rod	
Operation 4-9 To inspect	61
Small end bush	
Operation 4-10 To remove and to fit	61
Piston rings	
Operation 4-11 To remove and to fit	62
Operation 4-12 To inspect	63

5 Crankshaft assembly

General description	65
Crankshaft pulley / damper assembly	
Operation 5-1 To remove	66
Operation 5-2 To fit	67
Operation 5-3 To inspect	68
Rear oil seal housing assembly	
Operation 5-4 To remove the oil seal housing	69
Operation 5-5 To fit the oil seal housing	70
Operation 5-6 To renew the rear oil seal and wear sleeve assembly	72
Crankshaft	
Operation 5-7 To remove	75
Operation 5-8 To fit	77
Operation 5-9 To inspect	79

Crankshaft gear	
Operation 5-10 To renew	80
Thrust bearing	
Operation 5-11 To check crankshaft end-float	81
Operation 5-12 To remove	82
Operation 5-13 To fit	83
Main bearings	
Operation 5-14 To remove	84
Operation 5-15 To fit	85
Operation 5-16 To inspect	86
6 Timing case and drive assembly	
General description	87
Components of the timing case	88
Timing case cover	
Operation 6-1 To remove	89
Operation 6-2 To fit	90
Idler gears	
Operation 6-3 To remove	91
Operation 6-4 To fit	92
Timing case backplate	
Operation 6-5 To remove	93
Operation 6-6 To fit	94
Camshaft and tappets	
Operation 6-7 To remove	95
Operation 6-8 To fit	97
Operation 6-9 To inspect	98
Camshaft bushes	
Operation 6-10 To renew	99
Camshaft motion sensor (CMS)	
Operation 6-11 To remove and to fit	101
CMS verification of clearance	
Operation 6-12 To check the air gap	102

7 Cylinder block assembly

General description	103
Cylinder block	
Operation 7-1 To dismantle and to assemble	104
Operation 7-2 To inspect	105
Cylinder liner	
Operation 7-3 To remove	106
Operation 7-4 To fit	108
To inspect	
Operation 7-5 Check the cylinder liners for damage and wear	109

8 Engine timing

General description	111
Engine timing	
Operation 8-1 To set number 1 cylinder to TDC on the compression stroke	112
Operation 8-2 To check the valve timing (with a feeler gauge)	113
Operation 8-3 To check the valve timing (with a dial test indicator)	114

9 Turbocharger

General description	115
Turbocharger	
Operation 9-1 To remove	116
Operation 9-2 To fit	117
Operation 9-3 To dismantle	118
Operation 9-4 To assemble	120
Operation 9-5 To inspect	121
Operation 9-6 To clean the impeller and compressor casing	121
Operation 9-7 To remove and to fit the actuator assembly of the waste-gate unit	122
Operation 9-8 To check the actuator assembly of the waste-gate unit	123
Operation 9-9 To adjust the actuator assembly of the waste-gate unit	124
Turbocharger faults	125

10 Lubrication system

General description (Low-pressure system)	127
Filter canister	
Operation 10-1 To renew the canister of the lubricating oil filter	129
Oil filter head and cooler assembly	
Operation 10-2 To remove	131
Operation 10-3 To fit	132
Operation 10-4 To inspect	133
Oil temperature control valve	
Operation 10-5 To remove and to fit	134
Operation 10-6 To test	134
Pressure regulating valve	
Operation 10-7 To remove and to fit	135
Operation 10-8 To inspect	135
Sump	
Operation 10-9 To remove	136
Operation 10-10 To fit	137
Oil strainer and suction pipe	
Operation 10-11 To remove and to fit	139
Lubricating oil pump	
Operation 10-12 To remove	140
Operation 10-13 To fit	141
Operation 10-14 To inspect	143
Front oil seal	
Operation 10-15 To renew (oil pump removed)	144
Operation 10-16 To renew (oil pump fitted)	146
Pressure relief valve	
Operation 10-17 To remove and to fit	148
Operation 10-18 To inspect	148
Breather system	
Operation 10-19 To clean	149
General description (High-pressure system)	
Sensor for injection control pressure	
Operation 10-20 To remove and to fit	152

High-pressure pump

Operation 10-21 To remove	153
Operation 10-22 To fit	154

Regulator valve for injection control pressure

Operation 10-23 To remove and to fit	155
--	-----

Supply manifold

Operation 10-24 To remove	156
Operation 10-25 To fit	157

11 Fuel system

General description	159
----------------------------------	-----

Fuel injection cycle	161
-----------------------------------	-----

Fuel filter

Operation 11-1 To renew the fuel strainer and the canister of the fuel filter	165
---	-----

Fuel injector units

Operation 11-2 To remove	166
Operation 11-3 To fit	169
Operation 11-4 To renew the fuel injector unit seals	171

Fuel lift pump

Operation 11-5 To remove and to fit	173
Operation 11-6 To dismantle	174
Operation 11-7 To assemble	175
Operation 11-8 To set the adjustment of the speed control	176
Operation 11-9 To eliminate air from the fuel system	177

12 Cooling system

General description	179
----------------------------------	-----

Cooling system flow diagram	180
--	-----

Coolant filter

Operation 12-1 To renew the canister of the coolant filter / inhibitor	181
--	-----

Thermostat

Operation 12-2 To remove and to fit	182
Operation 12-3 To test	182

Coolant pump

Operation 12-4 To remove and to fit 183

Fan

Operation 12-5 To remove and to fit 184

Fan drive

Operation 12-6 To remove and to fit 184

Fan drive belt

Operation 12-7 To remove and to fit 185

13 Flywheel and housing**General description** 187**Flywheel**

Operation 13-1 To remove 188

Operation 13-2 To fit 189

Starter ring

Operation 13-3 To remove and to fit 190

Flywheel housing

Operation 13-4 To remove and to fit 191

14 Electrical equipment**Alternator**

Operation 14-1 To remove and to fit 194

Operation 14-2 To maintain 194

Alternator fault finding 195**Alternator wiring diagrams** 197**Starter motor**

Operation 14-3 To remove and to fit 199

Operation 14-4 To maintain 200

Operation 14-5 To test on the engine 201

Starter motor wiring diagrams 202**Starting aid** 203

Engine management system	204
Sensors	206
Engine management system wiring diagrams	208

15 Auxiliary equipment

Compressors	
Operation 15-1 To remove and to fit	216
Power steering pump	
Operation 15-2 To remove and to fit	217
Power take-off adaptor	
Operation 15-3 To remove and to fit	218
Operation 15-4 To tighten the drive gear nut	218

16 Special tools

List of special tools	219
------------------------------------	-----

17 Fault diagnosis

General description	223
Basic diagnostics	224
The self-test system	
Operation 17-1 How to check for faults codes	226
Operation 17-2 How to test for an open circuit	226
The diagnostic tool	
Operation 17-3 General description	227
Operation 17-4 The diagnostic program map	229
Operation 17-5 Code display options	232
Operation 17-6 The engine data list	233
Operation 17-7 How to connect the diagnostic tool	236
Operation 17-8 How to check for faults codes	237
Operation 17-9 How to clear faults codes from the diagnostic tool	239
Operation 17-10 How to do the "ENGINE OFF TEST"	240
Operation 17-11 How to do the "ENGINE RUNNING TEST"	244
Flash codes	246

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com