
Perkins Phaser 135 Ti

Model AL (Euro 2)

WORKSHOP MANUAL

4 cylinder diesel engines for automotive applications

Publication TPD 1356E, Issue 2.

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in January 1997 by Technical Publications.

Perkins Engines Company Limited, Peterborough, PE1 5NA, England.



Chapters

- 1 General information**
- 2 Specifications**
- 3 Cylinder head assembly**
- 4 Piston and connecting rod assemblies**
- 5 Crankshaft assembly**
- 6 Timing case and drive assembly**
- 7 Cylinder block assembly**
- 8 Engine timing**
- 9 Aspiration system**
- 10 Lubrication system**
- 11 Fuel system**
- 12 Cooling system**
- 13 Flywheel and housing**
- 14 Electrical equipment**
- 15 Auxiliary equipment**
- 16 Special tools**

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Engine identification	3
Safety precautions	4
Engine lift equipment	6
Viton seals	7
POWERPART recommended consumable products	8

2 Specifications

Basic engine data	11
Data and dimensions	12
Thread sealant	28
Standard torque tensions	29
Special torque tensions	30
Compression test data	32

3 Cylinder head assembly

General description	33
Rocker cover	
Operation 3-1 To remove	34
Operation 3-2 To fit	35
Rocker assembly	
Operation 3-3 To remove and to fit	36
Operation 3-4 To dismantle and to assemble	37
Operation 3-5 To inspect and to correct	38
Valve tip clearances	
Operation 3-6 To check and to adjust	39
Valve springs	
Operation 3-7 To change the valve springs (with cylinder head fitted)	40
Cylinder head assembly	
Operation 3-8 To remove	42
Operation 3-9 To fit	44
Valves and valve springs	
Operation 3-10 To remove	48
Operation 3-11 To fit	49
Operation 3-12 To inspect and to correct	50
Valve guides	
Operation 3-13 To inspect	51
Operation 3-14 To remove	52
Operation 3-15 To fit	53
Cylinder head	
Operation 3-16 To inspect and to correct	54
Operation 3-17 To correct a valve seat with a valve seat cutter	55
Operation 3-18 To fit valve seat inserts	56

4 Piston and connecting rod assemblies

General description	57
Big end bearing	
Operation 4-1 To remove	58
Operation 4-2 To fit	59
Operation 4-3 To inspect	59
Piston and connecting rod	
Operation 4-4 To remove	60
Operation 4-5 To fit	61
Operation 4-6 To check the piston height above the cylinder block	63
Piston rings	
Operation 4-7 To remove and to fit	64
Piston and connecting rod assembly	
Operation 4-8 To dismantle and to assemble	65
Operation 4-9 To renew	66
Operation 4-10 To check the length of a connecting rod	67
Piston and piston rings	
Operation 4-11 To inspect	69
Connecting rod	
Operation 4-12 To inspect	70
Small end bush	
Operation 4-13 To remove and to fit	71
Piston cooling jets	
Operation 4-14 To remove and to fit	72
Operation 4-15 To check the jet alignment	73

5 Crankshaft assembly

General description	75
Crankshaft pulley and damper	
Operation 5-1 To remove and to fit	76
Operation 5-2 To Inspect	77
Rear oil seal assembly	
Operation 5-3 To remove and to fit	78
Operation 5-4 To renew the rear oil seal	79
Thrust washers	
Operation 5-5 To check crankshaft end-float	80
Operation 5-6 To remove and to fit	81
Main bearings	
Operation 5-7 To remove (with the crankshaft in position)	82
Operation 5-8 To fit (with the crankshaft in position)	83
Operation 5-9 To inspect	83
Crankshaft	
Operation 5-10 To remove	84
Operation 5-11 To fit	85
Operation 5-12 To inspect	87

6 Timing case and drive assembly

General description	89
Timing case cover	
Operation 6-1 To remove	90
Operation 6-2 To fit	91
Front oil seal	
Operation 6-3 To remove	92
Operation 6-4 To fit	93
Idler gear and hub	
Operation 6-5 To remove	94
Operation 6-6 To fit	95
Idler gear and hub for the Bendix compressor	
Operation 6-7 To remove	96
Operation 6-8 To fit	97

Fuel pump gear

Operation 6-9 To remove	98
Operation 6-10 To fit	99

Camshaft gear

Operation 6-11 To remove and to fit	100
---	-----

Crankshaft gear

Operation 6-12 To remove and to fit	101
---	-----

Timing case

Operation 6-13 To remove	102
Operation 6-14 To fit	103

Camshaft and tappets

Operation 6-15 To remove	105
Operation 6-16 To fit	106

7 Cylinder block assembly

General description

107

Cylinder block

Operation 7-1 To dismantle	108
Operation 7-2 To assemble	109
Operation 7-3 To inspect	110

Cylinder liner

Operation 7-4 To inspect	111
Operation 7-5 To remove	112
Operation 7-6 To fit a partially finished liner	114

8 Engine timing

General description

117

Engine timing

Operation 8-1 Flywheel and pin method to set the engine to top dead centre (TDC) on the compression stroke	119
Operation 8-2 Reverse pin timing to set the engine to top dead centre (TDC) on the compression stroke	120
Operation 8-3 Alternative method to set number 1 piston to TDC on the compression stroke	121
Operation 8-4 To check the valve timing	122
Operation 8-5 To check the timing of the fuel injection pump	123

9 Aspiration system

General description	125
Turbocharger	
Operation 9-1 To remove	127
Operation 9-2 To fit	128
Operation 9-3 To clean the impeller and the compressor casing	130
Operation 9-4 To remove and to fit the actuator assembly of the waste-gate unit	131
Operation 9-5 To check and adjust the operation of the waste-gate	132
Turbocharger faults	133
Open engine breather	
Operation 9-6 To clean and to renew	135

10 Lubrication system

General description	137
Engine lubrication system flow diagram	138
Filter canister	
Operation 10-1 To renew	139
Filter head	
Operation 10-2 To remove and to fit	140
Sump	
Operation 10-3 To remove and to fit	141
Oil strainer and suction pipe	
Operation 10-4 To remove and to fit	142
Operation 10-5 To inspect and to correct	142
Lubricating oil pump	
Operation 10-6 To remove	143
Operation 10-7 To fit	144
Operation 10-8 To renew the shaft for the idler gear	145
Operation 10-9 To inspect	146
Relief valve	
Operation 10-10 To remove and to fit	147
Operation 10-11 To dismantle and to assemble	148
Operation 10-12 To inspect	148

11 Fuel system

General description	149
Fuel filter element	
Operation 11-1 To renew	151
Atomisers	
Operation 11-2 Atomiser fault	152
Operation 11-3 To remove	153
Operation 11-4 To fit	154
Fuel lift pump	
Operation 11-5 To remove and to fit	156
Operation 11-6 To dismantle	157
Operation 11-7 To assemble	158
Operation 11-8 To test	159
Bosch EPVE fuel injection pump	
Operation 11-9 To remove	161
Operation 11-10 To fit	162
Operation 11-11 To adjust - Bosch pump	165
Operation 11-12 To eliminate air from the fuel system	166

12 Cooling system

General description	169
Thermostats	
Operation 12-1 To remove and to fit	170
Operation 12-2 To test	170
Coolant pump	
Operation 12-3 To remove and to fit	171
Operation 12-4 To dismantle	172
Operation 12-5 To assemble	173
Lubricating oil cooler	
Operation 12-6 To remove and to fit	175
Operation 12-7 To dismantle and to assemble	176

13 Flywheel and housing

General description	177
----------------------------------	-----

Flywheel

Operation 13-1 To remove and to fit	178
---	-----

Ring gear

Operation 13-2 To remove and to fit	179
---	-----

Flywheel housing

Operation 13-3 To remove and to fit	180
---	-----

14 Electrical equipment

Operation 14-1 To check the drive belts	182
---	-----

Operation 14-2 To adjust drive belt tension	183
---	-----

Operation 14-3 To remove and to fit the drive belts	184
---	-----

Operation 14-4 To remove, to fit and to maintain the alternator	185
---	-----

Alternator fault diagnosis

.....	186
-------	-----

Operation 14-5 To remove and to fit	188
---	-----

Operation 14-6 To maintain the brush gear and the commutator	189
--	-----

Operation 14-7 To test on the engine	189
--	-----

Operation 14-8 To remove and to fit a port heater	190
---	-----

15 Auxiliary equipment

Operation 15-1 To remove	192
--------------------------------	-----

Operation 15-2 To fit	193
-----------------------------	-----

Power steering pump

Operation 15-3 To remove and to fit	195
---	-----

Exhauster

Operation 15-4 To remove and to fit	196
---	-----

16 Special tools

List of special tools

197

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com