
Perkins Phaser and 1000 Series

Models AA to AH and YA to YE

WORKSHOP MANUAL

Phaser **4 and 6 cylinder diesel engines for
automotive applications**

1000 Series **4 and 6 cylinder diesel engines for
agricultural and industrial applications**

Publication TPD 1312E, Issue 2.

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in February 2002 by Technical Publications.

Perkins Engines Company Limited, Peterborough PE1 5NA, England.

This publication is written in
Perkins Approved Clear English

PACE

Chapters

- 1 General information
- 2 Specifications
- 3 Cylinder head assembly
- 4 Piston and connecting rod assemblies
- 5 Crankshaft assembly
- 6 Timing case and drive assembly
- 7 Cylinder block assembly
- 8 Engine timing
- 9 Aspiration system
- 10 Lubrication system
- 11 Fuel system
- 12 Cooling system
- 13 Flywheel and housing
- 14 Electrical equipment
- 15 Auxiliary equipment
- 16 Special tools

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Engine views	2
Engine identification	3
Safety precautions	5
Asbestos joints	6
Viton seals	7
Engine lift equipment	8
POWERPART consumable products	9

2 Specifications

Data and dimensions	28
Thread sealant	57
Recommended torque settings	58
Compression test data	61

3 Cylinder head assembly

General description	63
Rocker cover	
Operation 3-1 To remove	64
Operation 3-2 To fit	65
Rocker assembly	
Operation 3-3 To remove and to fit	66
Operation 3-4 To dismantle and to assemble	67
Operation 3-5 To inspect and to correct	68
Valve tip clearances	
Operation 3-6 To check and to adjust (four cylinder engines)	69
Operation 3-7 To check and to adjust (six cylinder engines)	70
Valve springs	
Operation 3-8 To change the valve springs (with cylinder head fitted)	71
Cylinder head assembly	
Operation 3-9 To remove	73
Operation 3-10 To fit	75
Valves and valve springs	
Operation 3-11 To remove	78
Operation 3-12 To fit	79
Operation 3-13 To inspect and to correct	80
Valve guides	
Operation 3-14 To inspect	81
Operation 3-15 To remove	82
Operation 3-16 To fit	83
Cylinder head	
Operation 3-17 To inspect and to correct	84
Operation 3-18 To correct a valve seat with a valve seat cutter	85
Operation 3-19 To fit valve seat inserts	86

4 Piston and connecting rod assemblies

General description 87

Big end bearing

Operation 4-1 To remove 89

Operation 4-2 To fit 90

Operation 4-3 To inspect 90

Piston and connecting rod

Operation 4-4 To remove 91

Operation 4-5 To fit 92

Operation 4-6 To check the piston height above the cylinder block 94

Operation 4-7 To check piston height grade of a "Fastram" piston 95

Piston rings 96

Operation 4-8 To remove and to fit 97

Piston and connecting rod assembly

Operation 4-9 To dismantle and to assemble 98

Piston and piston rings

Operation 4-10 To inspect 99

Connecting rod

Operation 4-11 To inspect 100

Small end bush

Operation 4-12 To remove and to fit 100

Piston cooling jets

Operation 4-13 To remove and to fit 101

Operation 4-14 To check the jet alignment 102

5 Crankshaft assembly

General description 103

Crankshaft pulley

Operation 5-1 To remove and to fit (four cylinder engines) 105

Crankshaft pulley and damper

Operation 5-2 To remove (six cylinder engines) 106

Operation 5-3 To fit (six cylinder engines) 107

Operation 5-4 To inspect 108

Rear oil seal assembly	110
Operation 5-5 To remove and to fit (one-piece assembly)	111
Operation 5-6 To remove and to fit (two-piece assembly)	114
Operation 5-7 To renew the rear end oil seal (two-piece assembly)	116
Operation 5-8 To remove and to fit a wear sleeve	117
Rear oil seal assembly (engines with a flywheel housing that is oil filled)	
Operation 5-9 To remove	118
Operation 5-10 To fit	119
Operation 5-11 To renew the rear oil seals	121
Operation 5-12 To fit and remove a "Wear-Sleeve"	123
Thrust washers	
Operation 5-13 To check crankshaft end-float	124
Operation 5-14 To remove and to fit	125
Main bearings	
Operation 5-15 To remove (with the crankshaft in position)	126
Operation 5-16 To fit (with the crankshaft in position)	127
Operation 5-17 To inspect	127
Crankshaft	
Operation 5-18 To remove	128
Operation 5-19 To fit	129
Operation 5-20 To inspect	132
Balancer unit	
Operation 5-21 To remove	133
Operation 5-22 To fit	134
Operation 5-23 To dismantle	135
Operation 5-24 To assemble	137
Operation 5-25 To inspect	141
Operation 5-26 To remove and to fit the needle roller bearings	142
Operation 5-27 To remove and to fit the bushes for the balance weights	143

6 Timing case and drive assembly

General description	145
Timing case cover	
Operation 6-1 To remove	146
Operation 6-2 To fit	147
Front oil seal	
Operation 6-3 To remove	148
Operation 6-4 To fit	149
Operation 6-5 To remove and to fit a wear sleeve	151

Idler gear and hub

Operation 6-6 To remove	152
Operation 6-7 To fit	154

Idler gear and hub for the Bendix or Knorr-Bremse compressor 156

Operation 6-8 To remove	156
Operation 6-9 To fit	157

Fuel pump gear

Operation 6-10 To remove	158
Operation 6-11 To fit	159

Camshaft gear

Operation 6-12 To remove	160
Operation 6-13 To fit	161

Crankshaft gear

Operation 6-14 To remove and to fit	162
---	-----

Timing case

Operation 6-15 To remove	163
Operation 6-16 To fit	164

Camshaft and tappets

Operation 6-17 To remove	166
Operation 6-18 To fit	167

7 Cylinder block assembly

General description 169**Cylinder block**

Operation 7-1 To dismantle	170
Operation 7-2 To assemble	171
Operation 7-3 To inspect	173
Operation 7-4 To remove and to fit a new type 'D' plug to the tappet chamber	174

Cylinder liner

Operation 7-5 To inspect	176
Operation 7-6 To recover a glazed liner	177
Operation 7-7 To remove	178
Operation 7-8 To fit a service liner	180
Operation 7-9 To fit a partially finished liner	183

8 Engine timing

Standard operations

- Operation 8-1 To set number 1 piston to TDC on the compression stroke 187
- Operation 8-2 Another method to set number 1 piston to TDC 188
- Operation 8-3 To check the valve timing 189

Engines fitted with Bosch EPVE fuel injection pumps 190

- Operation 8-4 To check the timing of the fuel injection pump (10° or more, static) 191
- Operation 8-5 To check the timing of the fuel injection pump (9° or less, static) 193
- Operation 8-6 To check the timing mark of the fuel injection pump 194
- Operation 8-7 To check the engine timing mark 195
- Operation 8-8 To check the timing of the pin timed fuel injection pump 196

Engines fitted with Bosch MW in-line fuel injection pumps 197

- Operation 8-9 To check the timing of the fuel injection pump 198

Engines fitted with Lucas/Delphi DPA and DPS fuel injection pumps 200

- Operation 8-10 To check the timing of the fuel injection pump 201
- Operation 8-11 To check the timing mark of the fuel injection pump 202
- Operation 8-12 To check the engine timing mark 203
- Operation 8-13 To check the timing of the pin timed fuel injection pump 204

Engines fitted with a Lucas/Delphi DP200 Series fuel injection pump 205

- Operation 8-14 To check the timing of the fuel injection pump 207
- Operation 8-15 To check the timing of the pin timed fuel injection pump 209

Engines fitted with Stanadyne fuel injection pumps 210

- Operation 8-16 To check the timing of the fuel injection pump 211
- Operation 8-17 To check the timing mark of the fuel injection pump 212
- Operation 8-18 To check the engine timing mark 214
- Operation 8-19 To check the timing of the pin timed fuel injection pump 215

9 Aspiration system

General description 217

Turbocharger

- Operation 9-1 To remove 219
- Operation 9-2 To fit 220
- Operation 9-3 To clean the impeller and the compressor casing 222
- Operation 9-4 To remove and to fit the actuator assembly of the waste-gate unit 223
- Operation 9-5 To check and adjust the operation of the waste-gate 224

Turbocharger faults 225

Open engine breather	227
Operation 9-6 To remove, to fit and to clean (early type)	227
Operation 9-7 To clean and to renew (Later type)	228
Operation 9-8 To renew (Latest type)	229
Operation 9-9 To Inspect	230
Closed breather system	231
Operation 9-10 To clean the early closed breather system	232
Operation 9-11 To renew latest closed breather system	233
Operation 9-12 To repair the connection for the latest breather outlet elbow	235
10 Lubrication system	
General description (four cylinder engine lubrication system)	237
General description (six cylinder engine lubrication system)	238
Lubrication system flow diagram	239
Lubrication system flow diagram for the relief valve and balancer	240
Filter canister	
Operation 10-1 To renew	241
Filter head	
Operation 10-2 To remove and to fit	242
Sump	
Operation 10-3 To remove and to fit	243
Oil strainer and suction pipe	
Operation 10-4 To remove and to fit	244
Operation 10-5 To inspect and to correct	245
Lubricating oil pump	
Operation 10-6 To remove	246
Operation 10-7 To fit	247
Operation 10-8 To inspect	248
Operation 10-9 To remove the idler shaft	249
Operation 10-10 Alternative method to remove the idler shaft	250
Operation 10-11 To fit the idler shaft (Six cylinder engines)	251
Operation 10-12 To remove and to fit the idler shaft (four cylinder engines)	252
Relief valve	
Operation 10-13 To remove and to fit	253
Operation 10-14 To dismantle and to assemble	254
Operation 10-15 To inspect	254

Flexible oil pipes

Operation 10-16 To remove	255
Operation 10-17 To fit	256
Operation 10-18 To Inspect	258

11 Fuel system

General description	259
----------------------------	-----

Cold start advance unit	262
--------------------------------	-----

Fuel filter elements

Operation 11-1 Fuel filter element types	264
Operation 11-2 To renew the filter element of the separate element type	265
Operation 11-3 To renew the filter element of the canister type	266
Operation 11-4 To renew the filter element of the quick release canister type	267

Fuel filter canister (Bosch MW fuel injection pump)

Operation 11-5 To renew	268
-------------------------	-----

Atomisers

Operation 11-6 Atomiser fault	269
Operation 11-7 To remove and to fit	269

Fuel lift pump

Operation 11-8 To remove and to fit	270
Operation 11-9 To dismantle	271
Operation 11-10 To assemble	272
Operation 11-11 To test	273

Fuel lift pump (Bosch MW fuel injection pump)

Operation 11-12 To remove and to fit	274
Operation 11-13 To dismantle and assemble	275

Bosch EPVE fuel injection pump (without a locking screw)

Operation 11-14 To remove	276
Operation 11-15 To fit	277

Bosch EPVE fuel injection pump (with a locking screw)

Operation 11-16 To remove	279
Operation 11-17 To fit	281
Operation 11-18 To set	282

Bosch EPVE fuel injection pump

Operation 11-19 To set the injection advance device (KSB)	285
Operation 11-20 To adjust	286
Operation 11-21 General description for pin timed fuel injection pump	287
Operation 11-22 To remove pin timed fuel injection pump	289
Operation 11-23 To fit pin timed fuel injection pump	290
Operation 11-24 To adjust pin timed fuel injection pump	292
Operation 11-25 To eliminate air from the fuel system	293
Operation 11-26 To remove	297
Operation 11-27 To fit	299
Operation 11-28 To adjust the fuel injection pump	303
Operation 11-29 To remove and fit the adaptor plate for the fuel injection pump	304
Operation 11-30 To eliminate air from the fuel system	305

Lucas/Delphi DPA and DPS fuel injection pumps

Operation 11-31 To remove	306
Operation 11-32 To fit	307
Operation 11-33 To adjust	308
Operation 11-34 Electrical shut off solenoid (ESOS)	309
Operation 11-35 To eliminate air from the fuel system	311
Operation 11-36 Standard method	312
Operation 11-37 Self-vent method	313

Lucas/Delphi DP 200 Series fuel injection pump 314

Operation 11-38 To remove	315
Operation 11-39 To fit	317
Operation 11-40 To adjust	318
Operation 11-41 General description for pin timed fuel injection pump	319
Operation 11-42 To remove pin timed fuel injection pump	321
Operation 11-43 To fit pin timed fuel injection pump	322
Operation 11-44 To adjust pin timed fuel injection pump	324
Operation 11-45 Electrical shut off solenoid (ESOS)	325
Operation 11-46 To eliminate air from the fuel system	327

Stanadyne fuel injection pump 329

Operation 11-47 To remove	331
Operation 11-48 To fit	332
Operation 11-49 To adjust	333
Operation 11-50 General description for pin timed fuel injection pump	334
Operation 11-51 To remove pin timed fuel injection pump	335
Operation 11-52 To fit pin timed fuel injection pump	336
Operation 11-53 To adjust pin timed fuel injection pump	338
Operation 11-54 To eliminate air from the fuel system	341

12 Cooling system

General description	343
Thermostats	
Operation 12-1 To remove	344
Operation 12-2 To fit	345
Operation 12-3 To test	346
Coolant pump (gear driven)	347
Operation 12-4 To remove	347
Operation 12-5 To fit	348
Operation 12-6 To dismantle (early engines)	349
Operation 12-7 To assemble (early engines)	350
Operation 12-8 To dismantle (later engines)	353
Operation 12-9 To assemble (later engines)	354
Operation 12-10 To remove and fit pressed steel covers (latest engines)	358
Coolant pump (belt driven)	360
Operation 12-11 To remove	360
Operation 12-12 To fit	362
Operation 12-13 To dismantle	363
Operation 12-14 To assemble	364
Coolant pump (auxiliary)	366
Operation 12-15 To remove and to fit	366
Operation 12-16 To dismantle	367
Operation 12-17 To assemble	368
Fan	
Operation 12-18 To remove and to fit	370
Fan drive	
Operation 12-19 To remove and to fit the early pulley	370
Operation 12-20 To remove and to fit the latest pulley	371
Lubricating oil cooler	
Operation 12-21 To remove and to fit (four cylinder turbocharged engines)	372
Operation 12-22 To remove and to fit (six cylinder engines)	373
Operation 12-23 To remove (six cylinder turbocharged engines)	374
Operation 12-24 To fit (six cylinder turbocharged engines)	376
Operation 12-25 To dismantle and to assemble - six cylinder engines	378
Operation 12-26 To dismantle and to assemble (six cylinder turbocharged engines) ..	380
Operation 12-27 To remove and to fit vertical canister type	381
Operation 12-28 To remove and to fit horizontal canister type	382
Cooler by-pass valve	
Operation 12-29 To remove and to fit	383

Intercooler	384
Operation 12-30 To remove	384
Operation 12-31 To fit	385
Operation 12-32 To clean and to inspect	386

13 Flywheel and housing

General description	387
----------------------------------	-----

Flywheel

Operation 13-1 To remove and to fit	388
---	-----

Ring gear

Operation 13-2 To remove and to fit	390
---	-----

Flywheel housing

Operation 13-3 To remove and to fit	391
---	-----

14 Electrical equipment

Operation 14-1 To check the drive belts	394
Operation 14-2 To adjust belt tension	395
Operation 14-3 To remove and to fit the drive belts	396
Operation 14-4 To remove and to fit the alternator	397
Operation 14-5 To maintain the alternator	397

Alternator fault diagnosis	398
---	-----

Operation 14-6 To remove and to fit	400
Operation 14-7 To maintain the brush gear and the commutator	401
Operation 14-8 To test on the engine	402
Operation 14-9 To remove and to fit a fuelled starting aid	404
Operation 14-10 To remove and to fit a twin fuelled starting	405
Operation 14-11 How to check the fuelled starting aid	406
Operation 14-12 To remove and to fit a port heater	406

15 Auxiliary equipment

Wabco compressors

Operation 15-1 To remove the earliest compressor and drive assembly	408
Operation 15-2 To fit the earliest compressor and drive assembly	409
Operation 15-3 To fit the early compressor and drive assembly	410
Operation 15-4 To fit the early compressor only	412

Compressor drive for Wabco compressors

Operation 15-5 To remove and to fit	413
Operation 15-6 To dismantle	414
Operation 15-7 To assemble	416

Bendix compressors

Operation 15-8 To remove	418
Operation 15-9 To fit	419

Knorr-Bremse compressors

Operation 15-10 To remove	421
Operation 15-11 To fit	422
Operation 15-12 To remove the reed valves	424
Operation 15-13 To fit the reed valves	425
Operation 15-14 To remove the top unloader valve	426
Operation 15-15 To fit the top unloader valve	426
Operation 15-16 To remove the crankshaft / connecting rod / piston / piston rings	427
Operation 15-17 To fit the crankshaft / connecting rod / piston / piston rings	428

Power steering pump

Operation 15-18 To remove and to fit	430
--	-----

Adaptor for a hydraulic pump or a steering pump with a splined drive

Operation 15-19 To remove and to fit	431
Operation 15-20 To dismantle	432
Operation 15-21 To assemble	433

Exhauster

Operation 15-22 To remove and to fit	434
--	-----

16 Special tools

List of special tools	435
-----------------------------	-----

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com