

Troubleshooting

1104D and 1106D Industrial Engines

NH (Engine)
NJ (Engine)
PJ (Engine)

Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Perkins cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Perkins is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Perkins dealers or Perkins distributors have the most current information available.



When replacement parts are required for this product Perkins recommends using Perkins replacement parts.

Failure to heed this warning can lead to premature failures, product damage, personal injury or death.

Table of Contents

Troubleshooting Section

Electronic Troubleshooting

System Overview	5
Glossary	8
Electronic Service Tools	12
Indicator Lamps	13
Replacing the ECM	17
Self-Diagnostics	18
Sensors and Electrical Connectors	18
Engine Wiring Information	25
ECM Harness Connector Terminals	29

Programming Parameters

Programming Parameters	31
Test ECM Mode	31
Factory Passwords	31
Flash Programming	32
Injector Trim File	32
Mode Switch Setup	33
Throttle Setup	34
Multiposition Switch Setup	37

Customer Specified Parameters

Customer Specified Parameters	39
Customer Specified Parameters Table	42
Customer Specified Parameters Worksheet	43

System Configuration Parameters

System Configuration Parameters	44
---------------------------------------	----

Troubleshooting without a Diagnostic Code

Alternator Noise	45
Alternator Will Not Charge	45
Battery	46
Can Not Reach Top Engine RPM	46
Coolant in Engine Oil	48
Coolant Temperature Is Too High	49
ECM Will Not Accept Factory Passwords	50
ECM Will Not Communicate with Other Systems or Display Modules	50
Electronic Service Tool Will Not Communicate with ECM	50
Engine Cranks but Will Not Start	51
Engine Has Early Wear	55
Engine Misfires, Runs Rough or Is Unstable	56
Engine Oil in Cooling System	58
Engine Speed Does Not Change	58
Engine Stalls at Low RPM	59
Engine Vibration	60
Engine Will Not Crank	61
Excessive Black Smoke	62
Excessive Engine Oil Consumption	63
Excessive Fuel Consumption	65
Excessive Valve Lash	67
Excessive White Smoke	67
Intake Air Temperature Is Too High	68
Intermittent Engine Shutdown	69
Intermittent Low Power or Power Cutout	70

Low Engine Oil Pressure	72
Low Power/Poor or No Response to Throttle	73
Mechanical Noise (Knock) in Engine	75
Noise Coming from Cylinder	76

Troubleshooting with a Diagnostic Code

Diagnostic Code Cross Reference	77
No Diagnostic Codes Detected	79
CID 0001 FMI 02	79
CID 0001 FMI 05	80
CID 0001 FMI 06	80
CID 0001 FMI 07	81
CID 0002 FMI 02	81
CID 0002 FMI 05	81
CID 0002 FMI 06	82
CID 0002 FMI 07	82
CID 0003 FMI 02	83
CID 0003 FMI 05	83
CID 0003 FMI 06	84
CID 0003 FMI 07	84
CID 0004 FMI 02	85
CID 0004 FMI 05	85
CID 0004 FMI 06	85
CID 0004 FMI 07	86
CID 0005 FMI 02	86
CID 0005 FMI 05	87
CID 0005 FMI 06	87
CID 0005 FMI 07	88
CID 0006 FMI 02	88
CID 0006 FMI 05	88
CID 0006 FMI 06	89
CID 0006 FMI 07	89
CID 0041 FMI 03	90
CID 0041 FMI 04	90
CID 0091 FMI 02	91
CID 0091 FMI 03	91
CID 0091 FMI 04	92
CID 0091 FMI 08	93
CID 0100 FMI 03	93
CID 0100 FMI 04	94
CID 0100 FMI 10	94
CID 0110 FMI 03	94
CID 0110 FMI 04	95
CID 0168 FMI 00	95
CID 0168 FMI 01	96
CID 0168 FMI 02	96
CID 0172 FMI 03	96
CID 0172 FMI 04	97
CID 0190 FMI 08	97
CID 0247 FMI 09	98
CID 0247 FMI 12	98
CID 0253 FMI 02	99
CID 0261 FMI 11	99
CID 0262 FMI 03	99
CID 0262 FMI 04	100
CID 0268 FMI 02	100
CID 0342 FMI 08	100
CID 0526 FMI 05	101
CID 0526 FMI 06	101
CID 0526 FMI 07	101
CID 0774 FMI 02	102
CID 0774 FMI 03	102
CID 0774 FMI 04	103

Table of Contents

CID 0774 FMI 08	104
CID 1743 FMI 02	104
CID 1779 FMI 05	105
CID 1779 FMI 06	105
CID 1785 FMI 03	105
CID 1785 FMI 04	106
CID 1785 FMI 10	106
CID 1797 FMI 03	107
CID 1797 FMI 04	107
CID 1834 FMI 02	107
CID 2246 FMI 06	108

Troubleshooting with an Event Code

Event Codes	109
E172 High Air Filter Restriction	109
E194 High Exhaust Temperature	109
E232 High Fuel/Water Separator Water Level	110
E360 Low Engine Oil Pressure	110
E361 High Engine Coolant Temperature	112
E362 Engine Overspeed	113
E396 High Fuel Rail Pressure	113
E398 Low Fuel Rail Pressure	114
E539 High Intake Manifold Air Temperature	114
E2143 Low Engine Coolant Level	115

Diagnostic Functional Tests

5 Volt Sensor Supply Circuit - Test	116
Analog Throttle Position Sensor Circuit - Test	123
CAN Data Link Circuit - Test	128
Data Link Circuit - Test	131
Digital Throttle Position Sensor Circuit - Test	137
ECM Memory - Test	144
Electrical Connectors - Inspect	145
Engine Pressure Sensor Open or Short Circuit - Test	149
Engine Speed/Timing Sensor Circuit - Test	155
Engine Temperature Sensor Open or Short Circuit - Test	163
Fuel Rail Pump Solenoid - Test	169
Idle Validation Switch Circuit - Test	173
Ignition Keyswitch Circuit and Battery Supply Circuit - Test	178
Indicator Lamp Circuit - Test	184
Injector Data Incorrect - Test	187
Injector Solenoid Circuit - Test	189
Mode Selection Circuit - Test	199
PTO Switch Circuit - Test	203
Starting Aid (Glow Plug) Relay Circuit - Test	207
Throttle Switch Circuit - Test	210
Wastegate Solenoid - Test	214

Index Section

Index	220
-------------	-----

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com