

Troubleshooting

1106C Genset

PK (Engine)

Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Perkins cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Perkins is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Perkins dealers or Perkins distributors have the most current information available.



When replacement parts are required for this product Perkins recommends using Perkins replacement parts.

Failure to heed this warning can lead to premature failures, product damage, personal injury or death.

Table of Contents

Troubleshooting Section

Electronic Troubleshooting

System Overview	5
Glossary	7
Electronic Service Tools	11
Indicator Lamps	13
Replacing the ECM	16
Self-Diagnostics	17
Sensors and Electrical Connectors	17
Engine Wiring Information	21
ECM Harness Connector Terminals	24

Programming Parameters

Programming Parameters	26
Test ECM Mode	26
ECM Snapshot	26
Factory Passwords	28
Flash Programming	28
Injector Trim File	29
Speed Demand Input Setup	30

Customer Specified Parameters

Customer Specified Parameters	32
Customer Specified Parameters Table	35
Customer Specified Parameters Worksheet	36

System Configuration Parameters

System Configuration Parameters	37
---------------------------------------	----

Troubleshooting without a Diagnostic Code

Alternator Noise	38
Alternator Will Not Charge	38
Battery	39
Can Not Reach Top Engine RPM	39
Coolant in Engine Oil	41
Coolant Temperature Is Too High	42
ECM Will Not Accept Factory Passwords	43
ECM Will Not Communicate with Other Systems or Display Modules	44
Electronic Service Tool Will Not Communicate with ECM	44
Engine Cranks but Will Not Start	45
Engine Has Early Wear	48
Engine Misfires, Runs Rough or Is Unstable	49
Engine Oil in Cooling System	51
Engine Vibration	52
Engine Will Not Crank	53
Excessive Black Smoke	54
Excessive Engine Oil Consumption	56
Excessive Fuel Consumption	57
Excessive Valve Lash	59
Excessive White Smoke	60
Intake Air Temperature Is Too High	61
Intermittent Engine Shutdown	62
Intermittent Low Power or Power Cutout	63
Low Engine Oil Pressure	64
Low Power/Poor or No Response to Throttle	65
Mechanical Noise (Knock) in Engine	68

Noise Coming from Cylinder	68
----------------------------------	----

Troubleshooting with a Diagnostic Code

Diagnostic Code Cross Reference	70
No Diagnostic Codes Detected	72
CID 0001 FMI 02	72
CID 0001 FMI 05	73
CID 0001 FMI 06	73
CID 0001 FMI 07	74
CID 0002 FMI 02	74
CID 0002 FMI 05	74
CID 0002 FMI 06	75
CID 0002 FMI 07	75
CID 0003 FMI 02	75
CID 0003 FMI 05	76
CID 0003 FMI 06	76
CID 0003 FMI 07	77
CID 0004 FMI 02	77
CID 0004 FMI 05	77
CID 0004 FMI 06	78
CID 0004 FMI 07	78
CID 0005 FMI 02	79
CID 0005 FMI 05	79
CID 0005 FMI 06	80
CID 0005 FMI 07	80
CID 0006 FMI 02	80
CID 0006 FMI 05	81
CID 0006 FMI 06	81
CID 0006 FMI 07	82
CID 0041 FMI 03	82
CID 0041 FMI 04	82
CID 0091 FMI 03	83
CID 0091 FMI 04	83
CID 0091 FMI 08	84
CID 0100 FMI 03	84
CID 0100 FMI 04	85
CID 0100 FMI 10	85
CID 0110 FMI 03	86
CID 0110 FMI 04	86
CID 0168 FMI 00	86
CID 0168 FMI 01	87
CID 0168 FMI 02	87
CID 0172 FMI 03	88
CID 0172 FMI 04	88
CID 0190 FMI 08	89
CID 0247 FMI 09	89
CID 0247 FMI 12	89
CID 0253 FMI 02	90
CID 0261 FMI 11	90
CID 0262 FMI 03	90
CID 0262 FMI 04	91
CID 0268 FMI 02	91
CID 0342 FMI 08	91
CID 0526 FMI 05	92
CID 0526 FMI 06	92
CID 0526 FMI 07	92
CID 1779 FMI 05	93
CID 1779 FMI 06	93
CID 1785 FMI 03	93
CID 1785 FMI 04	94
CID 1785 FMI 10	94
CID 1797 FMI 03	95
CID 1797 FMI 04	95

CID 1834 FMI 02	96
CID 2246 FMI 06	96

Troubleshooting with an Event Code

Event Codes	97
E172 High Air Filter Restriction	97
E232 High Fuel/Water Separator Water Level	97
E360 Low Engine Oil Pressure	97
E361 High Engine Coolant Temperature	99
E362 Engine Overspeed	100
E396 High Fuel Rail Pressure	101
E398 Low Fuel Rail Pressure	101
E539 High Intake Manifold Air Temperature	102
E2143 Low Engine Coolant Level	103

Diagnostic Functional Tests

5 Volt Sensor Supply Circuit - Test	104
CAN Data Link Circuit - Test	111
Data Link Circuit - Test	114
ECM Memory - Test	120
Electrical Connectors - Inspect	121
Engine Pressure Sensor Open or Short Circuit - Test	125
Engine Speed/Timing Sensor Circuit - Test	132
Engine Temperature Sensor Open or Short Circuit - Test	140
Fuel Rail Pump Solenoid - Test	145
Ignition Keyswitch Circuit and Battery Supply Circuit - Test	150
Indicator Lamp Circuit - Test	155
Injector Data Incorrect - Test	158
Injector Solenoid Circuit - Test	160
Speed Demand Circuit (Analog) - Test	168
Speed Demand Circuit (Digital) - Test	171
Starting Aid (Glow Plug) Relay Circuit - Test	174
Wastegate Solenoid - Test	178

Index Section

Index	183
-------------	-----

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com