
Perkins 2000 Series

WORKSHOP MANUAL

**6 cylinder diesel engines
for industrial applications**

Publication TPD 3245, Issue 2.

© Proprietary information of Perkins Group Limited, all rights reserved.

The information is correct at the time of print.

Published in September 1999 by Technical Publications,

Perkins Engines Company Limited, Lancaster Road, Shrewsbury, Shropshire, SY1 3NX, England

Contents

10 General information

Introduction	11
New 2000 Series engines	11
Cylinder bore identification	11
Engine identification	12
General safety precautions	13
Safety	14
Engine lift equipment	14
Asbestos joints	14
Dangers from used engine oils	15
Environmental protection	15
Viton seals	15
Practical information	16

11 Specifications

Basic engine data	19
Recommended specific applied torques	22
Recommended nominal applied torques	24

12 Cylinder head assembly

Rocker cover

12-1 To remove and to fit	25
---------------------------------	----

Rocker assembly

12-2 To remove and to fit	26
---------------------------------	----

Tappet clearances

12-3 To check and to adjust	27
-----------------------------------	----

Cylinder head

12-4 To remove and to fit	28
12-5 Procedure for retightening of the cylinder head bolts	31
12-6 To dismantle and to assemble	32
12-7 To clean and to inspect the cylinder head	34
12-8 To renew a valve spring with the cylinder head installed	34
12-9 To correct a valve seat	35
12-10 To remove a valve seat insert	36
12-11 To fit a valve seat insert	36
12-12 To inspect the valve guides	37
12-13 To renew a valve guide	37

Valves, valve springs and valve rotators

12-14 To remove and to fit	38
12-15 To clean and to inspect	38

Fuel injector sleeves

12-16 To remove and to fit	39
----------------------------------	----

Push rods

12-17 To remove and to fit	41
12-18 To inspect	41

Fits and clearances - Rocker assemblies

42

Fits and clearances - Cylinder heads and valve assemblies

43

13 Piston and connecting rod assembly

General description

45

Piston and connecting rod assembly

13-1 To remove and to fit	47
13-2 To dismantle and to assemble	49

Piston and rings	
13-3 To inspect	50
Connecting rod	
13-4 To inspect	50
Small end bushes	
13-5 To renew	51
Fits and clearances	52

14 Crankshaft assembly

General description	57
Damper and pulley - early engines	
14-1 To remove and to fit	58
Damper and pulley - new engines	
14-2 To remove and to fit	59
Crankshaft hub and front oil seal	
14-3 To remove and to fit	60
14-4 To fit a new oil seal to a wheelcase removed from the engine	61
Rear oil seal	
14-5 To remove and to fit	62
Crankshaft	
14-6 To remove and to fit	63
14-7 To inspect	64
Fits and clearances	65

15 Wheelcase and drive assembly

General description	67
Wheelcase	
15-1 To remove and to fit	68
Backplate	
15-2 To remove and to fit	68

<hr/>	
Camshaft gear - bolt-on type	
15-3 To remove and to fit	71
Camshaft gear - integral type	
15-4 To remove and to fit	72
15-5 To inspect	73
Idler gear	
15-6 To remove and to fit	74
15-7 To set the gear backlash	75
Fits and clearances	77
16 Cylinder block assembly	
General description	79
Crankcase	
16-1 To fit to and to remove from a build stand	80
16-2 To dismantle and to assemble	81
16-3 To inspect	90
Cylinder liners	
16-4 To remove and to fit	91
16-5 To clean and to inspect	92
Cam followers	
16-6 To remove and to fit	93
Camshaft	
16-7 To remove and to fit - bolt-on type	94
16-8 To remove and to fit - integral type	95
16-9 To inspect	96
Fits and clearances	97
17 Engine timing	
Valve timing	
17-1 To check	99
Fuel injection pump timing	
17-2 To check and to adjust	100

18 Aspiration system

General description	103
Aspiration system maintenance	103
Turbocharger	
18-1 To remove and to fit	105
18-2 How to check the waste-gate	105
Turbochargers: OE49342, OE50642, OE51140, and OE51430	
18-3 To dismantle and to assemble	106
18-4 To clean and to inspect	108
Turbocharger: OE50674	
18-5 To dismantle and to assemble	109
18-6 To clean and to inspect	111
Turbochargers: OE52534 and OE52535	
18-7 To dismantle and to assemble	112
18-8 To clean and to inspect	114
Inlet manifold	
18-9 To remove and to fit	115
Exhaust manifold	
18-10 To remove and to fit	115

19 Lubrication system

General description	117
Lubricating oil filter	
19-1 To renew the canister	120
By-pass filter/separator	
19-2 To renew the canisters	121
Sump	
19-3 To remove and to fit	122
Sump drain plugs	123
Lubricating oil pump	
19-4 To remove and to fit	124
19-5 To dismantle and to assemble	125
19-6 To inspect	125

Oil pressure relief valve

19-7 To dismantle and to assemble	126
19-8 To inspect	126

20 Fuel system

General description	128
----------------------------------	-----

Overhaul instructions	128
------------------------------------	-----

Fuel injectors

20-1 To remove and to fit	129
20-2 To dismantle and to assemble	131
20-3 To clean and to inspect	131
20-4 To set and to test	133

Fuel lift pumps	135
------------------------------	-----

Single acting type

20-5 To remove and to fit	135
20-6 To dismantle and to assemble	135

Double acting type

20-7 To remove and to fit	136
20-8 To dismantle and to assemble	136
20-9 To test	137

Fuel injection pump

20-10 To remove and to fit	138
20-11 How to eliminate air from the fuel system	141

Air stop cylinder

20-12 How to set the air-operated stop cylinder	142
---	-----

21 Cooling system

General description	143
----------------------------------	-----

Radiator

21-1 To remove and to fit	146
---------------------------------	-----

Fan

21-2 To remove and to fit	147
---------------------------------	-----

Fan drive belts	
21-3 How to check the fan belts	148
21-4 How to adjust the tension of the fan belts	148
Coolant pump	
21-5 To remove and to fit	149
21-6 To dismantle and to assemble	150
21-7 To inspect	153
Thermostat	
21-8 How to check the operating temperatures	154
21-9 How to check the operating speed	155
Oil cooler	
21-10 To dismantle and to assemble	156
21-11 To inspect	157

22 Flywheel and flywheel housing

General description	159
Flywheel	
22-1 To remove and to fit	161
22-2 To inspect	161
Flywheel housing	
22-3 To remove and to fit	162

23 Electrical equipment

General description	163
Alternator drive belts	
23-1 To check and to adjust the tension	165
Alternator	
23-2 To remove and to fit	166
Starter motor	167
23-3 To remove and to fit	167
23-4 To dismantle and to assemble the solenoid switch	167
23-5 To dismantle and to assemble the starter motor	169
23-6 To clean	171
23-7 To inspect and to correct	171
23-8 To test	172
23-9 To fit the main starter cables	172

Engine stop solenoid

23-10 How to adjust the linkage	173
---	-----

24 Auxiliary equipment

Compressor

24-1 To remove and to fit	175
24-2 Compressor gear alignment	177

25 Running-in and test

General description	179
-------------------------------	-----

Running-in and test

25-1 To run the engine	180
25-2 To check the consumption rate of the engine lubricating oil	181

26 List of special tools

Special tools	184
-------------------------	-----

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com