

---

# Perkins 3000 Series

## WORKSHOP MANUAL

**3008/CV8**

8 cylinder diesel engines for industrial applications

The contents of this manual are applicable to both CV8 and 3000 Series - 3008 engines.



---

# Contents

## 10 General information

Introduction .....	16
Bank and cylinder bore identification .....	16
Engine identification .....	16
General safety precautions .....	17
Safety .....	18
Useful information .....	19

## 11 Specifications

Basic engine data	
Engine .....	25
Cooling system .....	26
Fuel system .....	26
Lubrication system .....	27
Induction and exhaust systems .....	27
Electrical equipment .....	27
Auxiliary equipment .....	27

---

## Recommended applied torques

Recommended specific applied torques .....	28
Recommended nominal applied torques .....	30

## 12 Cylinder head assembly

General description .....	31
---------------------------	----

### Pedestal rocker cover

12-1 To remove and to fit .....	32
---------------------------------	----

### Pedestal rocker assembly

12-2 To remove and to fit .....	33
12-3 To dismantle and to assemble .....	35

### Rocker boxes

12-4 To remove and to fit .....	36
12-5 To dismantle and to assemble .....	37
12-6 To inspect and to correct .....	38

### Tappet clearances

12-7 To check and to adjust .....	39
-----------------------------------	----

### Cylinder head assembly

12-8 To remove and to fit .....	41
12-9 To dismantle and to assemble .....	43
12-10 To clean and to inspect the cylinder head .....	44
12-11 To correct a valve seat .....	45
12-12 To remove a valve seat insert .....	46
12-13 To fit a valve seat insert .....	47
12-14 To inspect the valve guides .....	48
12-15 To renew a valve guide .....	49
12-16 To inspect the bridge pieces and guides .....	50
12-17 To renew a bridge piece guide .....	50
12-18 To recondition a fuel injector sleeve .....	51
12-19 To renew a fuel injector sleeve .....	52

### Valves, valve springs and valve rotators

12-20 To remove and to fit .....	56
12-21 To clean and to inspect .....	56

### Push rods

12-22 To remove and to fit .....	57
12-23 To inspect .....	57

---

## Fits and clearances

Rocker boxes .....	58
Cylinder heads and valve gear .....	59

## 13 Pistons and connecting rods

General description .....	61
---------------------------	----

### Big end bearings

13-1 To remove and to fit .....	63
13-2 To inspect .....	64

### Piston and connecting rod assembly

13-3 To remove and to fit .....	65
13-4 To dismantle and to assemble .....	68

### Piston rings

13-5 To remove and to fit .....	69
---------------------------------	----

### Piston and rings

13-6 To inspect .....	69
-----------------------	----

### Connecting rod

13-7 To inspect .....	70
-----------------------	----

Fits and clearances .....	71
---------------------------	----

## 14 Crankshaft assembly

General description .....	77
---------------------------	----

### Crankshaft pulley

14-1 To remove and to fit .....	79
---------------------------------	----

### Front oil seal

14-2 To renew .....	80
---------------------	----

### Rear oil seal assembly

14-3 To renew the oil seal .....	81
14-4 To remove and to fit .....	83

---

## Crankshaft assembly

14-5 To remove and to fit .....	84
14-6 To dismantle and to assemble .....	89
14-7 To clean and inspect .....	90

## Main bearings and thrust washers

14-8 To inspect .....	90
-----------------------	----

## Fits and clearances .....

91

# 15 Timing gears and timing case

## General description .....

93

### Timing case

15-1 To remove and to fit .....	94
15-2 To clean and to inspect .....	95

### Auxiliary drive assembly

15-3 To remove and to fit .....	96
15-4 To dismantle and to assemble .....	99
15-5 To clean and to inspect .....	99

### Double idler gear

15-6 To remove and to fit .....	100
15-7 To dismantle and to assemble .....	101
15-8 To clean and to inspect .....	101

### Idler gear for the lubricating oil pump

15-9 To remove and to fit .....	102
15-10 To clean and to inspect .....	102

## Fits and clearances .....

103

# 16 Cylinder block assembly

## General description .....

105

### Crankcase

16-1 To fit to and to remove from a build stand .....	106
16-2 To dismantle and to assemble .....	107
16-3 To clean, to inspect and to correct .....	113
16-4 To test under pressure .....	113

---

<b>Cylinder liners</b>	
16-5 To clean and to inspect .....	114
<b>Fits and clearances</b> .....	115

## 17 Camshafts and engine timing

<b>General description</b> .....	117
<b>Camshafts</b>	
17-1 To remove and to fit .....	118
17-2 To clean and to inspect .....	118
<b>Engine timing</b>	
17-3 To check the valve timing .....	119
17-4 To check/adjust the timing of the fuel injection pump .....	120
<b>Fits and clearances</b>	
<b>Camshafts in shell bearings</b> .....	121
<b>Camshafts in plain bearings</b> .....	122

## 18 Induction and exhaust system

<b>Engines fitted with a single turbocharger</b>	
<b>General description</b> .....	123
<b>Air cleaners</b>	
18-1 To remove and to fit .....	124
<b>Induction manifolds - two-piece type</b>	
18-2 To remove and to fit .....	125
<b>Induction manifolds - one-piece type</b>	
18-3 To remove and to fit .....	126
<b>Exhaust manifolds</b>	
18-4 To remove and to fit .....	128
18-5 To clean and to inspect .....	128
<b>Turbocharger</b>	
18-6 To remove and to fit .....	129

---

## **Turbocharger: CV6404**

18-7 To dismantle and to assemble .....	130
18-8 To clean and to inspect .....	133

## **Turbocharger: CV17019**

18-9 To dismantle and to assemble .....	134
18-10 To clean and to inspect .....	136

## **Engines fitted with twin turbochargers**

<b>General description .....</b>	<b>137</b>
----------------------------------	------------

<b>Air cleaners and induction manifolds .....</b>	<b>138</b>
---	------------

### **Exhaust manifolds**

18-11 To remove and to fit .....	138
18-12 To clean and to inspect .....	138

### **Turbocharger**

18-13 To remove and to fit .....	139
----------------------------------	-----

## **Turbocharger: CV18504**

18-14 To dismantle and to assemble .....	140
18-15 To clean and to inspect .....	142

# **19 Lubrication system**

<b>General description .....</b>	<b>143</b>
----------------------------------	------------

### **Filter canisters**

19-1 To renew .....	145
---------------------	-----

### **By-pass filter assembly**

19-2 To renew the rotor .....	146
19-3 To remove and to fit .....	146

### **Sump**

19-4 To remove and to fit .....	147
---------------------------------	-----

### **Lubricating oil pump**

19-5 To remove and to fit .....	148
19-6 To dismantle and to assemble .....	149
19-7 To inspect .....	150



---

## Relief valve - integral with oil cooler

19-8 To remove and to fit .....	150
19-9 To inspect .....	150

## 20 Fuel system

General description .....	152
---------------------------	-----

### Primary fuel filter

20-1 To clean .....	153
---------------------	-----

### Fuel filter canister

20-2 To renew .....	153
---------------------	-----

### Fuel injectors

20-3 Fuel injector fault .....	154
20-4 To remove and to fit .....	154
20-5 To dismantle and to assemble .....	155
20-6 To clean and to inspect .....	156
20-7 To set and to test .....	157
20-8 Storage of fuel injectors .....	157

### Fuel lift pump

20-9 To remove and to fit .....	158
20-10 To dismantle and to assemble .....	159
20-11 To inspect .....	159
20-12 To test .....	160

### Fuel injection pump and governor

20-13 To remove and to fit .....	161
----------------------------------	-----

### Fuel injection pump - Bosch S3000

20-14 To dismantle and to assemble .....	164
20-15 To clean and to inspect .....	171

### Special tools - Bosch S3000 .....

171

### Governor - Bosch RQV

20-16 To dismantle and to assemble .....	172
20-17 To inspect and to correct .....	178

### Special tools - Bosch RQV Governor .....

179

20-18 Test procedures for the fuel injection pump and the governor (Bosch S3000 and Bosch RQV) .....	180
---	-----

---

## Governor - AMBAC

20-19 To fit . . . . .	188
20-20 Electrical fault diagnosis . . . . .	189
20-21 Test procedure . . . . .	191

## Fuel system

20-22 How to eliminate air from the fuel system . . . . .	192
---	-----

# 21 Cooling system

<b>General description</b> . . . . .	194
--------------------------------------	-----

## Radiator

21-1 To remove and to fit . . . . .	195
-------------------------------------	-----

## Radiator

21-2 To clean and to inspect . . . . .	196
--	-----

## Coolant pump

21-3 To remove and to fit . . . . .	197
21-4 To dismantle and to assemble . . . . .	198

## Thermostat

21-5 To remove and to fit . . . . .	201
21-6 To clean and to inspect . . . . .	201
21-7 To inspect the thermostats of early engines . . . . .	202
21-8 Emergency action . . . . .	203

## Fan

21-9 To remove and to fit . . . . .	203
-------------------------------------	-----

## Fan adaptor

21-10 To remove and to fit . . . . .	204
21-11 To dismantle and to assemble . . . . .	204
21-12 To check and to adjust the tension of the fan belts . . . . .	205
21-13 How to renew the fan belts . . . . .	205

## Oil cooler - large version

21-14 To remove and to fit . . . . .	206
21-15 To dismantle and to assemble . . . . .	207
21-16 To clean and to inspect . . . . .	208

---

<b>Oil cooler - small version</b>	
21-17 To remove and to fit	209
21-18 To dismantle and to assemble	209
21-19 To clean and to inspect	209
<b>Fits and clearances</b>	210

## 22 Flywheel and flywheel housing

<b>General description</b>	211
<b>Flywheel</b>	
22-1 To remove and to fit	212
22-2 To inspect	212
<b>Starter ring</b>	
22-3 To renew	213
<b>Flywheel housing</b>	
22-4 To remove and to fit	214

## 23 Electrical equipment

<b>General description</b>	215
<b>Precautions</b>	
<b>Alternator drive belt</b>	
23-1 To check	219
23-2 To adjust the tension	219
23-3 To remove and to fit	219
<b>Alternator</b>	
23-4 To remove and to fit	220
<b>Butec type A13 alternator</b>	
23-5 To dismantle and to assemble	221
23-6 To clean	221
23-7 To inspect and to correct	221

---

## Butec type A3024 alternator

23-8 To dismantle and to assemble	223
23-9 To clean	225
23-10 To inspect and to correct the rotor	225
23-11 To remove and to fit the rectifier	226
23-12 To test the main diodes with an ohmmeter or a test lamp	226
23-13 To test the auxiliary diodes	227
23-14 To remove and to fit the D+ and F- wires	227
23-15 To check and to renew the carbon brushes	227
23-16 To inspect the stator and the housing	227
23-17 To inspect the bearings	228
23-18 To renew the bearing at the slip ring end	228
23-19 To renew the bearing at the drive end	228

## Starter motor

23-20 To remove and to fit	229
----------------------------	-----

## Butec MS1A starter motor

23-21 To dismantle and to assemble the solenoid switch	230
23-22 To dismantle and to assemble the starter motor	232
23-23 To clean	234
23-24 To inspect and to correct	234
23-25 To test	235
23-26 To fit the main starter cables	235

## Electrical switches

23-27 To test	236
---------------	-----

## Engine stop solenoid ('energised-to-run')

23-28 To adjust the linkage	237
-----------------------------	-----

# 24 Auxiliary equipment

## Compressor

24-1 To remove and to fit	240
24-2 To dismantle and to assemble	241
24-3 To clean, to inspect and to correct	242

---

## 25 Running-in and test

**General information** ..... 243

### Running-in and test

25-1 To run the engine ..... 243

25-2 To check the consumption rate of the engine lubricating oil ..... 244

## 26 Special tools

**List of special tools** ..... 245

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**