
Perkins 3000 Series

WORKSHOP MANUAL

3012/CV12

12 cylinder diesel engines for industrial applications

The contents of this manual are applicable to both CV12 and 3000 Series - 3012 engines.

*This publication is written in
Perkins Approved Clear English*

PAGE

Contents

10 General information

Introduction	13
Bank and cylinder bore identification	13
Engine identification	13
General safety precautions	14
Safety	15
Useful information	16
Approved lubricants and fluids	21

11 Specifications

Basic engine data	23
Recommended specific applied torques	26
Recommended nominal applied torques	28

12 Cylinder head assembly

General description	29
Pedestal rocker cover	
12-1 To remove and to fit	31

Pedestal rocker assembly	
12-2 To remove and to fit	32
12-3 To dismantle and to assemble	33
Rocker box cover	
12-4 To remove and to fit	34
Rocker box	
12-5 To remove and to fit	34
12-6 To dismantle and to assemble	35
12-7 To inspect and to correct	36
Tappet clearances	
12-8 To check and to adjust	38
Cylinder head assembly	
12-9 To remove and to fit	40
12-10 To dismantle and to assemble	44
12-11 To clean and to inspect the cylinder head	45
12-12 To correct a valve seat	46
12-13 To remove a valve seat insert	47
12-14 To fit a valve seat insert	48
12-15 To inspect the valve guides	49
12-16 To renew a valve guide	50
12-17 To inspect the bridge pieces and guides	51
12-18 To renew a bridge piece guide	51
12-19 To recondition a fuel injector sleeve	52
12-20 To renew a fuel injector sleeve	53
Valves, valve springs and valve rotators	
12-21 To remove and to fit	57
12-22 To inspect and to correct	57
Push rods	
12-23 To remove and to fit	58
12-24 To inspect	58
Fits and clearances - Cylinder heads, rocker assemblies and valves	
Cylinder heads, rocker assemblies and valves (continued)	
60	

13 Pistons and connecting rods

General description	61
Big end bearings	
13-1 To remove and to fit	63
13-2 To inspect	64
Piston and connecting rod assembly	
13-3 To remove and to fit	65
13-4 To dismantle and to assemble	68
Piston rings	
13-5 To remove and to fit	70
Piston and rings	
13-6 To inspect	71
Connecting rod	
13-7 To inspect	71
Fits and clearances - Pistons and connecting rods	
Pistons - 4 rings	72
Piston rings	72
Pistons - 3 rings	74
Piston rings	74
Connecting rods	76

14 Crankshaft assembly

General description	77
Crankshaft pulley, damper and alternator pulley	
14-1 To remove and to fit	78
Front oil seal	
14-2 To renew	79
Rear oil seal	
14-3 To renew	81

Crankshaft

14-4 To remove and to fit	83
14-5 To dismantle and to assemble	88
14-6 To clean and inspect	88

Main bearings and thrust washers

14-7 To inspect	88
-----------------------	----

Fits and clearances	89
---------------------------	----

15 Timing gears and timing case

General description	91
---------------------------	----

Timing gears and auxiliary drive shaft

15-1 To remove and to fit	92
15-2 To clean and to inspect	98

Double idler gear

15-3 To dismantle and to assemble	98
--	----

Auxiliary drive gear

15-4 To dismantle and to assemble	98
--	----

Timing case

15-5 To remove and to fit	99
15-6 To clean and to inspect	100

Fits and clearances	101
---------------------------	-----

16 Crankcase and cylinder liners

General description	105
---------------------------	-----

Crankcase

16-1 To fit to and to remove from a build stand	107
16-2 To dismantle and to assemble	110
16-3 To clean, to inspect and to correct	114
16-4 To test under pressure	115

Cylinder liner

16-5 To clean and inspect	115
---------------------------------	-----

Fits and clearances	116
---------------------------	-----

17 Camshafts and engine timing

General description 119

Camshafts

17-1 To remove and to fit 121

17-2 To clean and inspect 125

Engine timing

17-3 To check the valve timing 126

17-4 To check/adjust the timing of the fuel injection pump 127

Fits and clearances 128

18 Induction and exhaust system

General description 129

Turbocharger

18-1 To remove and to fit 129

18-2 To dismantle and to assemble 131

18-3 To clean and to inspect 134

Exhaust manifold

18-4 To remove and to fit 135

Induction manifold

18-5 To remove and to fit 135

Fits and clearances 136

19 Lubrication system

General description 137

Lubricating oil sump - early engines

19-1 To remove and to fit 139

19-2 To clean and inspect 139

Sump adaptor - early engines

19-3 To remove and to fit 139

19-4 To clean and inspect 140

Single piece lubricating oil sump

19-5 To remove and to fit	140
19-6 To clean and inspect	141

Lubricating oil pump

19-7 To remove and to fit	142
19-8 To dismantle and to assemble	143
19-9 To clean and inspect	144

Heat exchanger (oil to coolant) - early engines

19-10 To remove and to fit	145
19-11 To dismantle and to assemble	146
19-12 To clean and to inspect	146

Mounting adaptor for the heat exchanger - early engines

19-13 To remove and to fit	147
-------------------------------------	-----

Heat exchanger (oil to coolant)

19-14 To remove and to fit	148
19-15 To dismantle and to assemble	149
19-16 To clean and to inspect	150

Relief valve

19-17 To remove and to fit	151
-------------------------------------	-----

20 Fuel system

General description	153
----------------------------	-----

Primary fuel filter

20-1 How to clean the primary fuel filter	156
--	-----

Fuel filter canisters

20-2 How to renew the canisters of the main fuel filter	156
--	-----

Fuel filter head

20-3 To remove and to fit	157
----------------------------------	-----

Mechanical fuel lift pump

20-4 To remove and to fit	158
20-5 To dismantle and to assemble	159
20-6 To test	160

Fuel injectors	
20-7 To remove and to fit	161
20-8 To dismantle and to assemble	162
20-9 To clean and to inspect	163
20-10 To set and to test	165
Fuel injection pump and governor	
20-11 To remove and to fit	166
20-12 To dismantle and to assemble	171
20-13 To inspect	187
20-14 To calibrate the fuel injection pump	189
20-15 To test the fuel injection pump	190
Sizes of spacers (A) available for the tappets	192
Sizes of lower spring plates (A) available	193
Fuel system	
20-16 How to eliminate air from the fuel system	194
21 Cooling system	
General description	195
Radiator	
21-1 To remove and to fit	197
21-2 To clean and to inspect	197
Thermostats	
21-3 To remove and to fit	198
21-4 To clean and to inspect	198
Coolant pump	
21-5 To remove and to fit	199
21-6 To dismantle and to assemble	200
21-7 To clean and to inspect	202
Fan	
21-8 To remove and to fit	203
Fan belts and tensioner pulley	
21-9 To remove and to fit	204

Fan adaptor

21-10 To remove and to fit	205
21-11 To dismantle and to assemble	207
21-12 To clean and to inspect	210

22 Flywheel and flywheel housing

General description	211
-------------------------------	-----

Flywheel

22-1 To remove and to fit	211
22-2 To inspect	211

Starter ring

22-3 To renew	212
-------------------------	-----

Flywheel housing

22-4 To remove and to fit	212
-------------------------------------	-----

23 Electrical equipment

General description	215
-------------------------------	-----

Alternator

23-1 To remove and to fit	218
23-2 To dismantle and to assemble	220
23-3 To clean	221
23-4 To inspect and to correct the rotor	221
23-5 To remove and to fit the rectifier	222
23-6 To test the main diodes with an ohmmeter or a test lamp	222
23-7 To test the auxiliary diodes	223
23-8 To remove and to fit the D+ and F- wires	223
23-9 To check and to renew the carbon brushes	223
23-10 To inspect the stator and the housing	223
23-11 To inspect the bearings	224
23-12 To renew the bearing at the slip ring end	224
23-13 To renew the bearing at the drive end	224

Starter motor

23-14 To remove and to fit	225
23-15 To dismantle and to assemble the solenoid switch	226
23-16 To dismantle and to assemble the starter motor	228
23-17 To clean	230
23-18 To inspect and to correct	230
23-19 To test	231
23-20 To fit the main starter cables	232

Electrical switches

23-21 To test	233
---------------------	-----

Engine stop solenoid (energised to run)

23-22 To adjust the linkage	234
-----------------------------------	-----

Early 3012 engines

235

24 Auxiliary equipment

General description	237
---------------------------	-----

25 Running-in and test

General information	239
---------------------------	-----

Running-in and test

25-1 To run the engine	239
25-2 To check the consumption rate of the engine lubricating oil	240

26 Special tools

List of special tools	241
-----------------------------	-----

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com