CONTENTS

GENERAL INFORMATION	PAGE
INTRODUCTION & LIST OF PERKINS COMPANIES WORLDWIDE	1-2
CONTENTS	3 - 5
BRIEF DESCRIPTION OF THE 4006/8 DIESEL ENGINES	7
PHOTOGRAPHS	INSERT
SAFETY PRECAUTIONS	INSERT
GENERAL INFORMATION	9 - 10
ENGINE DATA	11 - 15
PRESERVATION	16 - 17
INSTALLATION CONSIDERATIONS	18 - 22
LUBRICATING OIL	23 - 24
COOLANT	25
FUEL SPECIFICATION	26
GENERAL OVERHAUL NOTES	27 - 31
THE REMOVAL OF SCALE, CORROSION AND OIL	31
PREPARATORY PROCEDURES	32 - 3 3
COMMISSIONING CHECK LIST	34 - 35
TORQUE SETTINGS	36 - 38
WEAR AND RENEWAL LIMITS	39 - 41
TOOLS	42 - 45
FAULT TRACING CHART	46

CONTENTS

MAINTENANCE PROCEDURES INDEX	SECTION A1
AIR CLEANER	JJ1 - JJ3
AIR SHUT OFF VALVE	B1 - B3
ALTERNATOR (BATTERY CHARGING) CAMSHAFT REMOVAL	V1 - V3
<u> </u>	V1- V3
INSPECTION	
BEARING REPLACEMENT	
REFITTING	N2
CHANGE OVER FUEL FILTERS	M5
CHANGE OVER OIL FILTERS	K3
CHARGE AIR COOLER	F1 - F5
COOLING SYSTEMS (RADIATOR)	F6 - F10
COOLING SYSTEMS (HEAT EXCHANGER)	W1 - W5
CRANKSHAFT AND BEARINGS	200 - 100
REMOVING & REFITTING THE CRANKSHAFT	Q1 - Q5
CYLINDER HEAD (REMOVING)	Q1 - Q5
REMOVING THE EXHAUST MANIFOLD	
REMOVING FUEL AND OIL PIPES	
REMOVING ROCKERS AND ROCKER BOXES	
REMOVING CYLINDER HEAD	R1 - R11
CYLINDER HEAD (OVERHAULING)	חויחוו
REMOVING VALVES	
SERVICING VALVES, SEATS AND GUIDES	
REPLACING VALVES	
REMOVING INJECTOR BUSH	
REPLACING INJECTOR BUSH	
REPLACING CORE PLUGS	R12 - R14
CYLINDER HEAD (REPLACEMENT)	NI2-NI4
CRANKCASE	T1
REMOVING & REPLACING A CYLINDER LINER	S1 & T3
CRANKCASE INSPECTION COVER	Q2
EXHAUST MANIFOLD EXPANSION JOINT	LL1 - LL7
FLEXIBLE COUPLING	X1 - X3
FLYWHEEL AND HOUSING REMOVING FLYWHEEL	X1 - X5
REMOVING FLYWHEEL HOUSING	
REFITTING FLYWHEEL HOUSING	
REFITTING FLYWHEEL	N1
FUEL FILTER AND WATER SEPARATOR	¬ P1
FUEL INJECTION SYSTEM REMOVING INJECTORS	
STRIPPING THE INJECTORS	
CLEANING AND CHECKING	
REASSEMBLING INJECTORS	P2 - P32
	1
TESTING AND SETTING INJECTORS	
FITTING INJECTORS	
CALIBRATION AND TIMING	_
PRIMING FUEL SYSTEM	N3
FUEL LIFT PUMP	INO

.....

MAINTENANCE PROCEDURES INDEX	SECTION
GEARCASE - REMOVAL & REFITTING	U1
GOVERNORS	AA1
HEINZMANN ELECTRONIC GOVERNOR E6 & E6V	AA1 - AA45
WOODWARD PSG HYDRAULIC	AA46 - AA64
GOVERNOR INJECTOR CONTROL LINKAGE	BB1 - BB3
HEAT EXCHANGER COOLING	F6 - F10
IMMERSION HEATERS	MM1 - MM2
OIL FILTERS AND HEADER	M1 - M2
OIL PUMP	G1 - G8
OIL COOLER	L1 - L7
OVERSPEED SWITCH	Y1
SYNCHRO-START STOP SOLENOID	Z1 - Z3
PISTONS AND CONNECTING RODS	S1 - S8
PISTON COOLING JETS	T2 - T3
PROTECTION SWITCH (LOW OIL PRESSURE/HIGH WATER TEMPERATURE)	
RADIATOR COOLING	F1 - F 5
REPEATER RELAY CAV TYPE 381 - 4A	GG1 - GG2
REN VALVE OIL LEVEL CONTROL	NN1 - NN3
RESTRICTION INDICATOR	A2
STARTER MOTOR CAV TYPE S130 AND S152L	C1 - C3
STARTER MOTOR PRESTOLITE TYPE MS1/41 AND MS7/3	C4 - C5
STARTER MOTOR (AIR) INGERSOLL-RAND TYPE SS350	C6 - C8
THERMOSTATS	H1 - H3
TIMING GEARS	U1 - U4
TORSIONAL VIBRATION DAMPER	HH1 - HH4
TURBOCHARGERS	J1 - J4
WATER PUMP (FRESH)	D1 - D6
WATER PUMP (RAW)	E1 - E3

WARNING

READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND WARNINGS MENTIONED IN THIS MANUAL.

IMPROPER OPERATION OR MAINTENANCE PROCEDURES COULD RESULT IN A SERIOUS ACCIDENT OR DAMAGE TO THE EQUIPMENT CAUSING INJURY OR DEATH.

NON-COMPLIANCE WITH THESE INSTRUCTIONS AND THOSE INCLUDED IN THE INSTALLATION MANUAL TSL 4068 MAY INVALIDATE THE WARRANTY OFFERED WITH THE ENGINE.

MAKE QUITE CERTAIN THAT THE ENGINE CANNOT BE STARTED IN ANY WAY BEFORE UNDERTAKING ANY MAINTENANCE, PARTICULARLY IN THE CASE OF AUTOMATICALLY STARTING GENERATING SETS.

The purpose of this Manual is to enable the operator to carry out routine servicing of the engine.

Before undertaking any work on the engine the appropriate section in the Manual should be read fully and completely understood prior to starting work.

The information contained within the manual is based on such information as was available at the time of going to print. In line with Perkins Engines (Stafford) Limited policy of continual development and improvement that information may change at any time without notice. The engine user should therefore ensure that he has the latest information before starting work.

The instructions contained in this Manual will, provided that they are correctly carried out, ensure the safe operation of the equipment.

Users are respectfully advised that it is their responsibility to employ competent persons to operate, maintain and service the equipment in the interest of safety.

Certain overhaul operations are impracticable without the use of special tools, and those operators who are not equipped to undertake major repairs are urged to consult their Perkins distributor.

When not working on the engine, ensure that all covers, blank flanges, doors, etc., are refitted to openings to prevent the ingress of dirt, etc.

Please quote the engine type and serial number with all your enquiries. This will help us to help you. The type and serial number are on a plate fitted to the crankcase.

If any doubt exists regarding the installation, use or application of the engine, the Installation Manual should be consulted for further advice contact Applications Department at Perkins Engines (Stafford) Ltd.

Oil change intervals may be changed according to operating experience by agreement with Perkins Engines (Stafford) Limited and subject to oil analysis being carried out at regular intervals.

Please note that this 4000 Series manual also covers SE engines dispatched from the factory from 1 March 1996. A table of equivalent engine designations is given on page 2.

PERKINS COMPANIES

Perkins Group of Companies Perkins Engines (Peterborough) Ltd.

Frank Perkins Way, Eastfield, Paterborough, PE1 5NA, England. Tel: (01733) 583000

Telex: 32501 PERKEN G Fax: (01733) 582240

Perkins Engines (Shrewsbury) Ltd.

Lancaster Road, Shrewsbury, SY1 3NX, England. Tel: (01743) 212000 Telex: 35171/2 PESL G Fax: (01743) 212700

Perkins Engines (Stafford) Ltd.

Tixall Road, Stafford, ST16 3UB, England.

Tel: (01785) 223141 Telex: 36156 PERKEN G Fax: (01785) 215110

Perkins Powerpart Distribution Centre

Frank Perkins Way. Northbank Industrial Park, Irlam, Manchester, M44 5PP, England. Tel: (0161) 776 5000

Specifications Help Desk Tel: (0161) 776 5151 Fax: (0161) 776 5200 Specifications Help Desk Tel: (0161) 776 5100 Telex: 32501 PERKEN G Perkins International - North America

12025 Tech Center Drive, Livonia, Michigan 48150, U.S.A.

Tel: 313 266 5427 Fax: 313 266 2700

Perkins Engines Latin America Inc.

999 Ponce de Leon Boulevard, Suite 710, Coral Gables, Fiorida 33134, U.S.A. Tel: (305) 442 7413 Telex: 32501 PERKEN G Fax: (305) 442 7419

Perkins Engines Australia Pty Ltd

Suite 2, 364 Main Street, Mornington 3931, Victoria, Australia.

Tel: (059) 75 1877 Telex: 30816 Fax: (059) 75 1305

Motori Perkins SpA

Via Socrate, 8,22070 Casnate Con Bernate (Como), Italy. Tel: 031 56 46 25 / 031 56 46 33 Telex: 380658 PERKIT I Fax: 031 24 90 92 / 031 56 41 45

Perkins Motoren GmbH

D-63801 Kleinostheim, Saalackerstrasse 4, Germany. Tel: (49) (6027) 5010

Fax: (49) (6027) 501130

Moteurs Perkins SA

Parc de Reflets - Paris Nord II, 165 Avenue du Bois de la Pie, BP 40064, 95913 Roissy CDG Cedex, France

Tel: 00 33 149 90 71 72 Fax: 00 33 149 90 71 90

Perkins Engines (Far East) Pte Ltd.

39 Tuas Avenue 13, Singapore 638999. Tel: (65) 861 1318 Fax: (65) 861 6252

In addition to the above companies, there are Perkins distributors in most countries. Perkins Engines (Peterborough) Limited or one of the above companies can provide distributor handbooks Publication No. 1407/4/97

Publication TSL4075

Published by the Technical Publications Department, Stafford. © 1998 Perkins Engines (Stafford) Limited.

PERKINS ENGINES (STAFFORD) ENGINE DESIGNATIONS 4000 SERIES AND SE SERIES EQUIVALENT TERMS

EQUIVALENT TETINIO	
4000 SERIES	SE SERIES
4006TG	6SET
4006TWG	6SETCR
4006TWG3	6SETCR3
4006TAG1	6SETCA1
4006TAG2	6SETCA2
4006TAG3	6SETCA3
4006TEG	6SETCW
4008TWG2	8SETCR2
4008TAG	8SETCA
4008TAG1	8SETCA1
4008TAG2	8SETCA2

4006TG	6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit.
4006TWG	6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler and charge air cooler in engine cooling circuit.
4006TWG3	Up-rated version of the 4006TWG. 6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler and charge air cooler in engine cooling circuit.
4006TAG1	6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit and air cooled charge air cooler in radiator.
4006TAG2	Up-rated version of the 4006TAG1. 6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit and air cooled charge air
4006TAG3	cooler in radiator. Up-rated version of the 4006TAG2. 6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit, and air cooled charge
4006TEG	air cooler in radiator. 6 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit, and water cooled charge air cooler with raw water pump in separate cooling circuit.
4008TWG2	8 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler and charge air cooler in engine cooling circuit.
4008TAG	8 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit and air cooled charge air cooler in radiator.
4008TAG1	Up-rated version of the 4008TAG. 8 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit and air cooled charge air cooler in radiator.
4008TAG2	Up-rated version of the 4008TAG1. 8 cylinder, inline, water cooled, 4 stroke, turbocharged diesel engine, with jacket water cooled oil cooler in engine cooling circuit and air cooled charge air cooler in radiator.

Please Click Here To Download The Complete Manual Download Other Manuals If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com