
Perkins 4000 Series

4006-23 TAG1A, TAG2A and TAG3A Inline diesel engine

WORKSHOP MANUAL

6 cylinder turbo charged diesel engine for electric power applications

Publication TPD 1511E, Issue 1.

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in September 2004 by Technical Publications.

Perkins Engine Company Limited, Peterborough PE1 5NA England



Chapters

- 1 General information
- 2 Specifications
- 3 Cylinder head assembly
- 4 Piston and connecting rod assemblies
- 5 Crankshaft assembly
- 6 Timing case and drive assembly
- 7 Cylinder block assembly
- 8 Engine timing
- 9 Aspiration system
- 10 Lubrication system
- 11 Fuel system
- 12 Cooling system
- 13 Flywheel and housing
- 14 Electrical equipment
- 15 Auxiliary equipment
- 16 Special tools

The following pages contain a detailed table of contents

Contents

1 General information

Introduction	1
Engine views	2
Engine identification	3
General safety precautions	4
Viton seals	5
Engine lift equipment	6
POWERPART recommended consumable products	7

2 Specifications

Basic engine data	9
Data and dimensions	10

3 Cylinder head assembly

General description	17
Rocker box and valve gear	
Operation 3-1 To remove and fit the rocker box and valve gear	18
Valve gear	
Operation 3-2 To inspect rockers, bridge pieces and rocker shaft	20

Operation 3-3 To replace the bridge piece pressure pad	21
Cylinder head	
Operation 3-4 To remove and fit the cylinder head	22
Valves and springs	
Operation 3-5 To remove and fit the valve and the valve springs	24
Operation 3-6 To inspect	26
Valves seats	
Operation 3-7 To remove and fit, and reface the valve seats	27
Valves guides	
Operation 3-8 To remove and fit the valve guides	28
Fuel injector bush	
Operation 3-9 To remove and fit a fuel injector bush	29
Cylinder head	
Operation 3-10 To inspect and pressure test	33
Manifolds	
Operation 3-11 To remove and fit the induction manifold	34
Operation 3-12 To remove and fit the exhaust manifold	35
4 Piston and connecting rod assemblies	
General description	39
Piston and connecting rod	
Operation 4-1 To remove	40
Operation 4-2 To fit	43
Piston rings	
Operation 4-3 To remove	45
Operation 4-4 To fit	46
Piston and connecting rod assembly	
Operation 4-5 To dismantle	47
Operation 4-6 To assemble	47
Piston and piston rings	
Operation 4-7 To inspect	49
Connecting rod	
Operation 4-8 To inspect	50

Small end bush

Operation 4-9 To inspect	51
Operation 4-10 To remove and fit	51

Piston cooling jets

Operation 4-11 To remove	52
Operation 4-12 To fit	53

5 Crankshaft assembly

General description	55
----------------------------------	----

Crankshaft pulley and adaptor

Operation 5-1 To remove	56
Operation 5-2 To fit	57

Crankshaft vibration damper assembly

Operation 5-3 To remove	58
Operation 5-4 To fit	59

Crankshaft

Operation 5-5 To remove	60
Operation 5-6 To fit	61
Operation 5-7 To check the crankshaft end float	63

6 Gearcase and drive assembly

General description	65
----------------------------------	----

Gearcase

Operation 6-1 To remove	66
Operation 6-2 To fit	67

Front oil seal

Operation 6-3 To remove	68
Operation 6-4 To fit	68

Camshaft gear

Operation 6-5 To remove	69
Operation 6-6 To fit	70

Idler gear

Operation 6-7 To remove	71
Operation 6-8 To fit	72
Operation 6-9 To check the hub and renew the idler gear bush	73

Cam followers

Operation 6-10 To remove and fit	74
Operation 6-11 To check	75

Camshaft

Operation 6-12 To remove	76
Operation 6-13 To check the camshaft	77
Operation 6-14 To fit	78
Operation 6-15 To remove and fit the camshaft bush	79

Crankshaft gear

Operation 6-16 To remove	80
Operation 6-17 To fit	81

Back Plate

Operation 6-18 To remove	82
Operation 6-19 To fit	83

7 Crankcase

General Description	85
----------------------------------	----

Crankcase

Operation 7-1 To remove	86
Operation 7-2 To fit	87
Operation 7-3 To inspect	87

Cylinder Liner

Operation 7-4 To inspect	88
Operation 7-5 To remove	89
Operation 7-6 To fit liner	90

8 Engine timing

Operation 8-1 To set number 1 piston to Top Dead Centre (TDC)	91
Operation 8-2 Calibrating fuel injectors	92
Operation 8-3 Setting governor on zero fuel	94
Operation 8-4 Applying pressure to the timing pin	95
Operation 8-5 Timing the fuel injectors	96

9 Aspiration system

General description	99
----------------------------------	----

How to check the air restriction indicator

Operation 9-1 To check and reset	100
--	-----

Air filter element

Operation 9-2 To remove and fit	101
---------------------------------------	-----

Air filter and pipe connection

Operation 9-3 To remove	102
Operation 9-4 To fit	103

Air filter bracket

Operation 9-5 To remove	104
Operation 9-6 To fit	104

Turbocharger 105

Operation 9-7 To remove	106
Operation 9-8 To fit	108

Air pipe connection

Operation 9-9 To remove	110
Operation 9-10 To fit	111

Engine breather

Operation 9-11 To remove breather system	112
Operation 9-12 To fit the breather system	113

10 Lubrication system**General Description** 115**Filter Canister**

Operation 10-1 To renew	117
-------------------------------	-----

Filter head

Operation 10-2 To remove and to fit	118
---	-----

Lubricating oil sump

Operation 10-3 To remove	119
Operation 10-4 To fit	120

Dipstick tube

Operation 10-5 To remove and to fit	121
---	-----

Oil strainer and suction pipe

Operation 10-6 To remove and to fit	122
---	-----

Lubricating oil pump

Operation 10-7 To remove	123
Operation 10-8 To fit	124
Operation 10-9 To dismantle	125
Operation 10-10 To assemble	126
Operation 10-11 To inspect	128

Relief Valve

Operation 10-12 To dismantle and to assemble	129
Operation 10-13 To inspect	130

Fuel lift pump drive unit

Operation 10-14 To renew	131
--------------------------------	-----

Rotor end float

Operation 10-15 To inspect	132
----------------------------------	-----

Drive shaft bearings

Operation 10-16 To remove and to fit	133
--	-----

11 Fuel system

General description	135
----------------------------------	-----

Fuel filter

Operation 11-1 To remove and fit	136
--	-----

Fuel injector unit

Operation 11-2 To remove the fuel injector unit	137
Operation 11-3 To disassemble and to check a fuel injector unit	139
Operation 11-4 To assemble the fuel injector unit	143

To test and set the fuel injector

Operation 11-5 To test and set	146
Operation 11-6 To fit a fuel injector	151

Fuel Lift pump

Operation 11-7 To remove and to fit	152
---	-----

Fuel control shaft

Operation 11-8 To remove	153
Operation 11-9 To inspect	154
Operation 11-10 To fit	155

12 Cooling system

Coolant pipework

Operation 12-1 To remove and fit the coolant pipework	158
---	-----

Thermostat

Operation 12-2 To remove the thermostat	159
Operation 12-3 To fit the thermostat	160
Operation 12-4 To test	161

Thermostat housing

Operation 12-5 To remove and fit the thermostat housing	162
---	-----

Coolant pump

Operation 12-6 To remove the coolant pump	164
Operation 12-7 To fit the coolant pump	166
Operation 12-8 To disassemble the coolant pump	168
Operation 12-9 To assemble the coolant pump	169

Fan Guards

Operation 12-10 To remove and fit	171
---	-----

Fan

Operation 12-11 To remove and fit	171
---	-----

Fan drive belts

Operation 12-12 To check the fan drive belts	172
Operation 12-13 To adjust the fan drive belts	172
Operation 12-14 To remove and fit the drive belts	173

Fan drive

Operation 12-15 To remove and fit	174
---	-----

Lubricating oil cooler

Operation 12-16 To remove	176
Operation 12-17 To fit	177
Operation 12-18 To disassemble and clean the oil cooler tube stack	178
Operation 12-19 To assemble the oil cooler tube stack	179
Operation 12-20 To pressure test the oil cooler	180

Radiator

Operation 12-21 To remove	181
Operation 12-22 To fit	182

13 Flywheel and housing

General description	183
Flywheel	
Operation 13-1 To remove and to fit the flywheel	184
Gear ring	
Operation 13-2 To remove and to fit the gear ring	186
Flywheel Housing	
Operation 13-3 To remove and to fit the flywheel housing	187
Flywheel housing oil seal	
Operation 13-4 To remove and to fit the flywheel housing oil seal	189

14 Electrical equipment

General description	191
Alternator	192
Operation 14-1 To check the drive belts	192
Operation 14-2 To adjust the drive belt tension	193
Operation 14-3 To remove the alternator	193
Operation 14-4 Remove the alternator drive pulley	194
Operation 14-5 To fit the alternator drive pulley	195
Operation 14-6 To fit the alternator	196
Operation 14-7 To maintain	196
Starter motor	197
Operation 14-8 To remove	197
Operation 14-9 To Fit	197
The air starter motor system	198
Operation 14-10 To remove	201
Operation 14-11 To fit	201
Stop solenoid	
Operation 14-12 To remove	202
Operation 14-13 To fit	202
Digital Electronic Governor	203
Description of System	206
Block diagram of the governor system	207

Magnetic pick-up

Operation 14-14 To clean the magnetic pick-up	208
Operation 14-15 To remove the actuator	209
Operation 14-16 To fit	210

Specification of Governor system 211

Operation 14-17 To remove the digital control box	211
Operation 14-18 To Fit the digital control box	211

Feedback Setting

Operation 14-19 To adjust	212
---------------------------------	-----

Configuration 216**External Speed Control Input** 216**Changing the governor configuration** 217

Operation 14-20 To adjust	217
---------------------------------	-----

Single/Parallel Generator (Non Heinzmann Load Sharing)

Operation 14-21 To adjust	218
---------------------------------	-----

Single/Parallel Generator with Droop

Operation 14-22 To adjust	219
---------------------------------	-----

Parallel Generator Heinzmann (SyG02/LMG10-01)

Operation 14-23 To adjust	220
---------------------------------	-----

Parallel Generator Heinzmann Digital Theseus

Operation 14-24 To adjust	221
---------------------------------	-----

Parallel Generator Variable Speed in Droop Range

Operation 14-25 To adjust	222
---------------------------------	-----

Other settings

Operation 14-26 Load Control Settings	223
---	-----

PID parameters

Operation 14-27 To adjust	226
---------------------------------	-----

PID Maps

Operation 14-28 To adjust	227
---------------------------------	-----

Speed Ramps 228**Sectional Speed Ramp**

Operation 14-29 To adjust	229
---------------------------------	-----

External connections – Control box connector	234
Alternative Connections for Speed Setting Inputs	235
Wiring detail, digital control box in IP enclosure – production engines	236
Fault Tracing	237
Error Codes	239
Low oil High water temperature switch	242
Operation 14-30 To remove	242
Operation 14-31 To fit	242
Switch connections	
Operation 14-32 To remove and fit	243
Switch setting	243

15 Auxiliary equipment

Operation 15-1 To remove	246
Operation 15-2 To fit	247
Operation 15-3 To remove	249
Operation 15-4 To fit	250

16 Special tools

List of special tools	252
------------------------------------	-----

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com