

Troubleshooting

1206E-E70TTA Industrial Engine

BL1 (Engine)

Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Perkins cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Perkins is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Perkins dealers or Perkins distributors have the most current information available.



When replacement parts are required for this product Perkins recommends using Perkins replacement parts.

Failure to heed this warning can lead to premature failures, product damage, personal injury or death.

Table of Contents

Troubleshooting Section

Electronic Troubleshooting

Welding Precaution	5
System Overview	5
Glossary	10
Electronic Service Tools	14
Indicator Lamps	16
Replacing the ECM	20
Self-Diagnostics	22
Sensors and Electrical Connectors	22
Engine Wiring Information	27
ECM Harness Connector Terminals	34

Programming Parameters

Programming Parameters	35
Test ECM Mode	35
Factory Passwords	35
Flash Programming	36
Injector Code - Calibrate	37
Mode Switch Setup	38
Throttle Setup	39
Multiposition Switch Setup	42

Customer Specified Parameters

Customer Specified Parameters	43
Customer Specified Parameters Table	50
Customer Specified Parameters Worksheet	53

System Configuration Parameters

System Configuration Parameters	57
---------------------------------------	----

Symptom Troubleshooting

Acceleration Is Poor or Throttle Response Is Poor	59
Alternator Is Noisy	62
Alternator Problem	63
ARD Combustion Supply Air Pressure Is Low	63
ARD Failed to Ignite	65
ARD Is Disabled	69
ARD Loss of Combustion	70
ARD Pilot Fuel Pressure Is High	74
ARD Pilot Fuel Pressure Is Low	77
ARD Temperature Is Low	79
Battery Problem	83
Coolant Contains Oil	83
Coolant Level Is Low	84
Coolant Temperature Is High	85
Cylinder Is Noisy	88
Diesel Particulate Filter Collects Excessive Soot ..	89
Diesel Particulate Filter Has High Ash Load	92
Diesel Particulate Filter Has High Inlet Pressure ..	92
Diesel Particulate Filter Has Low Inlet Pressure ..	94
Diesel Particulate Filter Requires Initial Regeneration	95
Diesel Particulate Filter Temperature Is High	96
Diesel Particulate Filter Temperature Is Low	98
ECM Does Not Communicate with Other Modules	99

ECM Will Not Accept Factory Passwords	100
Electronic Service Tool Does Not Communicate ..	100
Engine Cranks but Does Not Start	101
Engine Does Not Crank	104
Engine Has Early Wear	105
Engine Has Mechanical Noise (Knock)	106
Engine Misfires, Runs Rough or Is Unstable	107
Engine Overspeeds	110
Engine Shutdown Occurs Intermittently	111
Engine Speed Does Not Change	112
Engine Stalls at Low RPM	113
Engine Top Speed Is Not Obtained	115
Engine Vibration Is Excessive	118
Exhaust Has Excessive Black Smoke	119
Exhaust Has Excessive White Smoke	122
Fuel Consumption Is Excessive	124
Fuel Contains Water	126
Fuel Rail Pressure Problem	127
Fuel Temperature Is High	132
Inlet Air Is Restricted	133
Inlet Air Temperature Is High	134
Intake Manifold Air Pressure Is High	135
Intake Manifold Air Pressure Is Low	136
Intake Manifold Air Temperature Is High	138
NRS Exhaust Gas Temperature Is High	139
NRS Mass Flow Rate Problem	142
Oil Consumption Is Excessive	144
Oil Contains Coolant	146
Oil Contains Fuel	146
Oil Pressure Is Low	147
Power Is Intermittently Low or Power Cutout Is Intermittent	150
Valve Lash Is Excessive	152

Troubleshooting with a Diagnostic Code

Diagnostic Trouble Codes	154
Diagnostic Code Cross Reference	161
No Diagnostic Codes Detected	166

Troubleshooting with an Event Code

Event Codes	167
-------------------	-----

Diagnostic Functional Tests

5 Volt Sensor Supply Circuit - Test	169
Analog Throttle Position Sensor Circuit - Test	179
ARD Fuel Supply - Test	184
ARD Ignition - Test	191
ARD Nozzle - Test	206
ARD Nozzle Heater - Test	209
CAN Data Link Circuit - Test	226
Data Link Circuit - Test	230
Diesel Particulate Filter Identification Signal - Test	236
Digital Throttle Position Sensor Circuit - Test	242
ECM Memory - Test	251
Electrical Connectors - Inspect	251
Engine Pressure Sensor Open or Short Circuit - Test	256
Engine Speed/Timing Sensor Circuit - Test	268
Engine Temperature Sensor Open or Short Circuit - Test	275
Engine Temperature Sensor Open or Short Circuit - Test	282

Table of Contents

Ether Starting Aid - Test	291
Fuel Pump Relay Circuit - Test	295
Glow Plug Starting Aid - Test	303
Idle Validation Switch Circuit - Test	309
Ignition Keyswitch Circuit and Battery Supply Circuit - Test	315
Indicator Lamp Circuit - Test	322
Injector Data Incorrect - Test	325
Injector Solenoid Circuit - Test	327
Mode Selection Circuit - Test	333
Motorized Valve - Test	337
PTO Switch Circuit - Test	345
Sensor Calibration Required - Test	348
Solenoid Valve - Test	351
Soot Sensor - Test	360
Throttle Switch Circuit - Test	364
Valve Position Sensor - Test	368
Water In Fuel Sensor - Test	379

Index Section

Index	383
-------------	-----

Troubleshooting Section

Electronic Troubleshooting

104029202

Welding Precaution

Correct welding procedures are necessary in order to avoid damage to the following components:

- Electronic Control Module (ECM) on the engine
- Clean Emissions Module (CEM)
- Sensors
- Associated components

Components for the driven equipment should also be considered. When possible, remove the component that requires welding. When welding on an engine that is equipped with an ECM and removal of the component is not possible, the following procedure must be followed. This procedure minimizes the risk to the electronic components.

1. Stop the engine. Remove the electrical power from the ECM.
2. Ensure that the fuel supply to the engine is turned off.
3. Disconnect the negative battery cable from the battery. If a battery disconnect switch is installed, open the switch.
4. Disconnect all electronic components from the wiring harnesses. Include the following components:
 - Electronic components for the driven equipment
 - ECM
 - Sensors
 - Electronically controlled valves
 - Relays
 - Aftertreatment ID module

NOTICE

Do not use electrical components (ECM or ECM sensors) or electronic component grounding points for grounding the welder.

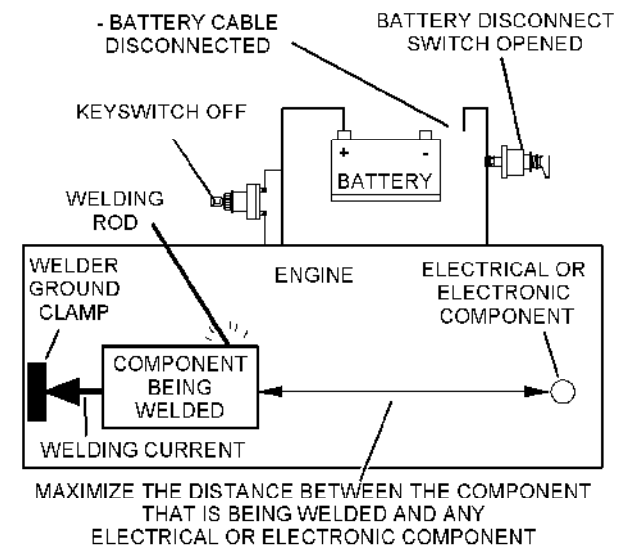


Illustration 1

g01143634

Service welding guide (typical diagram)

5. When possible, connect the ground clamp for the welding equipment directly to the engine component that will be welded. Place the clamp as close as possible to the weld. Close positioning reduces the risk of welding current damage to the engine bearings, to the electrical components, and to other components.
6. Protect the wiring harnesses from welding debris and/or from welding spatter.
7. Use standard welding procedures to weld the materials together.

103769809

System Overview

The engine has an electronic control system. The system controls the engine and the Aftertreatment Regeneration Device (ARD). The system monitors the Diesel Particulate Filter (DPF).

The control system consists of the following components:

- Electronic Control Module (ECM)
- Software (flash file)
- Wiring
- Sensors
- Actuators

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com