

Troubleshooting

2206-E13 Industrial Engine

TGB (Engine)
TGD (Engine)
TGF (Engine)

Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Perkins cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Perkins is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Perkins dealers or Perkins distributors have the most current information available.



When replacement parts are required for this product Perkins recommends using Perkins replacement parts.

Failure to heed this warning can lead to premature failures, product damage, personal injury or death.

Table of Contents

Troubleshooting Section

Electronic Troubleshooting

System Overview	5
Glossary	7
Electronic Service Tools	10
Replacing the ECM	12
Self-Diagnostics	13
Sensors and Electrical Connectors	14
Engine Wiring Information	18

Programming Parameters

Programming Parameters	21
Factory Passwords	21
Flash Programming	21
Injector Trim File	22

System Configuration Parameters

System Configuration Parameters	24
---------------------------------------	----

Troubleshooting without a Diagnostic Code

Alternator Noise	31
Alternator Will Not Charge	31
Battery	31
Can Not Reach Top Engine RPM	32
Coolant in Engine Oil	33
Coolant Temperature Is Too High	34
ECM Will Not Accept Factory Passwords	34
ECM Will Not Communicate with Other Systems or Display Modules	34
Electronic Service Tool Will Not Communicate with ECM	35
Engine Cranks but Will Not Start	36
Engine Has Early Wear	37
Engine Misfires, Runs Rough or Is Unstable	38
Engine Oil in Cooling System	39
Engine Vibration	39
Engine Will Not Crank	40
Excessive Black Smoke	40
Excessive Engine Oil Consumption	41
Excessive Fuel Consumption	42
Excessive Valve Lash	43
Excessive White Smoke	43
Fuel Dilution of Engine Oil	44
Intermittent Engine Shutdown	45
Low Engine Oil Pressure	46
Low Power	46
Mechanical Noise (Knock) in Engine	47
Noise Coming from Cylinder	48
Poor Acceleration or Response	49
Valve Rotator or Spring Lock Is Free	50

Troubleshooting with a Diagnostic Code

Diagnostic Codes	51
Diagnostic Code Cross Reference	52
CID 0001 FMI 11	54
CID 0002 FMI 11	54
CID 0003 FMI 11	55
CID 0004 FMI 11	55

CID 0005 FMI 11	55
CID 0006 FMI 11	56
CID 0041 FMI 03	56
CID 0041 FMI 04	56
CID 0091 FMI 08	57
CID 0100 FMI 03	57
CID 0100 FMI 04	57
CID 0110 FMI 03	57
CID 0110 FMI 04	58
CID 0168 FMI 02	58
CID 0172 FMI 03	58
CID 0172 FMI 04	59
CID 0174 FMI 03	59
CID 0174 FMI 04	59
CID 0190 FMI 02	59
CID 0190 FMI 09	60
CID 0190 FMI 11	60
CID 0190 FMI 12	60
CID 0247 FMI 09	61
CID 0248 FMI 09	61
CID 0253 FMI 02	61
CID 0254 FMI 12	62
CID 0261 FMI 13	62
CID 0262 FMI 03	62
CID 0262 FMI 04	62
CID 0268 FMI 02	63
CID 0273 FMI 03	63
CID 0273 FMI 04	63
CID 0274 FMI 03	63
CID 0274 FMI 04	64
CID 0342 FMI 02	64
CID 0342 FMI 11	64
CID 0342 FMI 12	65
CID 0799 FMI 12	65
CID 1690 FMI 08	65

Troubleshooting with an Event Code

Event Codes	67
E162 High Boost Pressure	69
E360 Low Engine Oil Pressure	70
E361 High Engine Coolant Temperature	71
E362 Engine Overspeed	72
E363 High Fuel Supply Temperature	72
E368 High Intake Manifold Air Temperature	73

Diagnostic Functional Tests

5 Volt Engine Pressure Sensor Supply Circuit - Test	75
CAN Data Link Circuit - Test	81
Data Link Circuit - Test	85
ECM Memory - Test	88
Electrical Connectors - Inspect	90
Electrical Power Supply Circuit - Test	94
Engine Pressure Sensor Open or Short Circuit - Test	97
Engine Speed/Timing Sensor Circuit - Test	103
Engine Temperature Sensor Open or Short Circuit - Test	110
Indicator Lamp Circuit - Test	115
Injector Solenoid Circuit - Test	119
Speed Control (Analog) - Test	126
Speed Control (PWM) - Test	129
Switch Circuits - Test	134

Calibration Procedures

Engine Speed/Timing Sensor - Calibrate 138

Index Section

Index 140

Troubleshooting Section

Electronic Troubleshooting

i02547521

System Overview

System Operation

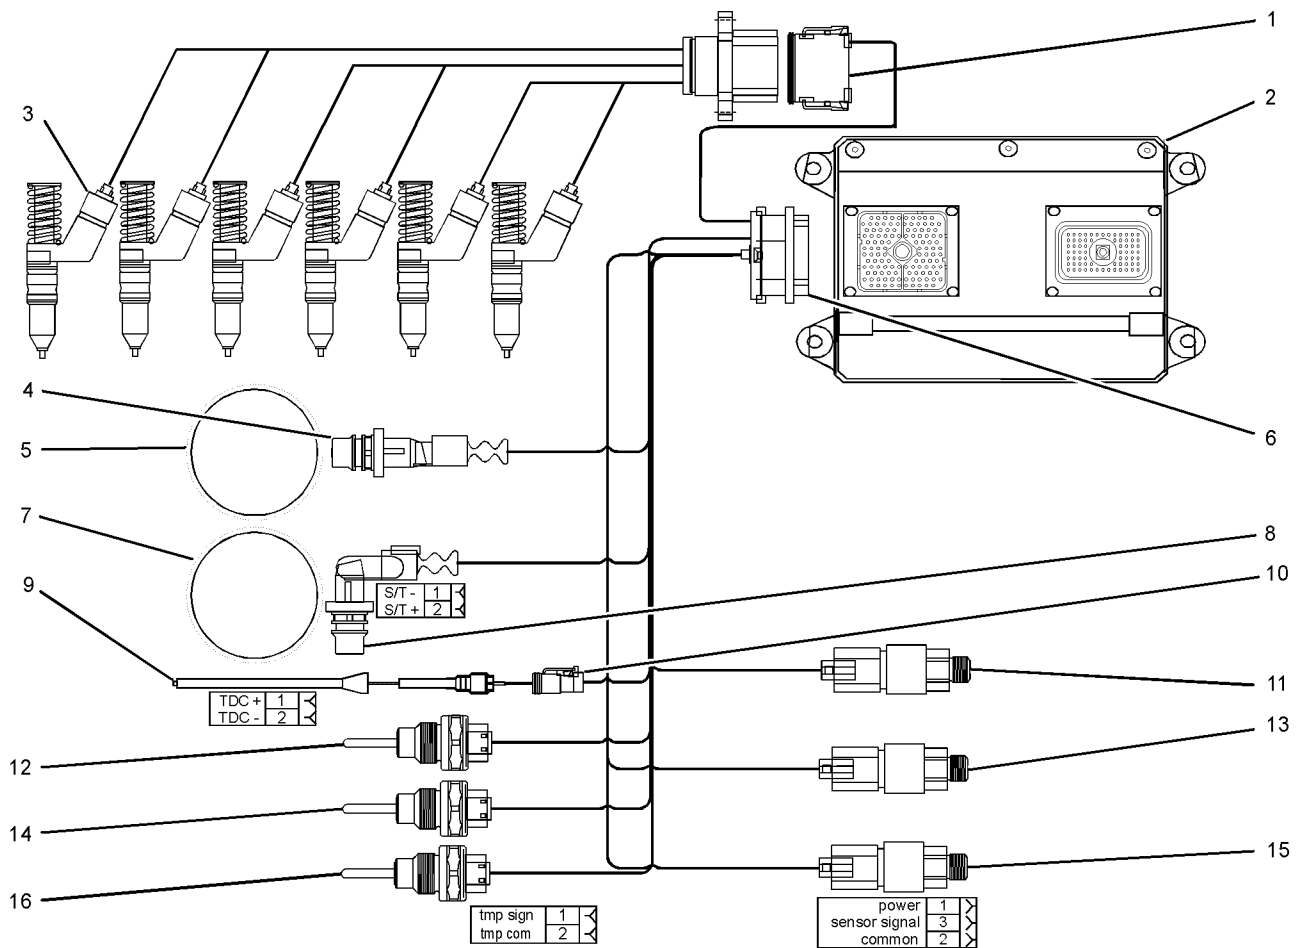


Illustration 1

g01277565

Block diagram for the 2506-15 engine

- (1) 12 Pin Connector
- (2) Electronic Control Module (ECM)
- (3) Electronic Unit Injectors
- (4) Crankshaft Position Sensor
- (5) 36 - 1 Tooth Gear
- (6) 120 Pin Connector
- (7) 36 + 1 Tooth Gear
- (8) Camshaft Position Sensor
- (9) Timing Calibration Probe
- (10) Timing Calibration Probe Connector
- (11) Atmospheric Pressure Sensor
- (12) Inlet Manifold Temperature Sensor
- (13) Inlet Manifold Pressure Sensor
- (14) Coolant Temperature Sensor
- (15) Engine Oil Pressure Sensor
- (16) Fuel Temperature Sensor

This engine is electronically controlled. Each cylinder has an electronic unit injector. The Electronic Control Module (ECM) sends a signal to each injector solenoid in order to control the operation of the fuel injection system.

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com