 


SERVICE MANUAL



JCB SERVICE © ROCESTER, STAFFORDSHIRE, ST14 5LS. ENGLAND.

TEL. ROCESTER (0889) 590312

Printed'in England.

Contents

General	1
Hydraulics	2
Attachments	3
Body & Framework	4
Gearboxes	5
Track & Running Gear	6
Engine	7
Electrics	8
Index	

9803/318



805,805B 806B,807B 808

Introduction

This publication is designed for the benefit of JCB Distributor Service Engineers who are receiving, or have received training by the JCB Technical Training Department.

It is assumed that such personnel have at least a sound knowledge of workshop practice, safety procedures and general techniques associated with the maintenance and repair of hydraulic earthmoving equipment. Details of such are therefore generally omitted from this manual, the intention being to convey only the more specialised information concerning particular aspects of the machine or component in question.

For example, renewal of oil seals, gaskets etc. and any component showing obvious wear or damage is expected as a matter of course and information on these matters is therefore only included where a specialised procedure or range of wear tolerances is required. Similarly, it is expected that components will be thoroughly cleaned and lubricated where appropriate, also that any opened hose or pipe connections will be blanked to prevent entry of dirt and excessive loss of hydraulic fluid.

For convenience the manual is compiled in sections, e.g. "Hydraulics", "Gearboxes" etc., but to find details of a specific component, reference should be made to the alphabetical index at the back of the book.

Illustrations showing a dismantled component are numbered as a guide to the dismantling sequence which can generally be reversed for assembly.

Torque settings quoted are given as 'mean' figures which may be varied by \pm 3%. 'Left Hand' and 'Right Hand' are as viewed from the rear of the machine.

Replacement or additional pages for this manual will be issued from time to time and should be inserted in place of the existing pages which should be removed and destroyed.

Where possible, revised pages will bear an asterisk (*) against the new information, the page issue number in the bottom right hand corner being similarly marked.

A Service Tools Catalogue, detailing special tools required, is available separately.

CATALOGUE / MANUAL — REPLACEMENT

805,805B,806B,807B,808 Service Manual	4th Set July 1981	Publication No. 9803/3150

These pages should be inserted immediately in their correct positions, and pages of a lower issue No. removed and destroyed. The total contents of this publication can be checked using the index below. Retain index at front of book. Replacement pages issued in this set are indicated by an asterisk *

Page No.	Issue	Page No.	Issue	Page No.	Issue	Page No.	Issue
Contents	1	8-1	2	17-7	1*	Section 5	
- 3		8-2	2	17-8	1*	1-1	1
Section 1		8-3	1	17-9	1*	1-2	1
1-1	4*	8-4	1	17-10	1*	1-3	1
2-1	2	8–5	2*	17-11	1*	2-1	1
2-2	2	8-6	1*	17-12	1*	2-2	1
3-1	2	8-7	1*	17-13	1*	2-3	1
3–2	3	9-1	1	17-14	1*	2-4	1
20.7		9-2	1	18-1	1	2-5	1
Section 2		9-3	1	18-2	1	3-1	1
1-1	1	10-1	2	18-3	2	3-2	1
1-2	3	10-2	2	19-1	2	3-3	1
1-2A	Deleted	10-3	1	20-1	3	4-1	2
1-3	3*	10-4	1	20-2	2	5-1	1
1-4	1*	10-5	1	20-3	1	6-1	1
1-5	1*	11-1	1	21-1	2	6-2	2
2-1	3	11-2	1	21-2	1		
2-2	3	11-3	1	21-3	1	Section 6	
2-3	1	12-1	1	22-1	1	1-1	1
3-1	2	12-2	1	22-2	1	2-1	1
3-2	Deleted	12-3	1	22-3	1	2-2	1
3-3	Deleted	13-1	1	22-4	1	3-1	1
3-4	Deleted	13-1	1	22-5	1	4-1	1
3-5	Deleted	14-1	1	22-6	1	4-2	1
3-6	Deleted	14-2	4	22-7	1	5-1	1
3-7	Deleted	14-3	1	22-8	1	6-1	1
3-8	Deleted	15-1	2*	22-9	1	6-2	1
3-9	Deleted	15-2	2	22-10	1	-	
4-1	2	15-3	2	22-11	1	Section 7	
4-2	Deleted	15-4	1	23-1	1	1-1	3*
4-3	Deleted	16-1	1*	23-2	1	2-1	1
5-1	1	16-2	1*	23-3	1	2-2	1
5-2	2	16-3	1*			3-1	1
5-3	1	16-4	1*	Section 3		4-1	1
5-4	2	16-5	1*	1-1	1	4-2	1
5-5	1	16-6	1*	2-1	1	4-3	1
6-1	1	16-7	1*	2-2	1	4-4	1
6-2	1	16-8	1*			4-5	1
6-3	1	16-9	1*	Section 4		5-1	1
6-4	1	16-10	1*	1-1	1	6-1	3*
6-5	1	16-11	1*	2-1	1	7-1	1
6-6	2	17-1	1*	2-2	1	8-1	1
6-7	1	17-2	1*	3-1	1	8-2	1
6-8	1	17-3	1*	4-1	1		
6-9	1	17-4	1*	4-2	1		
7-1	1	17-5	1*	4-3	2		
7-2	2	17-6	1*	4-4	1		

16/9/81

Section 8 1-1	Page No. Issue	Page No. Issue	Page No. Issue	Page No. Issue
1-1 1 2-1 1 2-2 1 2-3 1 2-4 1 2-5 1 2-6 1 3-1 1 4-1 1 5-1 1 5-1 1 5-2 1 6-1 1 7-1 1 7-2 1 8-1 1 9-1 1 9-2 1 1 9-2 1 1 1 1 1 4* iii 4* iii 4* iiv 4* iv 4*	Section 8			
2-1 1 2-2 1 2-3 1 2-4 1 2-5 1 2-6 1 3-1 1 4-1 1 5-1 1 5-2 1 6-1 1 7-1 1 7-2 1 8-1 1 9-1 1 9-2 1 Index i				
2-2 1 2-3 1 2-4 1 2-5 1 2-6 1 3-1 1 4-1 1 5-1 1 5-2 1 6-1 1 7-1 1 8-1 1 9-1 1 9-2 1 Index i 4* ii 4* iii 4* iv 4* v 4*				
2-3 1 2-4 1 2-5 1 2-6 1 3-1 1 4-1 1 5-1 1 5-2 1 6-1 1 7-2 1 8-1 1 9-1 1 9-2 1 Index i				
2-4 1 2-5 1 2-6 1 3-1 1 4-1 1 5-1 1 5-2 1 6-1 1 7-1 1 7-2 1 8-1 1 9-2 1 Index i				
2-6				
3-1 1 4 4-1 1 5-1 1 1 5-2 1 6-1 1 7-1 1 7-2 1 8-1 1 9-1 1 9-2 1 1				
4-1 1 5-1 1 5-2 1 6-1 1 7-1 1 7-2 1 8-1 1 9-1 1 9-2 1 Index i 4* ii 4* ii 4* ii 4* iv 4* v 4*	2-6 1			
5-1 1 1 5-2 1 6-1 1 7-1 1 7-2 1 8-1 1 9-2 1	3-1 1			
5-2				
6-1 1 7-1 1 7-2 1 8-1 1 9-1 1 9-2 1 Index i 4* ii 4* iii 4* v 4* v 4*				
7-1 1 7-2 1 8-1 1 9-1 1 9-2 1 Index i 4* ii 4* iii 4* iv 4* v 4*				
7-2				
8-1 1 9-1 1 9-2 1 Index i 4* ii 4* iii 4* iv 4* v 4*				
9-1 1 9-2 1 Index i 4* ii 4* iii 4* iii 4* v 4* v 4*				
9-2				
Index i				
i 4* ii 4* iii 4* iv 4* v 4*	9–2			
i 4* ii 4* iii 4* iv 4* v 4*	Index			
ii 4* iii 4* iv 4* v 4*				
iv 4* v 4*	ii 4*			
v 4*	iii 4*			
	v 4*			
			and the same of the same of	
			ALC: NAME OF THE PARTY OF THE P	
			100 TO 10	


CATALOGUE / MANUAL - REPLACEMENT PAGES

805,805B,806B,807B,808 Service Manual	3rd Set March 1981	Publication No. 9803/3150	
--	--------------------	---------------------------	--

These pages should be inserted immediately in their correct positions, and pages of a lower issue No. removed and destroyed. The total contents of this publication can be checked using the index below. Retain index at front of book. Replacement pages issued in this set are indicated by an asterisk *

Contents Section 1	1						
Section 1		8-2	2*	22-9	1*	4-2	1
Section 1		8-3	1*	22-10	1*	5-1	1
50001011		8-4	1*	22-11	1*	6-1	1*
1-1	3*	8-5	1*	23-1	1*	6-2	1*
2-1	2	9-1	1	23-2	1*		
2-2	2	9-2	1	23-3	1*	Section 7	
3-1	2	9-3	1			1-1	2*
3-2	3*	10-1	2	Section 3		2-1	1
		10-2	2	1-1	1	2-2	1
Section 2		10-3	1	2-1	1	3-1	1
1-1	1	10-4	1	2-2	1	4-1	1
1-2	3	10-5	1			4-2	1
1-2A	2*	11-1	1	Section 4		4-3	1
1-3	2	11-2	1	1-1	1	4-4	1
2-1	3*	11-3	1	2-1	1	4-5	1
2-2	3*	12-1	1	2-2	1	5-1	1
2-3	1*	12-2	1	3-1	1	6-1	2*
3-1	2*	12-3	1	4-1	1	7-1	1
3-2	Deleted	13-1	1	4-2	1	8-1	1
3-3	Deleted	13-2	1	4-3	2*	8-2	1
3-4	Deleted	14-1	1	4-4	1	0-2	
3-5	Deleted	14-2	4*			Section 8	
3-6	Deleted	14-3	1	Section 5		Section 6	
3-7	Deleted	15-1	1	1-1	1	1-1	1
3–8	Deleted	15-2	2	1-2	1	2-1	1
3-9	Deleted	15-3	2	1-3	1*	2-2	1
4-1	2*	15-4	1	2-1	1	2-3	1
4-2	Deleted	16-1	Deleted	2-2	1	2-4	1
4-3	Deleted	18-1	1*	2-3	1	2-5	1
5-1	1	18-2	1	2-4	1	2-6	1
5-2	2	18-3	2*	2-5	1	3-1	1
5-3	1	19-1	2	3-1	1	4-1	1
5-4	2	20-1	3*	3–2	1	5-1	1
5-5	1	20-2	2*	3–3	1	5-2	1
6-1	1	20-3	1*	4-1	2	6-1	1
6-2	1	21-1	2*	5-1	1	7-1	1
6-3	1	21-2	1*	6-1	1	7-1	1
6-4	1	21-3	1*	6-2	2*	8-1	1
6-5	1	22-1	1*	5-2	-	9-1	1
6-6	2*	22-2	1*			9-1	1
6-7	1	22-3	1*	Section 6		3-2	
6-8	1	22-4	1*	1–1	1	Index	
6-9	1	22-5	1*	2-1	1		3*
7-1	1	22-6	1*	2-1	1	i	3*
7-2	2*	22-7	1*	3–1	1	ii	3*
8-1	2*	22-8	1*	3-1 4-1		III 	
0-1	2	22-0		4-1	1	iv v	3*

3

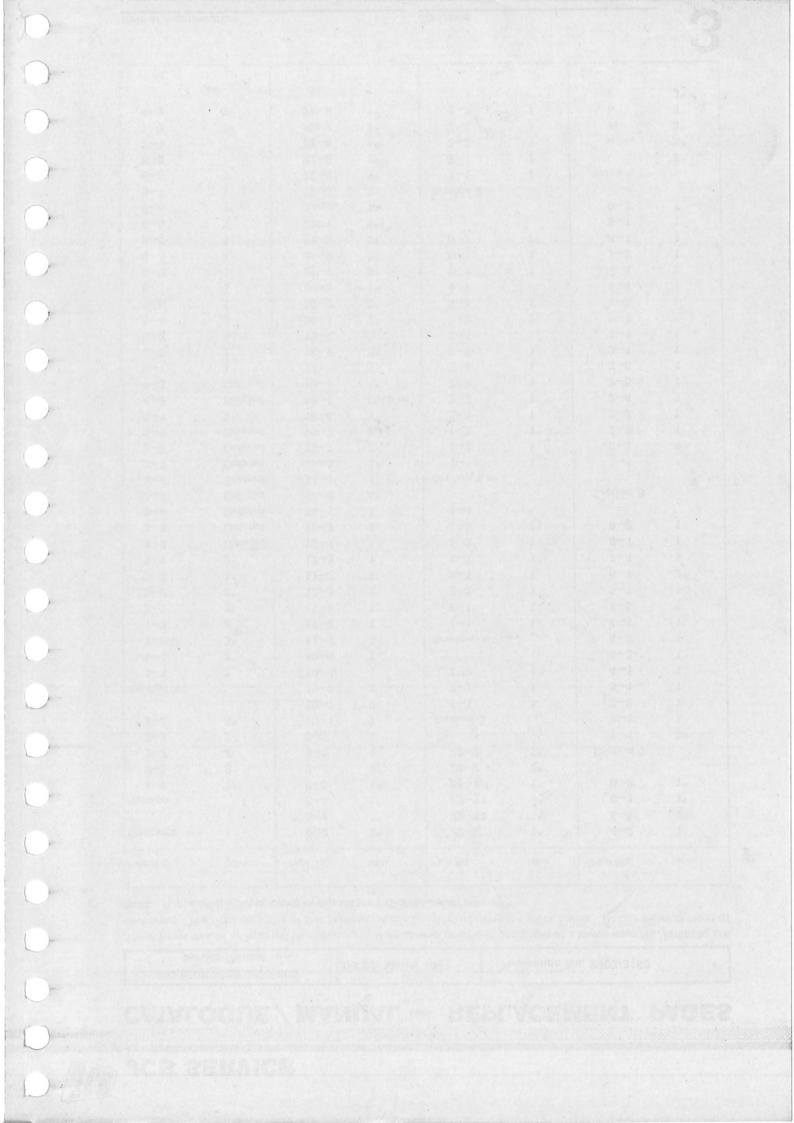

CATALOGUE / MANUAL - REPLACEMENT PAGES

805,805B,806B,807B,808	2nd Set January 1980	Publication No. 9803/3150
Service Manual		. 41511-0411-011-11-01-01-01-01-01

These pages should be inserted immediately in their correct positions, and pages of a lower issue No. removed and destroyed. The total contents of this publication can be checked using the index below. Retain index at front of book. Replacement pages issued in this set are indicated by an asterisk *

Page No.	Issue	Page No.	Issue	Page No.	Issue	Page No.	Issue
Contents	1	9-3	11	Section 5		Section 8	
		10-1	2	1-1	1/	1-1	1/
Section 1		10-2	2/	1 2	1/	2-1	1/
1–1	23*	10-3	1/	2-11-3	11*	2-2	1/
2-1	2/	10-4	1	2-2	1/		
2-2-	2		1/		1/	2–3	1/
	2'	10-5	1	2-3	1	2–4	1
3-1	23*	11-1	1	2-4	1	2–5	1
3-2	2 24	11-2	/	2-5	10	2–6	1/
		11-3	1/	3-1	1	3-1	1'
Section 2		12-1	1/	3-2	1	4-1	1
1-1	1,	12-2	1/	3–3	1	5-1	1
1-2	3 *	12-3	1,	4-1	2	5-2	1
1-2A	1 2×	13-1	1	5-1	1	6-1	1
1-3	2	13-2	1	6-1	1	7-1	1
2-1	23*	14-1	11	6-2	12*	7-2	1/
2-2	23*	14-2	3 4 4*	0.00		8-1	11
3-13	218	14-3	10			9-1	1/
3-2	Doleted	15-1	1/	Section 6		9-2	1/
3-3	X 11	15-2	2 /	1-1	1/	9-2	1
			2		1/		
3-4	711	15-3	11	2-1	/		
3–5	211	15-4		2-2	1	Index	0.4
3-6	21	16-1	1/1*	3-1	1/	i	33333 33333
3–7	211	18-2	1	4-1	1	ii	33
3–8	NU	18-3	724	4-2	1/	iii	237
3-9	XII	19-1	2	5-1	11/	iv	3×
4-1	+2*	20-1	23米	6-1	1*	V	1 3×
4-2	7 Seleter	20-2	12*	6-2	1 *		
4-3	7 11	21-1	12*	Section 7			
5-1	1-	21-2	- 1*	1-1	72*		
5-2	2-	21-3/	71*	2-1	1/		
5-3	1	Section 3	**	2-2	1/		
5-4	2	1-1	1./	3-1	1/		
5-5	1′	2-1	1/	4-1	1/		
6-1	11	2-2	1/	4-2	11		
6-2	1/	2-2		4-3	1/		
6-3	1			4-4			
	1	0			. 1		
6-4		Section 4	1	4-5	1/		
6-5	1	1-1	14	5-1	1		
6-6	+2*	2-1	1	6-1	12*		
6-7	1	2-2	1/	7-1	1/		
6-8	1/	3-1	1	8-1	1/		
6-9	1/	4-1	1/	8-2	1		
7-1	1-	4-2					
7-2	1 2*	4-3	12*	1 22	-1 to 22-1	1 Inu 1*	1
8-1	72*	4-4	1/	70	1 1 00		
8-2	72*			53.	-1 ps3-	I Issue 17	(
9-13-8-4	12*						/
9-2	1/ *						

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com