

PART NO. WNEM50-EN-01

**HITACHI**

Reliable solutions

# Workshop Manual

# ZW250-6

## Wheel Loader

ZW250-6 WHEEL LOADER WORKSHOP MANUAL

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2018, 08

WNEM50-EN-01

Service Manual consists of the following separate Part No.  
Technical Manual (Operational Principle) : Vol. No.TONEM50-EN  
Technical Manual (Troubleshooting) : Vol. No.TTNEM50-EN  
Workshop Manual : Vol. No.WNEM50-EN



---

---

## SECTION 1

# GENERAL

### CONTENTS

#### **Group 1 Precautions for Disassembling and Assembling**

Precautions for Disassembling  
and Assembling .....W1-1-1-1

#### **Group 2 Tightening**

Tightening Bolts and Nuts .....W1-2-1-1  
Piping Joint .....W1-2-1-4

#### **Group 3 Painting**

#### **Group 4 Bleeding Air**

Bleed Air from the Hydraulic System.....W1-4-1-1  
Bleed Air from the Fuel System.....W1-4-1-2  
Bleeding Air from Brake (Axle) .....W1-4-1-3

#### **Group 5 Preparation**

Preparations for Inspection and Maintenance....W1-5-1-1  
Releasing Pressure from Front Attachment  
Hydraulic Circuit .....W1-5-1-6  
Releasing Pressure from Ride Control  
Accumulator.....W1-5-1-7  
Releasing Pressure from Parking Brake  
Accumulator.....W1-5-1-8  
Releasing Pressure from Hydraulic Oil Tank .....W1-5-1-9  
Releasing Pressure from Reserve Tank..... W1-5-1-10

---

(Blank)

---

---

## SECTION 2

# MAINTENANCE STANDARD

### CONTENTS

#### Group 1 Body

Center Hinge.....	W2-1-1-1
Pilot Valve (Two Lever Type).....	W2-1-2-1

#### Group 2 Front Attachment

Pin and Bushing.....	W2-2-1-1
Standard Dimensions for Lift Arm and Bucket....	W2-2-2-1
Bucket Stopper Clearance .....	W2-2-2-2
Cylinder .....	W2-2-3-1

---

(Blank)

---

---

## SECTION 3

# BODY

### CONTENTS

#### Group 1 Cab

Removal and Installation of Cab .....W3-1-1-1

#### Group 2 Counterweight

Removal and Installation of Counterweight.....W3-2-1-1

#### Group 3 Center Hinge

Removal and Installation of Center Hinge.....W3-3-1-1

#### Group 4 Engine

Removal and Installation of Engine .....W3-4-1-1

#### Group 5 Radiator Assembly

Removal and Installation of  
Radiator Assembly .....W3-5-1-1

#### Group 6 Hydraulic Oil Tank

Removal and Installation of  
Hydraulic Oil Tank.....W3-6-1-1

#### Group 7 Fuel Tank

Removal and Installation of Fuel Tank.....W3-7-1-1

#### Group 8 Pump Device

Removal and Installation of Pump Device.....W3-8-1-1  
Disassembly of Pump Device .....W3-8-2-1  
Assembly of Pump Device.....W3-8-2-3  
Disassembly of Main Pump.....W3-8-3-1  
Assembly of Main Pump.....W3-8-3-5  
Disassembly of Regulator .....W3-8-4-1  
Assembly of Regulator .....W3-8-4-3  
Disassembly of Priority Valve.....W3-8-5-1  
Assembly of Priority Valve.....W3-8-5-3  
Structure of Pilot Pump .....W3-8-6-1

#### Group 9 Control Valve

Removal and Installation of Control Valve.....W3-9-1-1  
Disassembly of Control Valve .....W3-9-2-1  
Assembly of Control Valve.....W3-9-2-8

#### Group 10 Pilot Valve

Removal and Installation of Pilot Valve  
(Single Lever Type).....W3-10-1-1  
Removal and Installation of Pilot Valve  
(Two Lever Type).....W3-10-2-1  
Disassembly of Pilot Valve  
(Single Lever Type).....W3-10-3-1  
Assembly of Pilot Valve (Single Lever Type) .....W3-10-3-4  
Disassembly of Pilot Valve (Two Lever Type).....W3-10-4-1

Assembly of Pilot Valve (Two Lever Type) .....W3-10-4-7

#### Group 11 Brake Charge Valve

Removal and Installation of  
Brake Charge Valve .....W3-11-1-1  
Structure of Brake Charge Valve .....W3-11-2-1  
Removal and Installation of  
Brake Accumulator.....W3-11-3-1

#### Group 12 Manifold Valve

Removal and Installation of Manifold Valve.....W3-12-1-1  
Disassembly of Manifold Valve .....W3-12-2-1  
Assembly of Manifold Valve .....W3-12-2-4

#### Group 13 Solenoid Valve

Removal and Installation of  
2-Spool Solenoid Valve Unit .....W3-13-1-1  
Structure of 2-Spool Solenoid Valve Unit.....W3-13-2-1  
Removal and Installation of  
Parking Brake Solenoid Valve Unit .....W3-13-3-1  
Structure of Parking Brake  
Solenoid Valve Unit.....W3-13-4-1  
Structure of Parking Brake Solenoid Valve .....W3-13-5-1

#### Group 14 Flow Regulator Valve

Removal and Installation of  
Flow Regulator Valve.....W3-14-1-1  
Structure of Flow Regulator Valve .....W3-14-2-1

#### Group 15 Cooling Fan System

Removal and Installation of Fan Valve.....W3-15-1-1  
Structure of Fan Valve.....W3-15-2-1  
Removal and Installation of Fan Motor.....W3-15-3-1  
Structure of Fan Motor .....W3-15-4-1  
Removal and Installation of Fan Pump .....W3-15-5-1  
Disassembly of Fan Pump.....W3-15-6-1  
Assembly of Fan Pump .....W3-15-6-3

#### Group 16 Ride Control Accumulator

Removal and Installation of  
Ride Control Accumulator.....W3-16-1-1

#### Group 17 Battery Disconnect Switch

Removal and Installation of  
Battery Disconnect Switch .....W3-17-1-1

#### Group 18 Aftertreatment Device

Removal and Installation of  
Aftertreatment Device.....W3-18-1-1

---

---

**Group 19 DEF Tank**

Removal and Installation of DEF Tank ..... W3-19-1-1

**Group 20 Coolant Control Valve**

Removal and Installation of  
Coolant Control Valve ..... W3-20-1-1

**Group 21 DEF Supply Module**

Removal and Installation of  
DEF Supply Module ..... W3-21-1-1

**Group 22 Exterior Components**

Removal and Installation of  
Exterior Components..... W3-22-1-1



---

---

## SECTION 4

# TRAVEL SYSTEM

### CONTENTS

#### Group 1 Tire

- Removal and Installation of Front Tire .....W4-1-1-1
- Removal and Installation of Rear Tire .....W4-1-2-1

#### Group 2 Drive Unit

- Removal and Installation of Drive Unit .....W4-2-1-1
- Disassembly and Assembly of Drive Unit.....W4-2-2-1
- Removal and Installation of Torque Converter ...W4-2-3-1
- Disassembly and Assembly of Transmission.....W4-2-4-1
- Disassembly and Assembly of  
Transmission Control Valve .....W4-2-5-1
- Removal and installation of parking brake  
(Replace the brake friction pad).....W4-2-6-1

#### Group 3 Axle

- Removal and Installation of Front Axle .....W4-3-1-1
- Removal and Installation of Rear Axle.....W4-3-2-1
- Disassembly of Axle .....W4-3-3-1
- Assembly of Axle.....W4-3-3-17

#### Group 4 Propeller Shaft

- Removal and Installation of Propeller Shaft.....W4-4-1-1

#### Group 5 Brake Valve

- Removal and Installation of Brake Valve.....W4-5-1-1
- Disassembly of Brake Valve .....W4-5-2-1
- Disassembly of Brake Valve .....W4-5-2-2
- Assembly of Brake Valve.....W4-5-2-3
- Assembly of Brake Valve.....W4-5-2-4

#### Group 6 Steering Device

- Removal and Installation of  
Steering Pilot Valve .....W4-6-1-1
- Disassembly of Steering Pilot Valve .....W4-6-2-1
- Assembly of Steering Pilot Valve .....W4-6-2-4
- Removal and Installation of Steering Valve .....W4-6-3-1  
(Without Secondary Steering) .....W4-6-3-1
- Removal and Installation of Steering Valve .....W4-6-4-1  
(With Secondary Steering) .....W4-6-4-1
- Disassembly of Steering Valve .....W4-6-5-1
- Assembly of Steering Valve .....W4-6-5-4
- Disassembly of Secondary Steering  
Check Block .....W4-6-6-1
- Assembly of Secondary Steering Check Block ...W4-6-6-3
- Removal and Installation of Steering Cylinder...W4-6-7-1
- Disassembly of Steering Cylinder .....W4-6-8-1
- Assembly of Steering Cylinder .....W4-6-8-5

#### Removal and Installation of

- Steering Accumulator .....W4-6-9-1
- Removal and Installation of Left Stop Valve..... W4-6-10-1
- Removal and Installation of Right Stop Valve... W4-6-11-1
- Disassembly of Stop Valve ..... W4-6-12-1
- Assembly of Stop Valve..... W4-6-12-2

#### Group 7 Secondary Steering Device

- Removal and Installation of  
Secondary Steering Pump .....W4-7-1-1

#### Group 8 Joystick Steering

- Removal and Installation of  
Joystick Steering Valve .....W4-8-1-1
- Disassembly and Assembly of  
Joystick Steering Control Valve .....W4-8-2-1
- Disassembly and Assembly of  
Joystick Steering Solenoid Valve.....W4-8-2-4
- Removal and Installation of Joystick Steering  
Lever (for Grammer Seat) .....W4-8-3-1
- Removal and Installation of Joystick Steering  
Lever (for Sears Seat) .....W4-8-4-1

---

(Blank)

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**