

PART NO. WNHK70-EN-00

**HITACHI**

Reliable solutions

# Workshop Manual

# ZW550-6 Wheel Loader

ZW550-6 WHEEL LOADER WORKSHOP MANUAL

WNHK70-EN-00

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2018, 08

Service Manual consists of the following separate Part No.  
Technical Manual (Operational Principle) : Vol. No.TONHK70-EN  
Technical Manual (Troubleshooting) : Vol. No.TTNHK70-EN  
Workshop Manual : Vol. No.WNHK70-EN



---

---

## SECTION 1

# GENERAL

### CONTENTS

#### **Group 1 Precautions for Disassembling and Assembling**

Precautions for Disassembling  
and Assembling .....W1-1-1-1

#### **Group 2 Tightening**

Tightening Bolts and Nuts .....W1-2-1-1  
Piping Joint .....W1-2-1-4

#### **Group 3 Painting**

Painting .....W1-3-1-1

#### **Group 4 Bleeding Air**

Bleeding Air from Hydraulic Oil Tank.....W1-4-1-1  
Bleeding Air from Hydraulic System .....W1-4-1-2  
Bleed Air from Fuel System .....W1-4-1-3  
Bleeding Air from Radiator/CCV Line .....W1-4-1-5  
Bleeding Air from Brake (Axle) .....W1-4-1-8  
Bleeding Air from Parking Brake .....W1-4-1-9

#### **Group 5 Pressure Release Procedure**

Front Attachment Hydraulic Circuit  
Pressure Release Procedure.....W1-5-1-1  
Ride Control Accumulator  
Pressure Release Procedure.....W1-5-1-2  
Parking Brake Accumulator  
Pressure Release Procedure.....W1-5-1-3

#### **Group 6 Preparation**

Preparation before Inspection  
and Maintenance.....W1-6-1-1

---

(Blank)

---

---

## SECTION 2

# MAINTENANCE STANDARD

### CONTENTS

#### Group 1 Body

|                                   |          |
|-----------------------------------|----------|
| Center Hinge.....                 | W2-1-1-1 |
| Pilot Valve (Two Lever Type)..... | W2-1-2-1 |

#### Group 2 Front Attachment

|   |          |
|---|----------|
| Pin and Bushing.....                            | W2-2-1-1 |
| Standard Dimensions for Lift Arm and Bucket.... | W2-2-2-1 |

---

(Blank)

---

---

## SECTION 3

# BODY

### CONTENTS

#### Group 1 Cab

Removal and Installation of Cab .....W3-1-1-1

#### Group 2 Counterweight

Removal and Installation of Counterweight.....W3-2-1-1

#### Group 3 Center Hinge

Removal and Installation of Center Hinge.....W3-3-1-1

Removal and Installation of the Hydraulic  
Hoses of Front Frame Side .....W3-3-2-1

#### Group 4 Engine

Removal and Installation of Engine .....W3-4-1-1

Removal and Installation of Exterior Parts.....W3-4-2-1

Removal and Installation of Air Cleaner .....W3-4-3-1

#### Group 5 Radiator Assembly

Replacement of Radiator and Cooling System ...W3-5-1-1

#### Group 6 Hydraulic Oil Tank

Removal and Installation of  
Hydraulic Oil Tank.....W3-6-1-1

#### Group 7 Fuel Tank

Removal and Installation of Fuel Tank.....W3-7-1-1

#### Group 8 Pump Device

Removal and Installation of Pump Device.....W3-8-1-1

Disassembly and Assembly of Pump Device .....W3-8-2-1

Disassembly of Main Pump.....W3-8-3-1

Assembly of Main Pump.....W3-8-3-4

Disassembly of Regulator .....W3-8-4-1

Assembly of Regulator .....W3-8-4-5

Removal and Installation of Pilot Pump .....W3-8-5-1

Disassembly of Pilot Pump.....W3-8-6-1

Assembly of Pilot Pump.....W3-8-6-6

#### Group 9 Control Valve

Removal and Installation of Control Valve.....W3-9-1-1

Disassembly and Assembly of Control Valve .....W3-9-2-1

#### Group 10 Pilot Valve

Removal and Installation of Pilot Valve  
(Single Lever Type) .....W3-10-1-1

Removal and Installation of Pilot Valve  
(Two Lever Type ) .....W3-10-2-1

Disassembly of Pilot Valve  
(Single Lever Type) .....W3-10-3-1

Assembly of Pilot Valve (Single Lever Type) .....W3-10-3-4

Disassembly of Pilot Valve (Two Lever Type)..... W3-10-4-1

Assembly of Pilot Valve (Two Lever Type) ..... W3-10-4-7

#### Group 11 Brake Charge Valve

Removal and Installation of Brake  
Charge Valve.....W3-11-1-1

Structure of Brake Charge Valve .....W3-11-2-1

Disassembly of Brake Charge Valve.....W3-11-3-1

Assembly of Brake Charge Valve .....W3-11-3-2

Removal and Installation of Brake  
Accumulators.....W3-11-4-1

#### Group 12 Combination Valve

Removal and Installation of  
Combination Valve.....W3-12-1-1

Structure and Tightening Torque of  
Combination Valve Components.....W3-12-2-1

#### Group 13 DEF Tank

Removal and Installation of DEF Tank.....W3-13-1-1

Disassembly of DEF Tank.....W3-13-2-1

Assembly of DEF Tank .....W3-13-2-3

#### Group 14 Flow Regulator Valve

Removal and Installation of Flow  
Regulator Valve .....W3-14-1-1

Structure of Flow Regulator Valve .....W3-14-2-1

#### Group 15 Cooling Fan System

Removal and Installation of Fan  
Control Valve .....W3-15-1-1

Disassembly and Assembly of Fan  
Control Valve .....W3-15-2-1

Removal and Installation of Fan Motor.....W3-15-3-1

Structure of Fan Motor.....W3-15-4-1

Removal and Installation of Pilot Pump .....W3-15-5-1

#### Group 16 Aftertreatment Device

Removal and Installation of  
Aftertreatment Device.....W3-16-1-1

#### Group 17 Ride Control Valve and Accumulator

Removal and Installation of Ride  
Control Valve and Accumulator .....W3-17-1-1

Disassembly of Ride Control Valve .....W3-17-2-1

Assembly of Ride Control Valve .....W3-17-2-4

#### Group 18 Battery Disconnect Switch

Removal of Battery Disconnect Switch.....W3-18-1-1

---

---

|  |           |
|--|-----------|
| Installation of Battery Disconnect Switch..... | W3-18-1-2 |
| Structure of Battery Box Mount.....            | W3-18-1-3 |



---

---

## SECTION 4

# TRAVEL SYSTEM

### CONTENTS

#### Group 1 Tire

|  |          |
|--|----------|
| Removal and Installation of Front Tire ..... | W4-1-1-1 |
| Removal and Installation of Rear Tire .....  | W4-1-2-1 |

#### Group 2 Drive Unit

|   |           |
|---|-----------|
| Removal and Installation of Torque Converter ...                      | W4-2-1-1  |
| Disassembly and Assembly of Torque Converter .....                    | W4-2-2-1  |
| Disassembly and Assembly of Torque Converter Sub Assembly .....       | W4-2-2-10 |
| Removal and Installation of Transmission .....                        | W4-2-3-1  |
| Disassembly and Assembly of Transmission Assy .....                   | W4-2-4-1  |
| Disassembly and Assembly of Clutch Assembly .....                     | W4-2-5-1  |
| Disassembly and Assembly of Low and Third Speed Clutch Assembly ..... | W4-2-5-16 |
| Disassembly and Assembly of Second Speed Clutch Assembly .....        | W4-2-5-19 |
| Disassembly and Assembly of Reverse Clutch Assembly .....             | W4-2-5-22 |
| Disassembly and Assembly of First Clutch Assembly .....               | W4-2-5-25 |
| Disassembly and Assembly of High Clutch Spider Assembly .....         | W4-2-5-31 |
| Disassembly and Assembly of Gear Box Assembly .....                   | W4-2-6-1  |
| Removal and Installation of Transmission Control Valve .....          | W4-2-8-1  |
| Disassembly and Assembly of Transmission Control Valve .....          | W4-2-9-1  |
| Special Tools (For Transmission Assembly and Disassembly) .....       | W4-2-10-1 |
| Drawings for Special Tools .....                                      | W4-2-10-2 |

#### Group 3 Axle

|  |           |
|--|-----------|
| Removal and Installation of Front Axle .....                 | W4-3-1-1  |
| Removal and Installation of Rear Axle .....                  | W4-3-2-1  |
| Disassembly of Axle .....                                    | W4-3-3-1  |
| Assembly of Axle .....                                       | W4-3-3-9  |
| Disassembly and Assembly of Spider Assembly .....            | W4-3-3-20 |
| Disassembly and Assembly of Internal Gear Hub Assembly ..... | W4-3-3-22 |
| Removal and Installation of Floating Seal .....              | W4-3-3-26 |
| Removal and Installation of Differential .....               | W4-3-4-1  |

|   |           |
|---|-----------|
| Disassembly and Assembly of Differential .....                  | W4-3-5-1  |
| Disassembly and Assembly of Parking Brake Piston Assembly ..... | W4-3-5-23 |
| Special Tools For Axle Assembly .....                           | W4-3-6-1  |
| Drawings for Special Tools .....                                | W4-3-6-2  |

#### Group 4 Propeller Shaft

|   |          |
|---|----------|
| Removal and Installation of Propeller Shaft ..... | W4-4-1-1 |
|---|----------|

#### Group 5 Brake Valve

|  |          |
|--|----------|
| Removal and Installation of Brake Valve .....                      | W4-5-1-1 |
| Disassembly and Assembly of Brake Valve Assembly .....             | W4-5-2-1 |
| Disassembly and Assembly of Brake Valve Maintenance Standard ..... | W4-5-3-1 |
|  | W4-5-3-5 |

#### Group 7 Steering Valve

|  |          |
|--|----------|
| Removal and Installation of Steering Valve ..... | W4-7-1-1 |
| Disassembly of Steering Valve .....              | W4-7-2-1 |
| Assembly of Steering Valve .....                 | W4-7-2-4 |

#### Group 8 Steering Cylinder

|  |          |
|--|----------|
| Removal and Installation of Steering Cylinder .....        | W4-8-1-1 |
| Disassembly of Steering Cylinder .....                     | W4-8-2-1 |
| Assembly of Steering Cylinder .....                        | W4-8-2-4 |
| Removal and Installation of Steering Accumulator .....     | W4-8-3-1 |
| Tools for Steering Cylinder Disassembly and Assembly ..... | W4-8-4-1 |

#### Group 9 Emergency Steering Device

|   |          |
|---|----------|
| Removal and Installation of Emergency Steering Pump ..... | W4-9-1-1 |
|---|----------|

#### Group 10 Reducing Valve

|  |           |
|--|-----------|
| Removal and Installation of Reducing Valve ..... | W4-10-1-1 |
| Disassembly of Reducing Valve .....              | W4-10-2-1 |
| Assembly of Reducing Valve .....                 | W4-10-2-3 |

#### Group 11 Stop Valve

|  |           |
|--|-----------|
| Removal and Installation of Stop Valve ..... | W4-11-1-1 |
| Disassembly of Stop Valve .....              | W4-11-2-1 |
| Assembly of Stop Valve .....                 | W4-11-2-2 |

#### Group 12 Main Pressure Block

|   |           |
|---|-----------|
| Removal and Installation of Main Pressure Block ..... | W4-12-1-1 |
| Structure of Main Pressure Block .....                | W4-12-1-3 |

---

---

## **Group 13 Priority Hammer Valve and Shuttle Valve**

- Removal and Installation of Priority Hammer Valve and Shuttle Valve..... W4-13-1-1
- Structure of Priority Hammer Valve and Shuttle Valve..... W4-13-1-5

## **Group 14 Check Valve**

- Removal and Installation of Check Valve ..... W4-14-1-1
- Structure of Check Valve ..... W4-14-1-3

## **Group 15 Joystick Steering**

- Removal and Installation of Joystick Steering Valve (with Sears Seat) ..... W4-15-1-1
- Disassembly and Assembly of Joystick Steering Valves ..... W4-15-2-1
- Removal and Installation of Joystick Steering Lever (with Sears Seat)..... W4-15-3-1
- Disassembly of Joystick Steering Pilot Valve (for Hydraulic Type JSS) ..... W4-15-4-1
- Assembly of Joystick Steering Pilot Valve ..... W4-15-4-5

## **Group 16 Axle Oil Cooler**

- Removal and Installation of Axle Oil Cooler ..... W4-16-1-1
- Structure of Oil Cooler Assembly ..... W4-16-2-1
- Structure of Oil Cooler Pump Unit ..... W4-16-2-4

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**