


OPERATOR'S CAB

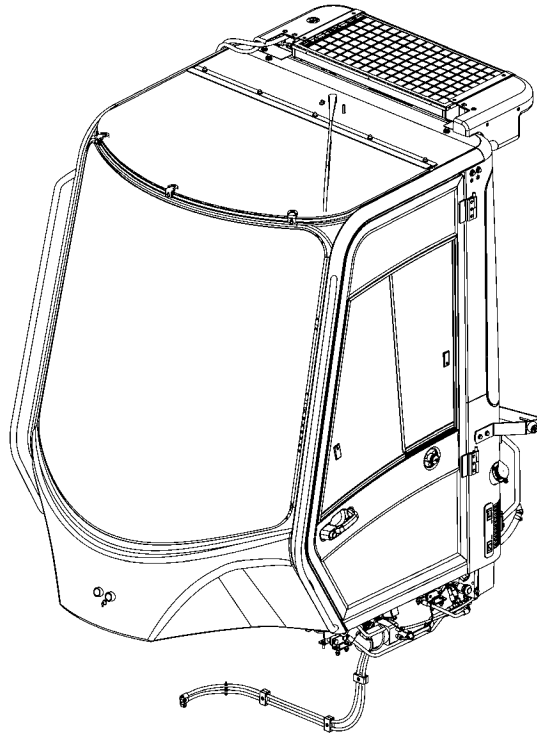

HYSTER

SAFETY PRECAUTIONS

MAINTENANCE AND REPAIR

- When lifting parts or assemblies, make sure all slings, chains, or cables are correctly fastened, and that the load being lifted is balanced. Make sure the crane, cables, and chains have the capacity to support the weight of the load.
- Do not lift heavy parts by hand, use a lifting mechanism.
- Wear safety glasses.
- DISCONNECT THE BATTERY CONNECTOR before doing any maintenance or repair on electric lift trucks. Disconnect the battery ground cable on internal combustion lift trucks.
- Always use correct blocks to prevent the unit from rolling or falling. See HOW TO PUT THE LIFT TRUCK ON BLOCKS in the **Operating Manual** or the **Periodic Maintenance** section.
- Keep the unit clean and the working area clean and orderly.
- Use the correct tools for the job.
- Keep the tools clean and in good condition.
- Always use **HYSTER**® **APPROVED** parts when making repairs. Replacement parts must meet or exceed the specifications of the original equipment manufacturer.
- Make sure all nuts, bolts, snap rings, and other fastening devices are removed before using force to remove parts.
- Always fasten a DO NOT OPERATE tag to the controls of the unit when making repairs, or if the unit needs repairs.
- Be sure to follow the **WARNING** and **CAUTION** notes in the instructions.
- Gasoline, Liquid Petroleum Gas (LPG), Compressed Natural Gas (CNG), and Diesel fuel are flammable. Be sure to follow the necessary safety precautions when handling these fuels and when working on these fuel systems.
- Batteries generate flammable gas when they are being charged. Keep fire and sparks away from the area. Make sure the area is well ventilated.

NOTE: The following symbols and words indicate safety information in this manual:



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury and property damage.

On the lift truck, the **WARNING** symbol and word are on orange background. The **CAUTION** symbol and word are on yellow background.

TABLE OF CONTENTS

Series Code / Model Designation Reference Table	1
General	2
Description of Operation	4
Cab Structure	4
Cab Tilt System	4
Cab Tip-Up System	6
Tilting the Cab	7
Raising	7
Lowering	8
Remove and Install	9
Cab Door Assembly	9
Cab Door	9
Remove	9
Install	9
Door Hinge	10
Remove	10
Install	10
Door Latch	11
Remove	11
Install	11
Door Handle	11
Remove	11
Install	12
Door Release	12
Remove	12
Install	12
Door Push Button	13
Remove	13
Install	13
Cab Tilt System	13
Electric Tilt Pump	13
Remove	13
Install	13
Hand Tilt Pump	14
Remove	14
Install	15
Cab Tilt Cylinder	16
Remove	16
Disassemble	16
Clean	18
Inspect	18
Assemble	18
Install	19
Latch	19
Remove	19
Install	20
Brake and Inching Pedal	21
Remove	21
Install	21
Accelerator Pedal and Sensor	22
Remove	22
Install	22

TABLE OF CONTENTS (Continued)

Adjust Sensor	22
Seat Assembly	22
Seat	22
Remove	22
Install	23
Seat Cushion	23
Remove	23
Install	24
Back Cushion	24
Remove	24
Install	24
Seat Suspension Replacement	24
Boot Replacement	24
Suspension Scissor and Shock Absorber Replacement	25
Remove	25
Install	30
Compressor	37
Remove	37
Install	42
Power Assist Armrest	48
Release Cable	48
Remove	48
Install	48
Gas Spring	48
Remove	48
Install	49
Joystick	49
Remove	49
Install	49
Electrical Levers	49
Remove	49
Install	50
Armrest Rocker Switches	50
Remove	50
Install	50
Armrest Top Cover	51
Remove	51
Install	51
Instrument Panel	51
Key Switch	51
Remove	51
Install	51
12V Power Socket	52
Remove	52
Install	52
Electric-Operated Heat Control and Air Recirculation Control (Airco Only)	52
Remove	52
Install	53
Cable-Operated Heater Control (Heater Only)	53
Remove	53
Install	54
Air Conditioning Switch Replacement	54

TABLE OF CONTENTS (Continued)

Instrument Panel Rocker Switches Replacement	54
Parking Brake Switch	54
Remove	54
Install	55
Indicator Display Replacement	55
Instrument Panel Top Console	55
Remove	55
Install	56
Steering Wheel and Column Assembly	56
Steering Wheel and Horn	56
Remove	56
Install	58
Steering Column Assembly	58
Remove	58
Install	59
Adjustment Handle	60
Remove	60
Install	60
Main Warning Lights	60
Remove	60
Install	60
Shift Lever	60
Remove	60
Install	61
Turn Signal Lever	61
Remove	61
Install	61
Window Wipers	61
Window Wiper Assembly Replacement	61
Remove	61
Install	61
Window Wiper Motor Replacement	62
Front Window Wiper Motor	62
Install	62
Rear Window Wiper Motor Assembly	62
Remove	62
Install	62
Top Window Wiper Motor Assembly	63
Remove	63
Install	63
Window Washer System	63
Window Washer Reservoir and Pumps	63
Remove	63
Install	64
Window Washer Hoses	64
Hoses for Top and Rear Window	64
Install	65
Window Washer Spray Nozzles	66
Front Window	66
Remove	66
Install	66
Rear Window	66

TABLE OF CONTENTS (Continued)

Remove	66
Install	66
Top Window	66
Remove	66
Install	67
Window Replacement	67
Front Window	69
Remove	69
Install	69
Rear Window	69
Remove	69
Install	69
Top Window	70
Remove	70
Install	71
Door, Upper/Lower Window	71
Remove	71
Install	71
Sliding Window and Sliding Tracks	71
Remove	71
Install	73
Weather Strip Replacement	73
Window Stopper Replacement	74
Window Seal Replacement	74
Sliding Window Frame	74
Remove	74
Install	74
Floor Mat	75
Front Floor Mat	75
Remove	75
Install	75
Rear Floor Mat	75
Remove	75
Install	76
Radio Console	76
Remove	76
Install	77
Air Duct Replacement	77
Remove Front	77
Remove Rear	77
Install	78
Accessories	79
Mirror Replacement	79
Sunshade Replacement	79
Top	79
Rear	79
Map Light Replacement	79
Interior Fan Replacement	79
Training Seat	80
Field Installation	80
Remove	80
Label Replacement	80

TABLE OF CONTENTS (Continued)

Checks and Adjustments	80
Check Oil Level for Cab Tilt System	80
Door Striker Pin Adjustment	81
Brake Pedal Adjustment	82
Dry Brake	82
Wet Brake	82
Inching Pedal Adjustment	82
Inching Pedal Sensor Adjustment	83
Sensor Adjustment Using Dana Dashboard Software	83
Sensor Adjustment using the APC200 Display	84
Sensor Adjustment for Trucks with ZF Transmission	84
Inching Pedal Sensor Calibration	84
Sensor Calibration using Dana Dashboard Software	84
Sensor Calibration using APC200 Display	85
Sensor Calibration for Trucks with ZF Transmission	85

<p>This section is for the following models:</p>
--

**"THE
QUALITY
KEEPERS"**

**HYSTER
APPROVED
PARTS**

Series Code / Model Designation Reference Table

This table consist of the following Series Codes used in this manual.

Series Code	European Model	Americas Model
A236	H16.00XM-12, H18.00XM-12, H20.00XM-12, H22.00XM-12	H400HD, H450HD, H500HD, H550HD
A238	H16.00XM-9, H18.00XM-7.5, H16.00XM-12, H18.00XM-9	H360-36HD, H360-48HD
A917	H40.00-48.00XM-12, H36.00XMS-12	H800-1050HD/HDS
B214	H16.00-22.00XM-12EC	H400-500HD/HDS-EC
B222	RS45-27CH, RS45-31CH, RS46-36CH, RS46-40CH, RS46-41S CH, RS45-41L CH, RS46-41LS CH, RS45-24IH, RS45-28IH, RS46-33IH, RS46-37IH, RS46-38S IH, RS46-38L IH, RS46-38LS IH	HR45-27, HR45-31, HR45-36, HR45-40, HR45-41S, HR45-41L, HR45-41LS
B236	H16.00XM-12, H18.00XM-12, H20.00XM-12, H22.00XM-12	H400HD, H450HD, H500HD, H550HD
B238	H16.00XM-9, H18.00XM-7.5, H16.00XM-12, H18.00XM-9	H360-36HD, H360-48HD
B917	H36.00XMS-12 , H40.00XM-12, H44XM-12, H48.00XM-12	H800HD, H1050HD
C214	H16.00-12EC, H18XM-12EC, H22.00XM-12EC	H400HD-EC, H450HD-EC, H500HD-EC
C222	RS45-27CH, RS45-31CH, RS46-36CH, RS46-41L CH, RS46-41S CH, RS46-41LS CH, RS45-24IH, RS45-28IH, RS46-33IH, RS46-38L IH, RS46-38S IH, RS46-38LS IH	RS45-27, RS45-31, RS45-36, RS46-41L, RS46-41S, RS46-41LS,,
C236	H18-20XM-9, HS18-20XMS-9	H400HD, H450HD, H400HDS, H450HDS
C917	H40XMS-12, H44XM-12, H48XM-12, H36XMS-12, H40XMS-12, H44XMS-12, H48XMS-12	H800HDS, H900HDS, H970HDS, H1050HDS H900HD, H970HD, H1050HD
D214	H18XM-12EC, H22XM-12EC, H23XN-12EC	H450HD-EC, H500HD-EC
D222	RS45-27CH, RS45-31CH, RS46-36CH, RS46-41L CH, RS46-41S CH, RS46-41LS CH, RS46-33IH, RS46-38LS IH, RS46-38S IH, RS46-38LS IH	RS45-27CH, RS45-31CH, RS46-36CH, RS46-41L CH, RS46-41S CH, RS46-41LS CH
E019	H13.00-16.00XM, H10.00-12.00XM-12EC	H300-360HD, H360HD-EC
E117	H40.00-52.00XM-16CH	H1050HD-CH, H1150HD-CH
F007	H8.00-12.00XM	J170-280HD
F008	H25-32XM-12, H28-16CH, H32XM-16CH, H25-32XMS-9	H550-700HD, H550-700HDS
F019, G019	H13.00-14.00XM, H16.00XM-6, H10.00-12.00XM-12EC	H300-330HD, H360HD, H360HD-EC
F117	H40.00-52.00XM-16CH	H1050HD-CH, H1150HD-CH

Series Code	European Model	Americas Model
G007, H007	H8.00-12.00XM	J170-280HD
G008	H25-32XM-12, H25-32XMS-9	H550-700HD, H550-700HDS
G117	H40.00-52.00XM-16CH	H1050HD-CH, H1150HD-CH
H008	H25-32XM-12, H25-32XMS-9, H28-32XM-16CH	H550-700HD, H550-700HDS
H019	H13.00-16.00XM-6, H10.00-12.00XM-12EC	H300-360HD2, H360HD2-EC
H117	H40.00-52.00XM-16CH	H1050HD-16CH, H1150HD-16CH
J007	H8-10XM-6, H10-12XMS-6	J190-280HD2
J019	H13-16XM-6, H10-12XM-12EC	H300-360HD2, H360HD2-EC
J117	H40.00-52.00XM-16CH	H1050HD-16CH, H1150HD-16CH
K007	H8-12XM-6, H10XMS-6	J190-280HD2, H230HDS
K019	H13-16XM-6	H210-250-48HD2, H300-360HD2
K019EC	H6-7XM-12EC	H360HD2-EC
L007	H8-12XM-6	H190-280HD2, H250HD2

General

This SRM describes the functions of the cab and the replacement instructions for the cab components. See Figure 1. Some of the described

components are options that may not be present on each cab. The operation of the various switches and controls can be found in the **Operating Manual**.

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com