

SHOP MANUAL ALLIS-CHALMERS

MODELS

7010-7020-7030-7040-7045-7050-7060-7080

Tractor serial number is stamped on rear side of differential housing above power take-off shield. Engine serial number plate is on upper left side of engine block.

INDEX (By Starting Paragraph)

	7010 7020	7030 7040	7045 7050	7060 7080
BRAKES				
Testing	130	130	130	130
Pedal Adjustment	131	131	131	131
Control Valve	133	133	133	133
R&R and Overhaul	135	135	135	135
CAB AND PROTECTIVE FRAME				
R&R Cab	158	158	158	158
Platform Frame	159	159	159	159
Control Module	159	159	159	159
Protective Frame	160	160	160	160
CLUTCH	75	75	75	75
COOLING SYSTEM				
Radiator	62	62	62	62
Water Pump	63	63	63	63
DIESEL FUEL SYSTEM				
Bleeding	45	45	45	45
Filters	44	44	44	44
Injection Pump Timing	54	54	54	54
Injection Pump	55	55	55	55
Nozzles	46	46	46	46
Nozzle Sleeves	53
DIFFERENTIAL				
Adjustment	124	124	124	124
R&R and Overhaul	126	126	126	126
ELECTRICAL SYSTEM				
Alternator (Delco-Remy)	65	65	65	65
Alternator (Niehoff)	67	67	67	67
Starting Motor	74	74	74	74
ENGINE				
Assembly R&R	14	14	14	14
Camshaft	28	28	28	28
Connecting Rods & Bearings	33	33	33	33
Crankshaft and Bearings	34	34	34	34
Cylinder Head	15	15	15	15
Cylinder Sleeve	31	31	31	31
Flywheel	37	37	37	37
Front Oil Seal	22	22	22	22
Main Bearings	34	34	34	34
Oil Cooler	43	43A	43A	43A
Oil Pan	38	38	38	38
Oil Pressure Relief Valve	40	42	40	42
Oil Pump	39	41	39	41
Piston Pins	32	32	32	32
Piston & Rod Removal	30	30	30	30
Piston and Rings	31	31	31	31
Rear Oil Seal	36	36	36	36
Rocker Arms	20	20	20	20
Speed Adjustment	56	56	56	56

INDEX (Cont.)

ENGINE CONT.				
Timing Gear Cover	22	22	22	22
Timing Gears	23	23	23	23
Valves & Seats	16	16	16	16
Valve Guides	17	17	17	17
Valve Lifters	19	19	19	19
Valve Springs	18	18	18	18
Valve Timing	23	23	23	23
Valve Clearance	21	21	21	21
FINAL GEAR				
Planetary	129	129	129	129
Remove and Reinstall	128	128	128	128
Wheel Axle Shaft	129	129	129	129
FRONT SYSTEM				
Axle Center Member	5	5	5	5
Axle Extensions	4	4	4	4
Tie Rods	3	3	3	3
Spindles	1	1	1	1
HYDRAULIC LIFT SYSTEM				
Test and Adjustments	143	143	143	143
High Pressure Checks	148	148	148	148
R&R Pumps	149	149	149	149
Piston Pump Overhaul	150	150	150	150
Gear & Gerotor Pump Overhaul	151	151	151	151
Scavenger Pump Overhaul	151A	151A	151A
Control Valves	152	152	152	152
Remote Valve	153	153	153	153
Lift Housing & Cylinder	155	155	155	155
INTERCOOLER				
.....	61	61
"POWER-DIRECTOR"				
Tests and Adjustments	77	77	77	77
Clutch	86	86	86	86
Control Valve	85	85	85	85
Overhaul	87	87	87	87
POWER SHIFT				
Adjustment	93	93	93	93
Pressure Checks	101	101	101	101
Powershift Valve	106	106	106	106
R&R and Overhaul	114	114	114	114
POWER STEERING SYSTEM				
Cylinder	12	12	12	12
Control Valve	10	10	10	10
Lubrication & Bleeding	7	7	7	7
Operating Pressure	8	8	8	8
Troubleshooting	6	6	6	6
PTO				
Clutch Valve	154	154	154	154
Operating Pressure	136	136	136	136
R&R and Overhaul	137	137	137	137
TRANSMISSION (STANDARD)				
R&R and Overhaul	90	90	90	90
Shifter Assembly	91	91	91	91
TRANSMISSION (RANGE)				
R&R and Overhaul	121	121	121	121
TURBOCHARGER				
.....	57	57	57	57

DUAL DIMENSIONS

This service manual provides specifications in both the U.S. Customary and Metric (SI) systems of measurement. The first specification is given in the measuring system perceived by us to be the preferred system when servicing a particular component, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.011 inch (0.28 mm)" would indicate that we feel the preferred measurement, in this instance, is the U.S. system of measurement and the metric equivalent of 0.011 inch is 0.28 mm.

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com