

# SHOP MANUAL

# ALLIS-CHALMERS

MODELS D-19

D-19 DIESEL

Tractor serial number is stamped on the left front of torque tube. Engine serial number is stamped on the center left side of the engine block. Transmission serial number is stamped on the lower right hand corner of rear face of transmission case.

The D-19 tractor is available with an LP-Gas, gasoline or a turbo-charged diesel engine in dual wheel tricycle, single wheel tricycle or adjustable axle versions.

## INDEX (By Starting Paragraph)

BELT PULLEY .....	140	Pistons and rings .....	51	Bull pinion bearings adjust.....	132
<b>BRAKES</b>		Rear oil seal .....	55	Bull pinion renew.....	132
Adjustment .....	137	Rocker arms .....	40	Differential overhaul .....	129
Brakes R&R .....	138	Speed adjustments .....	88	Final drive units R&R.....	132
<b>CARBURETOR</b>		Tappet gap.....	40A	Wheel axle shafts.....	134
Gasoline .....	60	Timing gear cover.....	41	<b>FRONT SYSTEM</b>	
LP-Gas .....	61	Timing gears .....	43	Adjustable axle .....	5
<b>CLUTCH</b>		Turbo-charger .....	90	Dual wheel tricycle.....	3
Engine clutch .....	108	Valve guides .....	35	Manual steering .....	11
Engine clutch shaft.....	112	Valves & valve seats.....	33	Power steering .....	17
"Power-Director" clutch.....	115	Valve rotators .....	33	Single wheel tricycle.....	1
<b>COOLING SYSTEM</b>		Valve seals .....	33	<b>GOVERNOR (NON-DIESEL)</b>	
Water pump .....	98	Valve springs .....	37	Adjustment .....	95
Radiator .....	97	Valve timing .....	42	Overhaul .....	96
<b>DIESEL FUEL SYSTEM</b>		<b>ENGINE (NON-DIESEL)</b>		<b>IGNITION SYSTEM</b>	
Energy cells .....	89	Assembly—R&R .....	28	Distributor .....	102
Filters and bleeding.....	76	Cam followers .....	38	Ignition timing .....	103
Injection pump .....	86	Camshaft .....	47	<b>LP-GAS SYSTEM</b>	
Injection pump gears.....	46	Connecting rods & bearings.....	52	Adjustments .....	61
Nozzles .....	78	Crankshaft & bearings.....	53	Filter .....	68
Quick checks .....	75	Cylinder head .....	30	Regulator .....	69
<b>DIFFERENTIAL</b>		Cylinder sleeves .....	50	<b>"POWER-DIRECTOR"</b>	
Adjustment .....	128	Flywheel .....	56	Clutch .....	115
R&R and overhaul.....	129	Front oil seal.....	41	Shafts and gears.....	119
<b>ELECTRICAL</b> .....	101	Ignition timing .....	103	<b>POWER LIFT SYSTEM</b>	
<b>ENGINE (DIESEL)</b>		Main bearings .....	53	Pump .....	157
Assembly—R&R .....	29	Oil pan .....	57	Testing .....	151
Cam followers .....	38	Oil pump .....	58	Work cylinders .....	167
Camshaft .....	47	Piston pins .....	51A	<b>POWER TAKE-OFF</b> .....	145
Connecting rods & bearings.....	52	Piston & rod removal.....	49	<b>STEERING GEAR</b>	
Crankshaft and bearings.....	53	Pistons & rings .....	50	(Manual) .....	11
Cylinder head .....	31	Rear oil seal.....	55	(Power) .....	17
Cylinder sleeves .....	51	Rocker arms .....	39	<b>TRANSMISSION</b>	
Flywheel .....	56	Spark plugs .....	101	Bevel pinion shaft.....	125
Front oil seal.....	41	Speed adjustment .....	95	Countershaft .....	126
Injection timing .....	86	Tappet gap.....	39A	Input shaft .....	124
Main bearings .....	53	Timing gear cover.....	41	Reverse idler .....	127
Oil pan .....	57	Timing gears .....	43	Shifter assembly .....	122
Oil pump .....	58	Valve guides .....	34		
Piston pins .....	51A	Valves & valve seats.....	32		
Piston & rod removal.....	49	Valve rotators .....	32		
		Valve seals .....	32		
		Valve springs .....	36		
		Valve timing .....	42		
		<b>FINAL DRIVE &amp; DIFFERENTIAL</b>			
		Bevel gears adjust.....	130		
		Bull gear renew.....	133		

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**