

SHOP MANUAL

ALLIS-CHALMERS

MODELS D-21, D-21 SERIES II, TWO-TEN AND TWO-TWENTY

Tractor serial number is located on the front flange of the torque (clutch) housing at left hand side of tractor. Engine serial number is located on nameplate which is attached to the upper rear corner of cylinder block on the left hand side of tractor.

Model D-21 tractors were available with a naturally aspirated diesel engine. D-21 Series II, Two-Ten and Two-Twenty tractors are equipped with a turbo-charged diesel engine. All models are available with an adjustable, wide front axle. Two-Twenty models are also available with a driving front axle (Front Wheel Assist).

INDEX (By Starting Paragraph)

BRAKES			
Adjustment (D-21 & D-21 Series II).....	105		
Two-Twenty	106		
R & R and Overhaul (D-21 & D-21 Series II)	105A		
Two-Twenty	106A		
CLUTCH			
Engine Clutch	72		
Engine Clutch Shaft	76		
COOLING SYSTEM			
Radiator	67		
Water Pump	68		
DIESEL FUEL SYSTEM			
Filters and Bleeding	51		
Injection Pump	56		
Injection Pump Gears	34		
Nozzles	53		
DIFFERENTIAL			
Adjustment	95		
R&R and Overhaul	96		
F.W.A.	172		
ELECTRICAL	70		
ENGINE			
Assembly—R&R	20		
Cam Followers	26		
Camshaft	36		
Connecting Rods & Bearings	41		
Crankshaft & Bearings	42		
Cylinder Head	21		
Cylinder Sleeves	39		
ENGINE (Cont.)			
Flywheel	45		
Front Oil Seal	43		
Injection Timing	56		
Main Bearings	42		
Oil Cooler	49		
Oil Pan	46		
Oil Pump	47		
Piston Pins	40		
Piston & Rod Removal	38		
Pistons & Rings	39		
Rear Oil Seal	44		
Rocker Arms	27		
Speed Adjustments	58		
Timing Gear Cover	30		
Timing Gears	31		
Turbocharger	60		
Valve Guides	24		
Valves & Valves Seats	22		
Valve Springs	25		
FINAL DRIVE & DIFFERENTIAL			
Bevel Gears, Adjust	97		
Bull Gears, Renew	100		
Bull Pinion Bearings, Adjust	99		
Bull Pinion, Renew	99		
Differential Overhaul	96		
Wheel Axle Shafts	103		
FRONT SYSTEM (Without Front Wheel Assist)			
Adjustable Front Axle	1		
Power Steering	8		
FRONT WHEEL ASSIST			
Drive Adapter	165		
Front Axle Assembly	168		
Idler Gear, Shaft and Bearings	167		
Lubrication	164		
Power Steering	8		
POWER LIFT SYSTEM			
Checks and Adjustments	121, 123		
Filters	155		
Pump	137		
Valves	150, 154		
Work Cylinders	129		
POWER STEERING	8		
POWER TAKE-OFF			
Clutch and Brake	114, 115		
Controls	110, 112		
Output Shaft and Bearings	116, 117		
Reduction Gears and Shafts	113		
Test and Adjust	107, 109		
TRANSMISSION (FRONT)			
Assembly, R&R	80A		
Countershaft	87		
Mainshaft	86		
Reverse Idler	85		
Shifter Assembly	80		
TRANSMISSION (DUAL RANGE)			
Bevel Pinion Shaft	92		
Countershaft	94		
Shifter Assembly	90		

CONDENSED SERVICE DATA

GENERAL

	D-21	D-21 Series II	210
Liquid Capacities			
Cooling System	21 Qts.	31 Qts.	21 Qts.
Crankcase (with filter)	12 Qts.	12 Qts.	†21 Qts.
Fuel Tank	52 Gals.	52 Gals.	51 Gals.
Transmission (approx.)	21 Gals.	21 Gals.	27 Gals.
†Capacity is 15 qts. for 220 model.			

Front Wheels

Toe-In $\frac{1}{8}$ - $\frac{1}{4}$ Inch

Speeds

Number Forward 8

Number Reverse 2

Electrical System

Voltage 12

Ground Polarity Negative

No. of Batteries 2 or 4

Battery Voltage, each 12

Thanks for your reading.

Please [click here](#) to download complete manual instantly.

And can also choose other manuals.

Feel free ---> write to me with any questions.

Our service email:

manuals007@hotmail.com