

**410/420 SKID STEER  
Service Manual  
Bur 6-78950  
Table of Contents**

Description	Section Number	Publication Form Number
<b>General</b>		<b>Tab 1</b>
Section Index - General		6-79040
Fluids and Lubricants	1001	6-79030
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
<b>Engines</b>		<b>Tab 2</b>
Section Index - Engines		6-79050
Engine and Radiator Removal and Installation	2000	6-79130
For Engine Repair - See Engine Service Manual		6-79550
<b>Fuel Systems</b>		<b>Tab 3</b>
Section Index - Fuel Systems		6-79060
For Fuel System Repair - See the Engine Service Manual		6-79550
<b>Electrical</b>		<b>Tab 4</b>
Section Index - Electrical		6-79070
Electrical Specifications and Troubleshooting and Schematics	4001	6-79540
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53091
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		6-79080
Hydrostatic System Troubleshooting	6001	6-79330
Removal and Installation of Hydrostatic Components	6002	6-79530
Drive Coupling	6003	6-79120
Piston Pump	6004	6-49580
Drive Motors (Eaton)	6005	6-79020
Single Speed Drive Motors	6005	6-79000
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310

**410/420 SKID STEER  
Service Manual  
Bur 6-78950**

**Table of Contents (Continued)**

Description	Section Number	Publication Form Number
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		6-79090
Removal and Installation of Park Brake Components	7002	6-79570
410 Brakes - Spring Applied - Hydraulic Release (Refer to Section 6005 - Single Speed Drive Motor)		
420 Brakes - Spring Applied - Hydraulic Release	7004	6-79580
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		6-79100
Hydraulic System Troubleshooting and Schematics	8001	6-79510
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79520
Gear Pump (Equipment and High Flow)	8004	6-79350
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550
<b>Mounted Equipment</b>		<b>Tab 9</b>
Section Index - Mounted Equipment		6-79110
Pedals and Levers	9001	6-79500
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
Heater	9006	6-79450
<b>Schematic Set</b>		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	6-78970

# SECTION INDEX

## GENERAL

<b>Section Title</b>	<b>Section Number</b>
Fluids and Lubricants . . . . .	1001
Standard Torque Specifications . . . . .	1002
Metric Conversion Chart . . . . .	1003



# Section 1001

## FLUIDS AND LUBRICANTS

## TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS .....	3
ENVIRONMENT .....	3
ENGINE LUBRICATION .....	4
Engine Oil Selection .....	4
Oil Viscosity/Temperature Ranges .....	4
DIESEL FUEL SYSTEM .....	5
Fuel Storage .....	5
Specifications for Acceptable No. 2 Diesel Fuel .....	5

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**