

921C Loader Service Manual 7-13502

Table of Contents

Description	Section No.	Form No.
General	Tab 1	
Section Index - General		7-13510
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-13521
Loctite Product Chart		8-98902
Engines	Tab 2	
Section Index - Engines		7-13530
Engine and Radiator Removal and Installation	2000	7-13540
Stall Test	2002	7-13550
For Engine Repair, See Your Cummins Engine Service Center		
Fuel System	Tab 3	
Section Index - Fuel System		7-13560
For Fuel System Repair, See Your Cummins Engine Service Center		
Electrical	Tab 4	
Section Index - Electrical		7-13570
Removal and Installation of Starter and Alternator	4001	7-13590
Electrical Specifications and Troubleshooting	4002	7-13601
Batteries	4003	7-49440
Starter and Starter Solenoid	4004	7-13610
Information and Diagnostic Center	4005	7-12251
Alternator	4007	7-13630
Steering	Tab 5	
Section Index - Steering		7-13640
Removal and Installation of Steering Components	5001	7-13660
Steering Specifications, Pressure Checks, and Troubleshooting	5002	7-13670
Steering Control Valve	5003	7-13680
Steering Priority Valve	5004	7-13690
Steering Cylinders	5005	7-13700
Center Pivot	5006	7-13710

921C Loader Service Manual 7-13502

Table of Contents

Description	Section No.	Form No.
Power Train	Tab 6	
Section Index - Power Train		7-13721
Removal and Installation of Power Train Components	6001	7-13740
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	7-13752
Transmission	6003	7-13760
621C Front and Rear Axle - 721C Rear Axle	6004	6-41400
721C Front Axle	6004	6-41410
Drive Shaft, Center Bearing, and Universal Joints	6005	7-13770
Wheels and Tires	6006	7-13780
Transmission Control Valve	6007	7-12450
Brakes	Tab 7	
Section Index - Brakes		7-13790
Removal and Installation of Brake Components	7001	7-13810
Hydraulic Brake Troubleshooting	7002	7-12491
Brake Accumulators	7004	7-13840
Brake Actuator Valve	7005	7-13850
Brake Accumulator Valve	7007	7-12530
Parking Brake	7008	7-12540
NOTE: For parking brake and brake pedal adjustments, see Section 9001.		
Hydraulics	Tab 8	
Section Index - Hydraulics		7-13860
Removal and Installation of Hydraulic Components	8001	7-13880
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-13890
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-13901
Loader Control Valve	8005	7-13910
Cylinders	8006	7-13920
Remote Control Valves	8010	7-12640
Combination Valve	8011	7-12650
Accumulator for Ride Control	8013	7-13471

921C Loader Service Manual 7-13502

Table of Contents

Description	Section No.	Form No.
Solenoid Valve and Accumulator Valve for Ride Control	8014	7-13480
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		7-13930
Pedals and Levers	9001	7-13941
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	7-14150
Air Conditioner System Service	9003	7-14160
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	7-14170
Air Conditioning Compressor and Clutch For Systems with HFC-134a Refrigerant	9005	7-14180
Loader	9006	7-13950
ROPS Cab and ROPS Canopy	9007	7-13960
Cab Glass Installation	9010	7-14290
Hydraulic Schematic Foldout and Electrical Schematic Foldout	In Rear Pocket	7-13970

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications.....	1001
Fluids and Lubricants	1002
Loctite Product Chart	

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 Sherman Avenue
Hamilton, ON L8N 4C4 CANADA

Bur 7-13510

© 1999 Case Corporation
Printed in U.S.A.
April, 1999

Thanks for your reading.

Please click [here](#) to download complete manual instantly.

And can also choose other manuals.

Feel free ---> write to me with any questions.

Our service email:

manuals007@hotmail.com