

# CX180 Crawler Excavators

## Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-27690GB
General specifications and special torque setting.....	1002	7-27714GB
<b>2 ENGINE</b>		
Removal and installation of the engine .....	2000	7-28220GB
Radiator and oil-cooler .....	2001	7-28040GB
Engine specifications .....	*	
Disassembly and assembly of the engine.....	*	
<b>3 FUEL SYSTEM</b>		
Fuel tank .....	3001	7-27970GB
Fuel engine system.....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical system, electrical and electronic troubleshooting .....	4001	7-27723GB
Inspection and maintenance of batteries and connecting a booster battery ....	4002	7-27921GB
Main and engine electronic control boxes.....	4003	7-27932GB
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	7-27750GB
Rollers .....	5003	7-27771GB
Sprocket.....	5004	7-27781GB
Idler wheel and tension shock absorber .....	5005	7-27802GB
<b>6 DRIVE TRAIN</b>		
Drive motor and final drive transmission removal and installation .....	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly .....	6002	7-28090GB
Swing reduction gear, removal and installation.....	6003	7-29900GB
Swing reduction gear, disassembly and assembly .....	6004	7-28370GB
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components .....	8000	7-27952GB
Specifications, troubleshooting, checks and hydraulic pressure settings .....	8001	7-27703GB
Hydraulic reservoir removal and installation .....	8002	7-27990GB
Main and pilot pumps, removal and installation .....	8003	7-27871GB
Main hydraulic control valve, removal and installation .....	8004	7-27880GB
Attachment cylinders, removal and installation .....	8005	7-27791GB
Hydraulic swivel, removal and installation .....	8006	7-27811GB
Pilot blocs, removal and installation .....	8007	7-28130GB
Swing motor, removal and installation .....	8008	7-29890GB
Main hydraulic pump, disassembly and assembly .....	8010	9-35490FR
Main hydraulic control valve, disassembly and assembly.....	8011	7-28200FR
Attachment cylinders, disassembly and assembly.....	8012	7-27901GB
Hand control levers, disassembly and assembly .....	8013	7-28110GB
Foot control levers, disassembly and assembly .....	8014	7-28300FR
Six-solenoid valves, disassembly and assembly .....	8015	7-27911GB
Caution valve, disassembly and assembly .....	8016	7-27942GB
Safety vave .....	8017	7-29631GB
Hydraulic swivel, disassembly and assembly .....	8018	7-28080GB
Swing motor, disassembly and assembly .....	8019	7-28010GB
Hydraulic functions.....	8020	7-28481GB

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>9 UPPERSTRUCTURE</b>		
Upperstructure, turntable and counterweight.....	9002	7-27982GB
Boom, dipper and bucket .....	9003	7-27962GB
Seat and seat belt.....	9004	7-28120GB
Cab and cab equipment.....	9005	7-28022GB
Air conditioning troubleshooting.....	9006	
Air conditioning unit disassembly and assembly.....	9007	
Air conditioning servicing .....	9008	
Air conditioning components.....	9009	
Large format electrical schematics .....	Pocket	9-88430
Large format hydraulic schematics .....	Pocket	9-88380

\* Consult the Engine Service Manual

Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

# Section

# 1001


## SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

GENERAL INFORMATION ..... 3

SAFETY ..... 4

STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS..... 6



**WARNING :** *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

## GENERAL INFORMATION

### Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

### Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

### Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. DO NOT DRY BEARINGS WITH COMPRESSED AIR.

### Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

### Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

### Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

### Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

### Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

### Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

## SAFETY



*This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.*

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier



**WARNING:** *Read the operator's manual to familiarize yourself with the correct control functions.*



**WARNING:** *Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.*



**WARNING:** *This is a one man machine, no riders allowed.*



**WARNING:** *Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.*

*It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer.*



**WARNING:** *If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.*



**WARNING:** *When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.*



**WARNING:** *When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.*



**WARNING:** *When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.*



**WARNING:** Use insulated gloves or mittens when working with hot parts.



**WARNING:** Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.



**WARNING:** Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. DO NOT use your hand to check for leaks, use a piece of cardboard or wood.



**WARNING:** When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.



**WARNING:** When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).



**WARNING:** Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands.



**WARNING:** When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times.



**WARNING:** Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual.



**WARNING:** Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area.




**WARNING:** When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured.

## STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS

### Tightening of cap screws, nuts

Tighten alternately so that tightening torque can be applied evenly. The numbers in the figure below indicate the order of tightening.

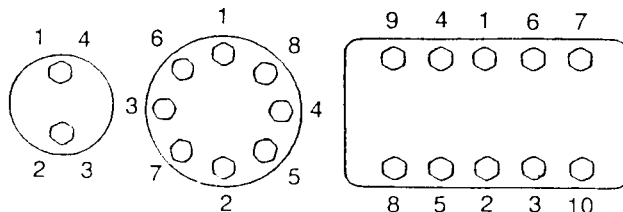

JS00481A

Cap screws which have had Loctite used (white residue remains after removal) should be cleaned with light oil or suitable cleaning solvent and dried. Apply 2-3 drops of Loctite to the thread portion of the cap screw and then tighten.



## Torque table

Tighten cap screws and nuts according to the table below if there are no other special instructions.

Cap Screw Name Size (Size)			M6	M8	M10	M12	M14	M16	M18	M20
Cap Screw	Spanner	[mm]	10	13	17	19	22	24	27	30
		[in.]	0.39	0.51	0.67	0.75	0.87	0.95	1.06	1.18
	Tightening torque	[Nm]	6.9	15.7	32.3	58.8	98.0	137.2	196.0	274.0
		[lb-ft]	5.1	11.6	23.9	43.4	72.3	101.2	144.6	202.4
Socket Head Cap Screw	Spanner	[mm]	5	6	8	10	12	14	14	17
		[in.]	0.20	0.24	0.32	0.39	0.47	0.55	0.55	0.67
	Tightening torque	[Nm]	8.8	21.6	42.1	78.4	117.6	176.4	245.0	343.0
		[lb-ft]	6.5	15.9	31.1	57.8	86.8	130.1	180.8	253.1



# **Section**

# **1002**

**1002**

## **GENERAL SPECIFICATIONS AND SPECIAL TORQUE SETTINGS**

## TABLE OF CONTENTS

TYPE, SERIAL NUMBER AND YEAR OF MANUFACTURE OF THE MACHINE .....	3
Machine.....	3
Engine .....	3
Component serial numbers .....	3
FLUIDS AND LUBRICANTS .....	4
Hydraulic fluid.....	4
Transmission component oil .....	4
Grease .....	4
Engine oil .....	5
Oil viscosity/Oil range.....	5
Fuel .....	6
Anti-freeze/Anti-corrosion.....	6
Environment .....	6
Components made from plastic or resin .....	6
SPECIFICATIONS.....	7
Engine .....	7
Capacities .....	7
Electrical system .....	7
Hydraulic system .....	8
Cylinder .....	8
Control valve .....	9
Swing .....	9
Travel .....	9
Undercarriage .....	9
Attachment.....	10
Weight of components .....	10
DIMENSIONS AND LIMIT OF WEAR AND TEAR OF THE TRACKS SET .....	11
Toothed wheel.....	11
Idler wheel.....	12
Upper roller .....	13
Lower roller .....	14
Track .....	15
DIMENSIONS AND LIMIT OF WEAR AND TEAR OF THE MOBILE JOINTS OF THE ATTACHMENT.....	16
1. Boom foot/Undercarriage .....	16
2. Boom cylinder foot/Undercarriage.....	17
3. Boom cylinder head/Boom .....	17
4. Dipper cylinder foot/Boom .....	18
5. Boom/Dipper .....	18
6. Dipper cylinder head/Dipper.....	18
7. Bucket cylinder foot/Dipper .....	19
8. Connecting rod/Dipper .....	19
9. Compensator/Bucket.....	19
10. Connecting rod/Compensator/Bucket cylinder head.....	20
11. Dipper/Bucket.....	20
SPECIAL TORQUE SETTINGS .....	21
MACHINE OVERALL DIMENSIONS CX130 CX160.....	24
MACHINE OVERALL DIMENSIONS CX180.....	25



**WARNING:** This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.

Thanks for your reading.

Please click [here](#) to download complete manual instantly.

And can also choose other manuals.

Feel free ---> write to me with any questions.

Our service email:

[manuals007@hotmail.com](mailto:manuals007@hotmail.com)