

CROWN

ESi/ETi

ESi/ETi 4000 Series MAINTENANCE MANUAL



Order Number: 812606-006
Revision: C • Printed in Germany

This master manual is subject to continual updates.
It is intended solely for companies authorized by Crown.
The transfer of the content or copies thereof to third parties is prohibited.

Crown Gabelstapler GmbH & Co. KG
– European Headquarters –
Philipp-Hauck-Str. 12
85622 Feldkirchen
Germany

Phone +49 (0)89 93 00 2 – 0
Fax +49 (0)89 93 00 2 – 312

www.crown.com



TABLE OF CONTENTS

Notes:

TABLE OF CONTENTS

INTRODUCTION	1
Important Information	3
Service personnel qualification	3
Ordering spare parts	3
Ordering documentation	3
Manual structure	3
Conventions	3
Text mark-ups in the manual	3
Brief description of equipment	3
Truck Data Number	5
SAFETY	7
Safety Notices	9
Basic Safety Notices	10
Organisational measures	10
Truck modifications and additions	10
Personal safety equipment	10
Protecting the hazardous area	10
Hazards from stored energy	10
Maintenance work	11
Restoring the truck to service after maintenance work	11
Cleaning work	11
Handling batteries	11
Warning and instruction decals on the truck	11
Lifting gear and slings	11
Environmental protection	12
Safety Mechanisms and Protective Guards	13
Truck safety mechanisms	13
Truck protective guards	13
INSPECTION AND LUBRICATION	15
Cleaning the Truck and Components	17
Effects of incorrect cleaning	17
Electrical components	17
Roller and slide bearings	17
Corrosion-protected surfaces	17
Environmental protection	17
Cleaning the entire truck	17
Cleaning removed components	18
Transport and Storage	19
Lifting the Truck	19
Securing the Truck for Transport on a Truck Bed	20
Towing the truck	21
Jacking up the truck	21
Placing the Truck in Storage	22
Taking the truck out of service	22
Testing trucks in storage	22
Restoring the Truck to Service	23
Lubricants and Consumables	24
Cold store truck requirements	24

Abbreviations used in the table	24
Planned Maintenance	27
Maintenance schedule	27
Annual inspection in accordance with FEM 4.004	27
Terms and abbreviations used	27
Maintenance Schedule	28
Electrical system	28
Electrical system	30
Lifting Mechanism	32
Drive system, steering and wheels	34
Safety mechanisms	36
Replacing the Caster Wheel Assembly	37
Removing the caster wheel assembly	37
Installing the caster wheel assembly	37
Requirements	37
Adjusting the caster wheel	38
Requirements	38
Adjusting the caster wheel	38
Repairing the Caster Wheel Assembly	39
Standard Torque Values	42
Metric screws and nuts without flange	42
Metric hex. bolts and nuts with flange (Unbrako® type)	42
COMPONENTRY	43
Main Components	45
Motor compartment	46
HYDRAULIC SYSTEM	47
Hydraulic Oil	49
Checking the hydraulic oil level	49
Adding hydraulic oil	49
Requirements	49
Replacing the Hydraulic Oil	50
Replacing the Hydraulic Filter	51
Bleeding the Hydraulic System	53
Replacing the Relief Valve RV1	54
Testing the relief valve	54
Flushing the Hydraulic System	55
Requirements	55
Drift Test	56
Drift test preparation	56
Outrigger lift drift test	56
Fork lift drift test	56
Hydraulic System Troubleshooting	57
DRIVE UNIT	59
Components	61
Trucks with mechanical steering	61
Trucks with electric steering	61
Replacing the drive wheel	62
Drive wheel disassembly	62
Drive wheel assembly	62
Changing the gear oil	63

Drive Gear Disassembly / Installation	64
Drive gear unit removal	64
Drive gear unit assembly	65
ELECTRICAL SYSTEM	67
Input Signals	69
Initial truck status	69
SAS and BRS	69
Operating mode definition	69
Pedestrian mode	69
Comfort mode	69
Rider mode	69
Quick Exit	69
Conventions	69
Brief description of equipment	69
Input Signals	71
Access 2	71
Access 3	71
Access 5	72
Access 8.1	73
Platform and Side Restraint Logic	75
Brief description of equipment	75
Folding platform	75
Side restraint and platform setting definition	75
Accessing the Service Levels	76
Software Versions	77
Menu Structure (without Quick Pick® Remote Lift Technology)	78
Operator Menu	79
Service menu	81
Access 3 - Analyzer Outputs	82
Calibration	83
Access 2 - Analyzer Outputs	84
Access 5 - Analyzer Outputs	87
Features - F1 to F3	88
Features - F4	89
Features - F5 to F12	90
Features - F13 and F18	91
Features - Administering F7 User Codes	92
Hour - H1 to H5	93
Events - E1 to E3	94
Performance P1	95
Performance P2	96
Performance P3	97
Performance P4 to P16	98
Utilities - U1	99
Test Outputs - A4	100
Menu Structure for Quick Pick® Remote Lift Technology Option	101
Quick Pick® Remote Lift Technology - operator menu	102
Quick Pick® Remote Lift Technology- Analyzer menu A1.8 Status	104
Quick Pick® Remote Lift Technology- Access 8.2 Inputs	105
Quick Pick® Remote Lift Technology- Features menu F24 Remote System	106
Quick Pick® Remote Lift Technology- Hours menu H8 Access 8.2	107
Quick Pick® Remote Lift Technology- Performance menu P23	108
Quick Pick® Remote Lift Technology- Utilities menu U1.8 Access 8.2	109

Software Parameter Settings ESi 4040-MW /-EW	111
Brief description of equipment	111
Markings	111
Software Parameter Settings ETi 4040-MF / -EF	113
Brief description of equipment	113
Operation Modes	113
Calibration	117
Selecting the CALIBRATION Menu	117
Electric steering calibration	117
Calibrating proportional lifting and lowering	119
Event codes	120
Malfunctions with event code display	120
Locating malfunctions	120
Event code groups	120
Event Code - Group 100 (ESi/ETi -M -E)	121
Event Code 100	121
Event codes 126 and 127	123
Event Code 144	124
Event Code 191	125
Event Code - Group 200 (ESi/ETi -M -E)	126
Event Code 202	126
Event Code 203	128
Event Code 204	128
Event Code 205	130
Event code 208	131
Event code 228	132
Event code 229	133
Event code 230	134
Event code 231	135
Event codes 232 and 233	137
Event code 234	137
Event code 235	138
Event code 236	139
Event code 239	140
Event Code - Group 300 (ESi/ETi -M -E)	142
Event code 300	142
Event code 301	143
Event code 302	143
Event code 303	144
Event Code 304	144
Event code 305	146
Event code 306	147
Event code 307	147
Event code 308	148
Event code 309	149
Event code 310	149
Event code 314	150
Event code 315	151
Event code 316	152
Event code 317	153
Event code 320	154
Event Code 321	155
Event code 322	156
Event code 326	156

Event code 328	157
Event code 329	157
Event code 333	158
Event code 334	158
Event code 335	159
Event code 337	160
Event code 338	161
Event Code 340	163
Event code 341	163
Event code 342	164
Event code 343	165
Event code 348	166
Event code 351	167
Event code 352	167
Event code 353	168
Event code 354	169
Event code 355	169
Event code 356	170
Event code 357	171
Event code 358	171
Event code 359	172
Event code 361	173
Event code 362	174
Event Code 364	175
Event code 365	176
Event code 368	177
Event Code - Group 500 (ESi/ETi -E)	178
Event Code 500	178
Event Code 501	179
Event codes 502, 503, 504, 505	179
Event Code 506	179
Event code 508	180
Event code 509	180
Event code 510	181
Event code 511	184
Event code 512	184
Event code 513	184
Event code 514	185
Event code 515	186
Event code 516	186
Event Code 517	187
Event code 518	189
Event code 519	190
Event codes 520, 521	191
Event code 522	191
Event code 523	192
Event code 524	193
Event code 525	194
Event code 526	195
Event codes 527, 528	196
Event code 529	197
Event code 530	198
Event code 531	199
Event code 532	200

Event code 535	202
Event code 536	202
Event code 537	203
Event code 538	204
Event code 539	205
Event code 540	206
Event code 541	207
Event codes 542, 543	208
Event code 544	209
Event code 545	210
Event code 547	210
Event Code - Groups 800 and 900 (ESi/ETi -E)	211
Event code 800	211
Event code 801	211
Event code 802	212
Event code 803	212
Event code 804	213
Event codes 900 to 904	213
Event code 905	214
Events Displayed as Text	215
Platform Error	215
Stopped	217
Traction control module hot	218
Traction motor hot	219
Release control handle	220
Travel switch applied too soon	221
Pedestrian mode only	221
Lower forks	221
Steering controller hot	222
Steer motor hot	224
Pairing Failed. Enter to Retry	226
Release remote brake button	226
Low signal strength	227
Control Module PMT Test	228
General	228
Required tools	228
PMT Test	228
Testing Access 2	228
Testing Access 3	229
Testing Access 5	230
Servicing and Replacing the Control Modules	231
Discharging the capacitors	231
Servicing the control modules	231
Replacing control modules	231
Removing the control module	231
Assembling the control module	232
Set the parameters after replacing a control module	232
Modifications	233
Converting the truck from Enter key to key switch power-up function	233
Mechanical conversion	233
Changing the software	233
Converting the truck from key switch to Enter key power-up function	234
Mechanical conversion	234
Changing the software	234

Battery Information	235
Charging the battery	235
Replacing the battery	235
Adjusting the BLS sensor	236
Fitting the battery connector in the truck	237
Setting the Load Profile for the Battery Discharge Indicator (BDI)	239
Load profile and discharge curve	239
Assigning a load profile	239
Checking and Adjusting the BDI Setting	241
Requirements	241
Checking the BDI Setting	241
Adjusting the BDI setting	242
General DC Motor Maintenance Instructions	243
Brushes	243
Motor	243
Rotor	243
Traction motor (M1)	244
Traction motor disassembly	244
Traction motor assembly	245
Repairing the Traction Motor	246
Preparation	246
Rotor and bearing disassembly	246
Rotor and bearing assembly	246
Final tasks	246
Pump Motor (M2)	247
Brushes	247
Rotor	247
Replacing the Steer Motor (M3)	248
Special tools required	249
Steer motor disassembly	249
Steer motor assembly	249
Repairing Contactors	250
Wear test	250
Check the contacts	250
Checking the coils	250
Checking the springs	250
ELECTRICAL COMPONENTS	251
ESi 4000 -M Components	253
ESi 4000 -E Components	254
ESi 4000 connectors and switches	255
ESi 4000 connectors and other components	256
ETi 4000 -M components	258
ETi 4000 -E components	259
ETi 4000 -E components	260
ETi 4000 connectors and switches	261
ETi -M connectors under the top panel	262
ETi -E connectors under the top panel	262
Other connectors	263
Quick Pick® Remote lift technology	266
BRAKE SYSTEM	269
Components and Operation	271

Service brake	271
Parking brake	271
Servicing the Parking Brake	272
Measuring the air gap	272
Troubleshooting	272
Replacing the Parking Brake	273
Parking brake disassembly	273
Parking brake assembly	273
Testing the Braking Distance	275
Requirements	275
Performing the test	275
Braking distance tables	275
Max. braking distance for all ESi 4000 or ETi 4000 models in pedestrian mode	275
Maximum braking distances ETi 4000-MF or -EF in rider mode	275
STEERING	277
Repairing the Tiller Handle	279
Replacing the tiller handle shells	280
Shell removal	280
Shell assembly	281
Replacing the switch unit	281
Switch unit removal	282
Switch unit assembly	282
Replacing the "rabbit/turtle" toggle module	282
Toggle module removal	282
Toggle module assembly	282
Replacing the tiller handle PC boards	283
Hydraulic PC board removal	283
Hydraulic PC board assembly	283
Main PC board removal	283
Main PC board assembly	283
Replacing the traction potentiometer	283
Traction potentiometer removal	284
Traction potentiometer assembly	285
Replacing the brake switch (BRS)	285
Remove the brake switch (BRS)	285
BRS switch assembly	286
Replacing the grips and horn switch	286
Repairing Tiller Handle Return Springs	287
Removing the covers	287
Return spring pre-tension adjustment	287
Replacing the return springs	288
Return spring removal	288
Return spring assembly	288
Repairing the Mechanical Steering	289
Repairing the steering transmission	289
Setting straight-ahead travel	289
LIFTING MECHANISM	291
Checking the Assembled Mast	293
Checking the Fork Height	294
Fork Carriage Assembly and Removal	295
Removing the fork carriage with the TF and TT masts	295

Assembly	295
Removing the fork carriage with a TL mast	295
Assembly	295
Adjusting the Fork Carriage Clearance	296
Replacing the Fork Carriage Rollers and Adjusting the Slack	297
Repairing the Mast	298
TL Mast	298
TF mast	298
TT mast	298
Mast disassembly	299
Mast assembly	300
Final tasks	300
Replacing the Mast Rollers and Adjusting the Slack	301
Lowering Plumb Test and Adjusting the Mast Tilt	304
Requirements	304
Preparing the lowering plumb test	304
Lowering plumb test	304
Adjusting the Mast Tilt	305
Adjusting the Outrigger Lift Heights	306
Adjusting the outrigger height with the outriggers lowered	306
Adjusting the outrigger lift height with the outriggers lowered	307
Repairing Lift Chains and Chain Tensioners	310
Adapting the service intervals to the application conditions	310
Periodic replacement of the chain tensioners and lift chains	310
Servicing lift chains	311
Service work	311
Checking the service hours for the lift chains and anchor bolts	311
Cleaning lift chains	311
Lubricating and preserving lift chains	312
Checking the Lift Chains for Wear and Damage	313
Checking the lift chain elongation	313
Tools required	313
Test preparation	313
Checking the lift chain elongation with the wear gauge	314
Checking the lift chain elongation with the steel ruler	315
Checking the chain for other damage	316
Forks	319
General	319
Fork inspection	319
Checking forks for cracks	319
Replacing the Mast Guard	320
Preparation	320
Removing the mast guard	320
Installing the mast guard	320
CYLINDERS	321
Repair Tools	323
Small hook	323
Extractor	323
Producing extractors	323
Groove aligning arbor for small rod seals	323
Assembly devices for large rod seals	324
Protective mechanisms	324
Rod Seal Removal and Assembly	325

Removing a large rod seal	325
Removing a small rod seal	325
Inserting a large rod seal	325
Fitting a small rod seal	326
Rod seal assembly, sealing lip first	326
Lift Cylinder Removal and Assembly	327
Removing the lift cylinder (TL mast)	327
Lift cylinder (TL mast) assembly	328
Lift cylinder (TF mast) removal	330
Lift cylinder (TF/TT mast) removal	330
Lift cylinder (TF mast) assembly	330
Free lift cylinder removal and assembly	332
Free Lift Cylinder Removal (Method 1)	333
Free Lift Cylinder Assembly (Method 2)	334
Free Lift Cylinder Removal (Method 2)	335
Free Lift Cylinder Assembly (Method 2)	335
Outrigger Lift Cylinder Assembly and Removal	337
Outrigger lift cylinder removal	337
Outrigger lift cylinder assembly	338
Repairing the Lift Cylinders on the TL and TT Masts	339
Repairing the Lift Cylinder for the TF Mast	341
Repairing the left lift cylinder	341
Repairing the right lift cylinder	343
Repairing the free lift cylinder for the 1.2 and 1.4 ESi/ETi - TF	345
Repairing the free lift cylinder for the 1.6 ESi/ETi - TF or TT	347
Repairing the Outrigger Lift Cylinders	349
PLATFORM	351
Adjusting the Folding Platform Switch	353
Pre-tensioning the spring assembly	353
Checking and adjusting switch PLS1 for rider mode	353
Adjusting switch PLS2 for pedestrian mode	354
Replacing the Folding Platform Springs	355
Spring removal	355
Spring assembly	355
SCHEMATIC DIAGRAMS	357
Wire Colour Code	359
General Contact Symbol Abbreviations	360
Electrical wiring diagrams	362
ESi 4040 -M, Standard Equipment	365
ESi 4040 -M with options	366
ESi 4040 -E, standard equipment	367
ESi 4040 -E with options	368
ETi 4040 -M, standard equipment	369
ETi 4040 -M with options	370
ETi 4040 -E, standard equipment	371
ETi 4040 -E with options	372
ESi/ETi -M CAN-Bus Connections	373
ESi/ETi -E CAN-Bus Connections	374
ESi 4000 -M Main Wire Harness	375
ETi 4000 -M main wire harness	376

ESi 4000 with electric steering and standard equipment	377
ETi 4000 -E main wire harness	378
InfoLink® wire harness	379
InfoLink® ICM wire harness	380
Wire Harnesses for Options	381
Control handle wire harness	381
Travel alarm wire harness	381
LMS wire harness	381
Strobe wire harness	381
Power supply wire harness	382
Keypad wire harness	382
 HYDRAULIC SCHEMATIC	 383
Hydraulic Symbols	385
ESi/ETi with TF Mast	389
ESi/ETi with TL Mast	390
ESi/ETi with TT Mast	391

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com