



# WP3015/3020 MODELS MAINTENANCE MANUAL



Order Number: 812601-006  
Revision: A • Printed in Germany

This master manual is subject to continual updates.  
It is intended solely for companies authorized by Crown.  
The transfer of the content or copies thereof to third parties is prohibited.

**Crown Gabelstapler GmbH & Co. KG**  
**– European Headquarters –**  
Moosacher Str. 52  
80809 Munich  
Germany

Phone +49 (0)89 93 00 2 – 0  
Fax +49 (0)89 93 00 2 – 133



***TABLE OF CONTENTS***

---

**Notes:**

## TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	<b>1</b>
<b>Important Information</b> .....	<b>3</b>
Service personnel qualification .....	3
Ordering spare parts .....	3
Ordering documentation .....	3
Manual structure .....	3
Conventions .....	3
Text mark-ups in the manual .....	3
<b>Truck Data Plate</b> .....	<b>4</b>
<b>Truck Data Number</b> .....	<b>5</b>
<b>SAFETY</b> .....	<b>7</b>
<b>Safety Notices</b> .....	<b>9</b>
<b>Basic Safety Notices</b> .....	<b>10</b>
Organisational measures .....	10
Truck modifications and additions .....	10
Personal safety equipment .....	10
Protecting the hazardous area .....	10
Hazards from stored energy .....	10
Repair work .....	11
Restoring the truck to service after repair work .....	11
Cleaning work .....	11
Handling batteries .....	11
Warning and instruction decals on the truck .....	11
Lifting gear and slings .....	11
Environmental protection .....	12
<b>Control of Hazardous Energy</b> .....	<b>13</b>
Lockout/Tagout .....	13
Battery .....	13
Safety Procedures .....	13
Battery Maintenance .....	13
Battery Charging .....	14
Battery Removal and Installation .....	14
Lockout/Tagout Procedures .....	15
Capacitance .....	15
Release the Park Brake .....	16
Hydraulic .....	17
Lifting and Blocking .....	17
<b>INSPECTION AND LUBRICATION</b> .....	<b>19</b>
<b>Cleaning the Truck and Components</b> .....	<b>21</b>
Effects of incorrect cleaning .....	21
Electrical components .....	21
Roller and slide bearings .....	21
Corrosion-protected surfaces .....	21
Environmental protection .....	21
Cleaning the entire truck .....	21
Cleaning removed components .....	22
Cleaning other mechanical components .....	22
<b>Lubricants, Aerosols &amp; Service Supplies</b> .....	<b>23</b>

<b>Planned Maintenance</b> .....	<b>28</b>
Component Access .....	30
X10® Handle .....	31
Battery Cover .....	31
Knuckle Cover .....	31
Center, Main, and Top Covers .....	31
Lubrication .....	31
<b>Caster</b> .....	<b>46</b>
Caster Adjustment .....	46
<b>Metric Torque Values</b> .....	<b>48</b>
Grade .....	48
<b>SAE Torque Values</b> .....	<b>51</b>
Grade .....	51
<b>COMPONENTRY</b> .....	<b>53</b>
<b>Componentry</b> .....	<b>55</b>
Introduction .....	55
<b>Audible Indicators</b> .....	<b>56</b>
ALM .....	56
HN .....	56
<b>Battery</b> .....	<b>57</b>
BATT .....	57
<b>Brakes</b> .....	<b>58</b>
BRK .....	58
<b>Contactors</b> .....	<b>60</b>
L .....	60
P .....	60
<b>Control Modules</b> .....	<b>62</b>
ACCESS 3 .....	62
ACCESS 8 .....	62
INFOLINK .....	62
InfoLink Module (Optional) .....	62
<b>Cylinders</b> .....	<b>63</b>
Lift Cylinders .....	63
<b>Encoders</b> .....	<b>64</b>
ECR .....	64
<b>Fuses</b> .....	<b>65</b>
FU1 .....	65
FU2 .....	65
FU3 .....	65
FU4 .....	65
<b>Miscellaneous</b> .....	<b>67</b>
AC Inlet (Optional) .....	67
Battery Charger (Optional) .....	67
Hydraulic Printed Circuit Board .....	67
Primary Printed Circuit Board .....	67
R/T Printed Circuit Board .....	67
TT .....	67
<b>Motors</b> .....	<b>69</b>
M1 .....	69
M2 .....	69
<b>Potentiometers</b> .....	<b>70</b>
POT .....	70
Pumps .....	70

<b>Sensors</b> .....	<b>72</b>
TS .....	72
<b>Solenoids</b> .....	<b>73</b>
CV .....	73
RV .....	73
SV .....	73
<b>Switches</b> .....	<b>75</b>
BRS .....	75
DTS .....	75
FS .....	75
HNS1 and HNS2 .....	75
HSS .....	77
KYS .....	77
LMS .....	77
LOS .....	77
ORS .....	79
RAS .....	79
RS .....	79
SAS .....	79
<b>HYDRAULIC SYSTEM</b> .....	<b>81</b>
<b>Hydraulic Schematic Symbols</b> .....	<b>83</b>
<b>Hydraulic System</b> .....	<b>87</b>
Circuit Operation .....	87
Lift .....	87
Lower .....	88
Reservoir .....	89
Oil Change .....	89
Hydraulic Plumbing and Fittings .....	89
Freezer Condition Lubrication .....	90
Bleed the Hydraulic System .....	90
Drift Test .....	90
<b>Lift Pump</b> .....	<b>91</b>
Lift Pump Removal .....	91
Filters .....	92
Pressure Filter .....	92
Suction and Return Filters .....	92
Lift Pump Inspection .....	92
Lift Pump Replacement .....	92
After Lift Pump Replacement .....	93
<b>DRIVE UNIT</b> .....	<b>95</b>
<b>Drive Unit</b> .....	<b>97</b>
Drive Unit Inspection .....	97
Drive Unit Lubrication .....	98
Drive Tire Replacement .....	99
Drive Tire Removal .....	99
Drive Tire Installation .....	100
Drive Unit Removal .....	100
Disassemble the Drive Unit .....	102
Assemble the Drive Unit .....	104

---

<b>ELECTRICAL SYSTEM</b> .....	<b>107</b>
<b>Electrical System</b> .....	<b>109</b>
Wiring Color Codes & Schematic Symbols .....	109
Wiring Color Codes .....	109
Power Cables .....	110
Switches .....	110
<b>Menus</b> .....	<b>117</b>
Curtis Handset .....	117
Handset Operation .....	117
Main Menu .....	119
Program Menu .....	119
Monitor Menu .....	119
Faults Menu .....	119
Functions Menu .....	119
Controller Information Menu .....	119
Programmer Setup Menu .....	119
Menu Key .....	119
Menu Layout .....	119
Program Menu .....	138
Monitor Menu .....	139
Faults Menu .....	141
Functions Menu .....	141
Controller Information Menu .....	141
Programmer Setup Menu .....	142
<b>Contactor</b> .....	<b>143</b>
Inspection .....	143
Contacts .....	143
Coil .....	143
Component Replacement .....	144
Contact Replacement .....	144
Coil Replacement .....	144
<b>X10® Handle (ACCESS 8)</b> .....	<b>145</b>
X10 Handle Component Removal and Installation .....	145
Lower and Upper Shell Removal and Installation .....	146
Switch Cap Removal and Installation .....	149
HSS Removal and Installation .....	150
Hydraulic Printed Circuit Board Removal and Installation .....	150
Primary Printed Circuit Board Removal and Installation .....	150
POT, FS, and RS Removal and Installation .....	151
SAS Removal and Installation .....	152
HNS1 and HNS2 Removal and Installation .....	153
Hand Grip Removal and Installation .....	153
<b>Battery Information</b> .....	<b>154</b>
Charging the battery .....	154
Replacing the battery .....	154
<b>On Board Battery Charger</b> .....	<b>155</b>
To set the battery type at the On Board Battery Charger .....	155
<b>Battery Pack Removal and Installation</b> .....	<b>156</b>
<b>Battery Load Test</b> .....	<b>159</b>
<b>Display Gauge</b> .....	<b>160</b>
Operator Indicators .....	160
Display Messages .....	161
Troubleshooting .....	161
<b>Hydraulic Pump Motor (M2)</b> .....	<b>162</b>

---



Brush Replacement .....	162
<b>Event Code Introduction .....</b>	<b>164</b>
Troubleshooting Steps .....	164
Malfunctions .....	164
No Event Code .....	164
Component Locations .....	164
Power Cable Connections .....	164
<b>Event Codes .....</b>	<b>165</b>
Static Return to Off (SRO) Messages .....	165
<b>Event Code 300 Series .....</b>	<b>166</b>
Event Code 312 .....	166
Event Code 313 .....	166
Event Code 314 .....	166
Event Code 315 .....	167
Event Code 316 .....	167
Event Code 317 .....	167
Event Code 318 .....	167
Event Code 322 .....	168
Event Code 323 .....	168
Event Code 324 .....	168
Event Code 325 .....	169
Event Code 327 .....	169
Event Code 328 .....	169
Event Code 329 .....	170
Event Code 331 .....	170
Event Code 332 .....	171
Event Code 333 .....	171
Event Code 335 .....	172
Event Code 336 .....	172
Event Code 337 .....	173
Event Code 338 .....	173
Event Code 339 .....	174
Event Code 351 .....	174
Event Code 361 .....	175
Event Code 362 .....	175
Event Code 363 .....	176
Event Code 368 .....	176
Event Code 369 .....	176
Event Code 371 .....	177
Event Code 372 .....	177
Event Code 373 .....	177
Event Code 389 .....	178
Event Code 391 .....	178
Event Code 392 .....	178
Event Code 853 .....	178
Event Code 854 .....	179
Event Code 855 .....	179
Event Code 856 .....	179
Event Code 857 .....	181
Event Code 858 .....	182
<b>No Event Code .....</b>	<b>183</b>
 <b>BRAKE SYSTEM .....</b>	 <b>185</b>
Description of the Brake System .....	187

---

The Function of the service brake .....	187
The Function of the parking brake .....	187
Description of the Brake, Override, and Travel Zones .....	187
Tiller is in position 1 .....	187
Tiller in position 2 .....	187
Tiller in position 3 .....	187
Tiller in position 4 .....	187
<b>To Adjust the Stopping Distance of the Service Break .....</b>	<b>188</b>
<b>To adjust the Air Gap of the Parking Brake .....</b>	<b>189</b>
<b>To Release the Parking Brake manually .....</b>	<b>190</b>
<b>Parking Brake Maintenance .....</b>	<b>191</b>
Parking Brake Removal .....	191
Parking Brake Disassembly .....	191
pParking Brake Assembly .....	191
<b>Parking Brake, Possible Troubles .....</b>	<b>193</b>
<b>STEERING .....</b>	<b>195</b>
<b>Repairing Control Handle Return Springs .....</b>	<b>197</b>
Panel removal .....	197
Return spring pre-tension adjustment .....	197
Replacing the return springs .....	198
Return spring removal .....	198
Return spring assembly .....	198
Roller Bearings .....	199
Roller Bearings Disassembly .....	199
Roller Bearings Assembly .....	200
<b>LIFTING MECHANISM .....</b>	<b>201</b>
<b>Lift Linkage .....</b>	<b>203</b>
Tension Bar Removal .....	203
Tension Bar Replacement .....	205
Tension Bar Installation .....	205
Fork Height Adjustment .....	205
<b>CYLINDERS .....</b>	<b>207</b>
<b>Lift Cylinders .....</b>	<b>209</b>
Lift Cylinder Operation .....	209
Lift Cylinder Removal .....	209
Lift Cylinder Disassembly .....	210
Seals .....	210
Seal Removal .....	210
Lift Cylinder Inspection .....	211
Seal Installation .....	211
Lift Cylinder Assembly .....	212
<b>MISCELLANEOUS .....</b>	<b>213</b>
<b>Glossary .....</b>	<b>215</b>
<b>SCHEMATIC DIAGRAMS .....</b>	<b>217</b>
<b>Introduction to Diagram Use .....</b>	<b>219</b>
Electrical Diagram .....	219
Pictorials .....	219

---

---

<b>Index</b> .....	<b>220</b>
<b>Electrical Schematic - Standard</b> .....	<b>221</b>
<b>Electrical Schematic with Options</b> .....	<b>222</b>
<b>Traction/Hydraulic - Standard (ACCESS 3)</b> .....	<b>223</b>
<b>Traction/Hydraulic with Options (ACCESS 3)</b> .....	<b>224</b>
<b>X10® Handle (ACCESS 8)</b> .....	<b>225</b>
<b>Power Cables</b> .....	<b>226</b>
<b>Wire Harnesses</b> .....	<b>227</b>
<b>HYDRAULIC SCHEMATIC</b> .....	<b>229</b>
Hydraulic Schematic .....	231

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**