

Form No.
904059
Replaces
903449

4510

Skid Loader



GEHL[®]

SERVICE PARTS MANUAL

Introduction:

When ordering service parts, specify the correct part number, full description, quantity required, and the unit model and serial numbers. Model and serial numbers for this unit are on a Decal located inside the Right Chassis Riser, between the Lift Arm and Lift Cylinder.

"Right" and "Left" are determined from a position sitting on the Seat and facing forward. From this position, the Propulsion Control T-bar is on the left and the Lift/Tilt Control T-bar is on the right.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

NOTE: *On original Tire replacement, company policy prohibits the sale of replacement tires for all original GEHL machinery. Replacement Wheel Sets are available and tire size information is called-out with the Wheel Sets to facilitate replacement tire selection. ALL REPLACEMENT TIRES MUST BE PURCHASED LOCALLY.*

Grease fittings and common attaching hardware, such as Cotter Pins, Set Screws, Woodruff Keys, Screws, Nuts, etc., are included in the parts lists, indented below the part it is (they are) associated with, but NOT illustrated, except where a particular routing or special fastening arrangement MUST be maintained.

The hardware listed is for mounting information and is NOT included with the replacement part. Refer to the following abbreviations table for fastener descriptions. In the Parts List, if a number precedes the abbreviation, the number represents either quantity required (if other than one per item) or size.

Unless otherwise specified, all Cap Screws or Bolts are Grade 5, cadmium or zinc plated; Hexagon Nuts for Grade 5 Screws or Bolts are Grade B; Hexagon Nuts for other Screws or Bolts are Grade A.

The following abbreviations are used in this Manual:

ALT	- Alternator
AMP	- Ampere
AR	- As Required
ASS'Y	- Assembly
ASM'D	- Assembled
AUX	- Auxiliary
CS	- Cap Screw (Hexagon Head)
CYL	- Cylinder
DEG	- Degree

DIA.	- Diameter
ENG	- Engine
FRT	- Front
FT-LB	- Foot-pounds (torque)
GR	- Grade
HD	- Hard or Heavy Duty
HEX	- Hexagon shaped
HHS DT	- Hex Head Self-drilling Thread screw
HYD	- Hydraulic
ID	- Inside Diameter
IGN	- Ignition
IN-LB	- Inch-pounds (torque)
JIC	- Joint Industry Conference (Stds)
JN	- Jam Nut
L or LW	- Lock (Washer)
LN	- Lock Nut (Hexagon)
LT (L.H.)	- Left (Hand)
MM or mm	- Millimeter
MTG	- Mounting
N	- Nut (Hexagon)
NF	- See UNF
NILN	- Nylon Insert Lock Nut
Nm	- Neuton meter
NPT	- National Pipe Thread
P	- Plain (Washer)
OD	- Outside Diameter
OPT	- Optional
RT (R.H.)	- Right (Hand)
RHMS	- Round Head Machine Screw
ROPS	- Roll-over Protective Structure
SHCS	- Socket Head Cap Screw
SMV	- Slow-moving Vehicle
SN	- Serial Number or Slotted Nut
SOC	- Socket
SQHSS	- Square Head Set Screw
STD	- Standard
STR	- Straight (thread)
T	- Tooth or Teeth
TFS	- Thread Forming Screw
TCS	- Thread Cutting Screw
THD	- Thread
THMS	- Truss Head Machine Screw
UNF	- Unified National Fine (Thread)
W/	- With

TABLE OF CONTENTS

	Page		Page
Introduction	Inside Front Cover	Columbus Tilt Cylinder	48
Table of Contents	1	Columbus Lift Cylinder	48
Decal Locations	2-5	1000 PSI Relief Valve	49
Chassis, Fuel Tank, Grill & Access Covers	6-7	1200 PSI Relief Valve	49
Axles & Drive Components (After SN3250)	8-9	Columbus Grapple Cylinder	49
Axles & Drive Components (Before SN3251)	10-11	Webster Gear Pump	49
Overhead Guard, Seat & Engine Access Cover (After SN3650)	12-13	Later Style Cessna Gear Pump	50
Overhead Guard, Seat & Engine Access Cover (Before SN3651)	14-15	Early Style Cessna Gear Pump	50
Instrument Panel, Wiring & Battery	16-17	Later Style Solenoid Valve	51
Lift/Tilt T-Bar, Throttle & Linkage	18-19	Early Style Solenoid Valve	51
Propulsion Control T-Bar & Linkage	20-21	Options & Accessories	52-68
Hand Brake & Calipers (After SN3250)	22	Auxiliary Front Hydraulics	52-53
Hand Brake & Calipers (Before SN3251)	23	Work & Warning Light Kits	54-55
Hydraulic System	24-25	Horn Kit	55
Hydrostatics System	26-27	Hydraulic Oil Heater Kit	55
Engine & Related Components (After SN5500)	28-29	Backhoe Adapting Packages	56
Engine & Related Components (Before SN5501)	30-31	Rigid All-Weather Enclosures	57
Air Cleaner, Alternator, Muffler & Radiator (After SN5500)	32-33	Overhead Guard Vinyl All-Weather Enclosure	58
Air Cleaner, Alternator, Muffler & Radiator (Before SN5501)	34-35	Heater Defroster Packages	59
Lift Arms & Hydrolock Mechanism (After SN5300)	36-37	Door Wiper Packages	60
Lift Arms & Hydrolock Mechanism (Before SN5301)	38-39	Drawbar Kit	60
Lift & Tilt Cylinders & Hydraulics	40	Spark Arrestor Muffler Kit	60
Pumps, Motors, Valves & Cylinders	41-51	Sound Deadening Packages	61
Later Style Right Side Drive Pump	41	Back-up Alarm Packages	62
Early Style Right Side Drive Pump	42	Enclosed Alternator Kit	62
Later Style Left Side Drive Pump	43	Amber Warning Beacons	62
Early Style Left Side Drive Pump	44	Pre-Cleaner Kit	64
Main Control Valve	45	Dual Element Air Cleaner Kit	65
Auxiliary Control Valve	46	Pallet Fork	65
Hydrostatic Drive Motor	47	Grapple Fork	66
		Manure Fork	67
		Attachment Hook Kit	67
		Dirt & Rock Teeth Kit	67
		Buckets	68
		Numerical Index	69-76
		Hardware Torque Specifications	Inside Back Cover
		Attaching Hardware Table	Inside Back Cover

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com