

Form No.
908273

7600 and 7800 Skid Steer Loaders



PARTS MANUAL

GEHL

Introduction

For your safety and continued proper operation, use only genuine GEHL® service parts. When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The model and serial number decal for this unit is located on the right rear engine panel. “Right” and “Left” are determined from a position sitting on the seat and facing forward.

GEHL Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

NOTE: *Purchase equivalent, quality tires for your loader. Contact your dealer for replacement tire information.*

NOTE: *Replacement batteries are not provided by the GEHL Company. For battery specifications see the “Electrical - Engine” chapter. ALL REPLACEMENT BATTERIES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover. **If a part requires lubrication or a nonstandard torque value, it will be specified behind the part number description in parenthesis.**

Items shown in the parts list that do not have part numbers are shown for reference purposes only and are NOT available for purchase.

Dimensions are in inches unless otherwise specified.

NOTE: *The following abbreviations and symbols may be used herein:*

A	Ampere
AR	As Required
ASSY	Assembly
CCA	Cold Cranking Amperage
CYL	Cylinder
FRT	Front
FL	Flare
GA	Gauge
HEX	Hexagon
JIC	Joint Industrial Council
kW	Kilowatt
LBS	Pounds
LT	Left
M.	Metric
MM (mm)	Millimeter
NA	Naturally Aspirated
N/A	Not Applicable
NEG	Negative
NILN.	Nylon Insert Lock Nut
NO	Number
NPT	National Pipe Thread
OPER	Operator
PN	Part Number
POS	Positive
PSI	Pounds per Square Inch
QTY	Quantity
REF	Reference
REQ'D.	Required
ROPS	Roll Over Protective Structure
RPM	Revolutions Per Minute
RT	Right
SAE	Society of Automotive Engineers
SN	Serial Number
SQ	Square
ST	Straight
TURBO	Turbocharger
V	Volt

TABLE OF CONTENTS

DESCRIPTION

PAGE

SECTION A: MAIN LOADER COMPONENTS

Mainframe with Grille, Tanks and Covers	1
Controls - Wheel Drives	7
Controls - Lift and Tilt	11
Auxiliary Hydraulic Controls	17
Electrical - Engine	21
Electrical - ROPS.	23
Electrical - Lights.	25
Electrical - Switch	27
Electrical - Controls	29
Engine with Throttle	31
Hydraulics and Hydraglide™ Ride Control	43
Hydrostatics with Drive Motors - Single and Two Speed	57
Liftarm	61
All-Tach™ and Electric Actuation.	63
ROPS	67
Restraint Bar	71
Seat - Standard and Suspension	73
Wheel Drives	77
Barge Special.	79
Decals.	82

SECTION B: HYDRAULIC COMPONENTS

Lift Cylinder	91
Tilt Cylinder	93
Drive Motor and Parking Brake - Single and Two Speed	95
Tandem Pump	99
Load-Sensing Axial Piston Pump.	103
Main Control Valve	105
Self-Leveling Valve.	107
Safety Lock Valves - Lift and Tilt	109
Brake Solenoid Valves - Single and Two Speed	111
Pump Valve - ROPS Lift Assist and Cylinder	113

(Table of Contents continued on next page)

TABLE OF CONTENTS

DESCRIPTION

PAGE

SECTION C: KITS AND ACCESSORIES

Backup Alarm Kit 808413.	117
Engine Block Heater Kit 805855	118
Rear View Mirror Kit 806894.	118
Strobe Light Kit 805803.	119
Cab - Side Window Kit 808403	120
Cab - Front Door Kit 808624	121
Cab - Heater Kit 808626 (<i>see below</i>)	122
Cab - Heater Kit 808626 Service Parts Assemblies	123
Cab - Air Conditioning/Heater Kit 810040 (<i>see both below</i>)	124
Cab - Air Conditioning/Heater Kit 810040 Service Part Assembly 138621.	125
Cab - Air Conditioning/Heater Kit 810040 Service Part Assembly 138617.	126
Impact Resistant Front Door Kit 810088	127
Single Point Lift Kit 810101	128
PreCleaner Kit 810102	129
Other Available Accessories	130

SECTION D: SCHEMATICS

ROPS Electrical Schematic	133
Chassis Electrical Schematic	134
Hydrostatic/Hydraulic Schematics	135
Air Conditioning/Heater Combination Schematic	136

Numerical Index	138
O-Ring Table, Coupling & Adapter Torque Table	147
Torque Specifications Table.	Inside Back Cover

SECTION A: MAIN LOADER COMPONENTS

Mainframe with Grille, Tanks and Covers	1
Controls - Wheel Drives	7
Controls - Lift and Tilt	11
Auxiliary Hydraulic Controls	17
Electrical - Engine	21
Electrical - ROPS.	23
Electrical - Lights.	25
Electrical - Switch	27
Electrical - Controls	29
Engine with Throttle	31
Hydraulics and Hydraglide™ Ride Control	43
Hydrostatics with Drive Motors - Single and Two-Speed	57
Liftarm	61
All-Tach™ and Electric Actuation.	63
ROPS	67
Restraint Bar	71
Seat - Standard and Suspension	73
Wheel Drives	77
Barge Special	79
Decals.	82

Thanks for your reading.

Please click [here](#) to download complete manual instantly.

And can also choose other manuals.

Feel free ---> write to me with any questions.

Our service email:

manuals007@hotmail.com