

Form No.  
908267

Revision D  
09/04

# SL3635 and SL3935 Skid-Steer Loaders



**PARTS MANUAL**

**GEHL**<sup>®</sup>

## Introduction

For your safety and continued proper operation, use only genuine GEHL® service parts. When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The model and serial number decal for this unit is located on the inside right chassis upright. “Right” and “Left” are determined from a position sitting on the seat and facing forward.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

**NOTE:** *Purchase equivalent, quality tires for your loader. Contact your dealer for replacement tire information.*

**NOTE:** *Replacement batteries are not provided by the GEHL Company. For battery specifications see “Engine and Engine Controls” chapter. ALL REPLACEMENT BATTERIES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover. **If a part requires lubrication or a nonstandard torque value, it will be specified behind the part number description in parenthesis.**

Items shown in the parts list that do not have part numbers are shown for reference purposes only and are NOT available for purchase.

**Dimensions are in inches unless otherwise specified.**

**NOTE:** *The following abbreviations and symbols may be used herein:*

|                  |                                     |
|------------------|-------------------------------------|
| A . . . . .      | Ampere                              |
| AR . . . . .     | As Required                         |
| ASSY . . . . .   | Assembly                            |
| AUX . . . . .    | Auxiliary                           |
| CCA . . . . .    | Cold Cranking Amperage              |
| CYL. . . . .     | Cylinder                            |
| FL. . . . .      | Flare                               |
| FOPS . . . . .   | Falling Object Protective Structure |
| GA . . . . .     | Gauge                               |
| HEX . . . . .    | Hexagon                             |
| HF. . . . .      | High Flow                           |
| HYD . . . . .    | Hydraulic                           |
| JIC . . . . .    | Joint Industrial Council            |
| kW . . . . .     | Kilowatt                            |
| LBS . . . . .    | Pounds                              |
| M . . . . .      | Meter                               |
| MM (mm). . . . . | Millimeter                          |
| NA . . . . .     | Naturally Aspirated                 |
| N/A . . . . .    | Not Applicable                      |
| NEG . . . . .    | Negative                            |
| N•m . . . . .    | Newton meter                        |
| NO . . . . .     | Number                              |
| NPT. . . . .     | National Pipe Thread                |
| PN. . . . .      | Part Number                         |
| POS . . . . .    | Positive                            |
| PSI . . . . .    | Pounds per Square Inch              |
| QTY . . . . .    | Quantity                            |
| REF . . . . .    | Reference                           |
| REQ'D. . . . .   | Required                            |
| ROPS . . . . .   | Roll Over Protective Structure      |
| RPM . . . . .    | Revolutions Per Minute              |
| SAE . . . . .    | Society of Automotive Engineers     |
| SN. . . . .      | Serial Number                       |
| SQ. . . . .      | Square                              |
| ST. . . . .      | Straight                            |
| TURBO. . . . .   | Turbocharger                        |
| V . . . . .      | Volt                                |

# TABLE OF CONTENTS

| DESCRIPTION | PAGE |
|-------------|------|
|-------------|------|

## SECTION A: MAIN LOADER COMPONENTS

|   |    |
|---|----|
| Mainframe . . . . .                                 | 1  |
| Wheel Drives . . . . .                              | 3  |
| Engine and Engine Controls . . . . .                | 5  |
| Fuel System . . . . .                               | 9  |
| Air Cleaner and Muffler . . . . .                   | 11 |
| Cooler Water System . . . . .                       | 13 |
| Hydrostatic Mount and Linkage . . . . .             | 15 |
| Hydrostatic Plumbing . . . . .                      | 17 |
| Charge, Cooler and Return Filter Plumbing . . . . . | 19 |
| Auxiliary Circuit Plumbing . . . . .                | 21 |
| Tilt Circuit Plumbing . . . . .                     | 23 |
| Lift Circuit Plumbing . . . . .                     | 25 |
| Self-Level Valve Plumbing . . . . .                 | 27 |
| Foot Pedal Control and Cabin Panel . . . . .        | 29 |
| Steering Controls . . . . .                         | 35 |
| Lift Arm . . . . .                                  | 45 |
| All-Tach™ Attachment System . . . . .               | 47 |
| ROPS/FOPS . . . . .                                 | 49 |
| Seat, Restraint Bar and Sound Suppression . . . . . | 51 |
| Rear Door and Engine Cover . . . . .                | 53 |
| Electrical - Engine . . . . .                       | 57 |
| Electrical - Instrument Panel . . . . .             | 59 |
| Electrical - Tail Lights . . . . .                  | 61 |
| Decals . . . . .                                    | 64 |

## SECTION B: HYDRAULIC COMPONENTS

|   |    |
|---|----|
| Lift Cylinder . . . . .                   | 73 |
| Tilt Cylinder . . . . .                   | 75 |
| Drive Motor and Parking Brake . . . . .   | 77 |
| Tandem Pump . . . . .                     | 79 |
| Gear Pump . . . . .                       | 83 |
| Main Control Valve . . . . .              | 85 |
| Self-Leveling Valve . . . . .             | 87 |
| Solenoid Valves - Lift and Tilt . . . . . | 89 |
| Brake Solenoid Valve . . . . .            | 91 |

## SECTION C: ENGINE SERVICE PARTS (3TNE88 ONLY)

|   |     |
|---|-----|
| Cylinder Block . . . . .                | 95  |
| Gear Housing . . . . .                  | 97  |
| Flywheel Housing and Oil Sump . . . . . | 99  |
| Cylinder Head and Valve Cover . . . . . | 101 |

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION C: ENGINE SERVICE PARTS (3TNE88 ONLY)

|                                     |     |
|-------------------------------------|-----|
| Camshaft and Driving Gear . . . . . | 103 |
| Crankshaft and Piston . . . . .     | 105 |
| Intake Manifold . . . . .           | 107 |
| Exhaust Manifold . . . . .          | 109 |
| Lubrication Oil System . . . . .    | 111 |
| Cooling Water System. . . . .       | 113 |
| Fuel Injection Pump . . . . .       | 115 |
| Governor. . . . .                   | 119 |
| Fuel Injection Valve. . . . .       | 123 |
| Fuel Line. . . . .                  | 125 |
| Starter Motor. . . . .              | 127 |
| Alternator . . . . .                | 129 |
| Gasket Set . . . . .                | 131 |

### SECTION D: KITS AND TIRES

|   |     |
|---|-----|
| Cab - Door with Wiper & Washer Kit 808265 . . . . .     | 135 |
| Cab - Impact Resistant Door Kit 808382 . . . . .        | 136 |
| Horn Kit 808274. . . . .                                | 137 |
| Four Point Lifting Kit 808273 . . . . .                 | 138 |
| Mirror, Rear View Kit 808269 . . . . .                  | 139 |
| Electrical Disconnect Switch Kit 808240 . . . . .       | 139 |
| Pre-Cleaner Kit 808277 . . . . .                        | 140 |
| Engine Block Heater Kit 808396 . . . . .                | 140 |
| Backup Alarm Kit 808264. . . . .                        | 141 |
| Cab - Sliding Side Windows Kit 808266 . . . . .         | 142 |
| Strobe Light Kit 808279. . . . .                        | 142 |
| Cab - Heater/Defroster Kit 808267 . . . . .             | 143 |
| Interior Dome Light Kit 808271. . . . .                 | 144 |
| Battery Disconnect Switch 808240 . . . . .              | 144 |
| Self-Leveling Valve Kit 808263. . . . .                 | 145 |
| Cab - Door Interlock Kit 830600 . . . . .               | 146 |
| Coolant Temperature Gauge Kit 810212 . . . . .          | 146 |
| Tires . . . . .   | 147 |
| Numerical Index . . . . .                               | 148 |
| O-Ring Table, Coupling & Adapter Torque Table . . . . . | 155 |

### SECTION E: SCHEMATICS

|  |                   |
|--|-------------------|
| Hydrostatic/Hydraulic Schematics . . . . .                             | 157               |
| Electrical Schematic. . . . .  | 158               |
| Engine Harness Schematic*. . . . .                                     | 162               |
| *MODEL 3635: SN 00001175 AND LATER. MODEL 3935: SN 00001337 AND LATER. |                   |
| Torque Specifications Table. . . . .                                   | Inside Back Cover |

## SECTION A: MAIN LOADER COMPONENTS

|   |    |
|---|----|
| Mainframe . . . . .                                   | 1  |
| Wheel Drives . . . . .                                | 3  |
| Engine and Engine Controls . . . . .                  | 5  |
| Fuel System . . . . .                                 | 9  |
| Air Cleaner and Muffler . . . . .                     | 11 |
| Cooler Water System. . . . .                          | 13 |
| Hydrostatic Mount and Linkage . . . . .               | 15 |
| Hydrostatic Plumbing . . . . .                        | 17 |
| Charge, Cooler and Return Filter Plumbing . . . . .   | 19 |
| Auxiliary Circuit Plumbing . . . . .                  | 21 |
| Tilt Circuit Plumbing. . . . .                        | 23 |
| Lift Circuit Plumbing. . . . .                        | 25 |
| Self-Level Valve Plumbing. . . . .                    | 27 |
| Foot Pedal Control and Cabin Panel . . . . .          | 29 |
| Steering Controls - T-Bar and Hand and Foot . . . . . | 35 |
| Lift Arm . . . . .                                    | 45 |
| All-Tach™ Attachment System . . . . .                 | 47 |
| ROPS/FOPS . . . . .                                   | 49 |
| Seat, Restraint Bar and Sound Suppression . . . . .   | 51 |
| Rear Door and Engine Cover. . . . .                   | 53 |
| Electrical - Engine . . . . .                         | 57 |
| Electrical - Instrument Panel . . . . .               | 59 |
| Electrical - Tail Lights . . . . .                    | 61 |
| Decals. . . . .                                       | 64 |

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**