

# SL7810E

# GEHL®

Form No.  
917222

# SL7810E (EU)

Revision D  
09/09

## Skid-Steer Loaders



# PARTS MANUAL

## Introduction

For your safety and continued proper operation, use only genuine GEHL service parts. When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The model and serial number decal for this unit is located behind the left lift cylinder. “Right” and “left” are determined from a position sitting on the seat and facing forward.

GEHL Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

**NOTE:** *Purchase equivalent-quality tires for your loader. Contact your dealer for replacement tire information.*

**NOTE:** *Replacement batteries are not provided by the GEHL Company. For battery specifications see “Electrical - Chassis” chapter. ALL REPLACEMENT BATTERIES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover. **If a part requires lubrication or a nonstandard torque value, it will be specified behind the part number description in parenthesis.**

Items shown in the parts list that do not have part numbers are shown for reference purposes only and are NOT available for purchase.

**Dimensions are in inches unless otherwise specified.**

**NOTE:** *The following abbreviations and symbols may be used herein:*

A . . . . .	Ampere
AR . . . . .	As Required
ASSY . . . . .	Assembly
AUX . . . . .	Auxiliary
CCA . . . . .	Cold Cranking Amperage
CYL . . . . .	Cylinder
DJS . . . . .	Dual Joystick
FOPS . . . . .	Falling Object Protective Structure
FRT . . . . .	Front
FL . . . . .	Flare
GA . . . . .	Gauge
HEX . . . . .	Hexagon
HF . . . . .	High Flow
HYD . . . . .	Hydraulics
JIC . . . . .	Joint Industrial Council
JS . . . . .	Joystick
kW . . . . .	Kilowatt
LBS . . . . .	Pounds
LT . . . . .	Left
M (m) . . . . .	Meter
MM (mm) . . . . .	Millimeter
NA . . . . .	Naturally Aspirated
N/A . . . . .	Not Applicable
NEG . . . . .	Negative
NILN . . . . .	Nylon Insert Lock Nut
NO . . . . .	Number
N•m . . . . .	Newton Meter
NPT . . . . .	National Pipe Thread
OPER . . . . .	Operator
PN . . . . .	Part Number
POS . . . . .	Positive
PSI . . . . .	Pounds per Square Inch
QTY . . . . .	Quantity
REF . . . . .	Reference
REQ'D . . . . .	Required
ROPS . . . . .	Roll Over Protective Structure
RPM . . . . .	Revolutions Per Minute
RT . . . . .	Right
SAE . . . . .	Society of Automotive Engineers
SN . . . . .	Serial Number
SQ . . . . .	Square
ST . . . . .	Straight
TURBO . . . . .	Turbocharged
V . . . . .	Volt

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION A: MAIN LOADER COMPONENTS

Chassis and Control Covers . . . . .	1
Wheel Drives . . . . .	13
Engine . . . . .	15
Air Cleaner and Exhaust . . . . .	17
Radiator and Cooler . . . . .	19
Hydrostatic System and Drive Motors . . . . .	21
Hydraulics - Chassis . . . . .	29
Hydraulics - Lift Arm . . . . .	39
Hydraulics - Auxiliary . . . . .	41
Controls - Auxiliary Hydraulics . . . . .	47
Controls - Lift and Tilt . . . . .	51
Controls - Wheel Drives . . . . .	61
Controls - Engine . . . . .	69
Lift Arm . . . . .	81
All-Tach™ and Power-A-Tach™ Attachment Bracket . . . . .	83
ROPS and Interior . . . . .	87
Seat and Seat Belts . . . . .	91
Restraint Bar . . . . .	97
Electrical - Chassis . . . . .	99
Electrical - ROPS . . . . .	103
Electrical - Lights . . . . .	107
Electrical - Controls . . . . .	109
Ignition Switch . . . . .	111
Sound Suppression (EU Models) . . . . .	113
Tires . . . . .	115
Decals . . . . .	118

### SECTION B: HYDRAULIC COMPONENTS

Drive Motor and Parking Brake - Single and Two Speed . . . . .	129
Tandem Pump . . . . .	133
Load-Sensing Axial Piston Pump . . . . .	143
Self-Level Valve . . . . .	145
Solenoid Valves - Lift and Tilt . . . . .	147
Solenoid Valve - Brake . . . . .	149
ROPS Lift-Assist Pump Valve . . . . .	151
Lift Cylinder . . . . .	153
Tilt Cylinder . . . . .	155
Main Control Valve . . . . .	157
Manifold - Hydraglide™ Ride Control . . . . .	161

*(continued on next page)*

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION C: KITS, ACCESSORIES AND FILTERS

Filter Chart, Analysis Kits and Other Available Accessories . . . . .	164
Backup Alarm Kit 810387. . . . .	165
Strobe Light Kit 805803. . . . .	166
Rear View Mirror Kit 806894. . . . .	166
Cab - Side Window Kit 808403 . . . . .	167
Cab - Front Door Kit 808624 . . . . .	168
Impact Resistant Door Kit 810088 . . . . .	169
Single Point Lift Kit 810101 . . . . .	170
Pre-Cleaner Kit 810863 . . . . .	171
Electric ROPS/FOPS Lift Kit 810448. . . . .	171
Power-A-Tach™ Kit 810443 . . . . .	172
810588 Backup Alarm Kit (Joystick Controls) . . . . .	173
Seat Belt Kit 810424 (2" Belt) / 810425 (3" Belt) . . . . .	173
Shoulder Belt System Kit 810426 (2" Belt) / 810427 (3" Belt). . . . .	174
Seat Kits - Standard Seat Kit 810423 / Suspension Seat Kit 810422 . . . . .	174
Cab Heater Kit 810856 . . . . .	175
Cab - Heater Kit Service Parts Assemblies . . . . .	176
HVAC Kit 810854. . . . .	177
Cab - Heater Kit Service Parts Assemblies . . . . .	178, 179
Engine Block Heater Kit 810857 . . . . .	179
Radio AM-FM-WB Kit 810897. . . . .	180
Cab Sealing Kit 193443 . . . . .	181
Pre-Cleaner Kit 811394 . . . . .	182
Deluxe Cab Filter Kit 810952 . . . . .	182
811226 14-Pin Electrical Auxiliary Connector Kit . . . . .	183
Available Accessories . . . . .	184

### SECTION D: SCHEMATICS

Hydrostatic/Hydraulic Schematic . . . . .	201
Hydrostatic/Hydraulic Schematic - Joystick Controls . . . . .	202
HVAC Schematic - 810854 Kit . . . . .	203
Heater Schematic - 810856 Kit . . . . .	204
Electrical Auxiliary Schematic - 14-Pin Connector. . . . .	205
ROPS/FOPS Electrical Schematic. . . . .	206
Chassis Electrical Schematic . . . . .	207

Numerical Index . . . . .	186
O-Ring Table, Coupling & Adapter Torque Table . . . . .	199
Torque Specifications Table. . . . .	Inside Back Cover

## SECTION A: MAIN LOADER COMPONENTS

Chassis and Control Covers . . . . .	1
Wheel Drives . . . . .	13
Engine . . . . .	15
Air Cleaner and Exhaust . . . . .	17
Radiator and Cooler . . . . .	19
Hydrostatic System and Drive Motors . . . . .	21
Hydraulics - Chassis. . . . .	29
Hydraulics - Lift Arm . . . . .	39
Hydraulics - Auxiliary. . . . .	41
Controls - Auxiliary Hydraulics. . . . .	47
Controls - Lift and Tilt . . . . .	51
Controls - Wheel Drives. . . . .	61
Controls - Engine . . . . .	69
Lift Arm . . . . .	81
All-Tach™ and Power-A-Tach™ Attachment Bracket. . . . .	83
ROPS and Interior. . . . .	87
Seat and Seat Belts . . . . .	91
Restraint Bar. . . . .	97
Electrical - Chassis . . . . .	99
Electrical - ROPS . . . . .	103
Electrical - Lights . . . . .	107
Electrical - Controls . . . . .	109
Ignition Switch. . . . .	111
Sound Suppression (EU Models) . . . . .	113
Tires . . . . .	115
Decals . . . . .	118

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**