



# service parts manual

FORM NO. 045407



## 115 MX

"Mix-All" Feedmaker  
With Attachments

# GEHL COMPANY

WEST BEND, WISCONSIN 53095 U.S.A.

# 115MX - INTRODUCTION

## Mr. Dealer:

Give complete information when ordering service parts. Always give complete part number and also complete part description. The model number and serial number should always be given. Numbers for the Mixer are stamped on a plate located where the Drawbar Hitch joins the Frame. Hammer Mill numbers are located on the Left Frame Sheet. Hay Feeder numbers are located on the Roller Cover and Swinging Auger Feeder numbers are located on the right side of the Pivot Frame.

"Right" and "Left" are determined from a position standing at the rear of the Mixer and looking toward the drawbar hitch. The Mill Feeder is on the Right side and the Mixer Unloading Conveyor on the Left side.

**NOTE:** You will find common hardware such as nuts, bolts, etc. listed but not illustrated in parts lists in this manual. Hardware listed with the particular parts is for mounting purposes and is not included when the part is ordered for replacement.

Gehl Company reserves the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes on any unit previously delivered.

## TABLE OF CONTENTS

	Page		Page
Introduction . . . . .	2	Parts Illustration and List (Continued)	
Parts Illustration and List		Mill Conveyor and Drive . . . . .	18-19
Transmission . . . . .	3	Feeder Trough . . . . .	20-21
Mixer Frame . . . . .	4-5	Feeder Drive . . . . .	22-24
Mixer Tank and Hopper . . . . .	6-7-8	Hopper . . . . .	25
Mixer Drive . . . . .	9	Hay Feeder . . . . .	26-27
Mill Drive . . . . .	10-11	Hay Feeder Drive . . . . .	28-29
Unloading Conveyor . . . . .	12	Universal Drives . . . . .	30-31
Conveyor Drive . . . . .	13-15	Accessories . . . . .	32-33
Mill Frame . . . . .	16	Molasses Pump . . . . .	34
Mill Cylinder . . . . .	17	Numerical Index . . . . .	35-38





NUMBER 121  
DATE Nov. 14, 1969  
MACHINE 115MX  
MANUAL NO. 045407

# service parts bulletin

**SUBJECT:** "Write-In" Corrections for 115MX Service Parts Manual  
"Paste-In" Corrections for 115MX Service Parts Manual

REVISION	PAGE	REF. NO.	PART NO.	PART NAME	NO. REQ.
Change	5	9	042130	To Read <u>042103</u>	
Change	9	11	042908	Mixer Driven Sprocket (32T) (Used <u>after</u> Serial No. 4750)	1
Change	9	12	042136	To Read <u>043136</u>	
Change	13			Item 52 Ball Bearing to <u>56</u> (Two Places) Item 53 Bearing Collar to <u>57</u> (Two Places)	
Change	17	10	042237	To Read <u>042327</u>	
Change	21	30	042904	To Read <u>042094</u>	
Paste-In	19			<u>Moisten Back of paste-in sheet and apply over top of parts list on page 19.</u>	

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**