


120 MX

"Mix-All" Mixer

Form No.
901533
Replaces
901089

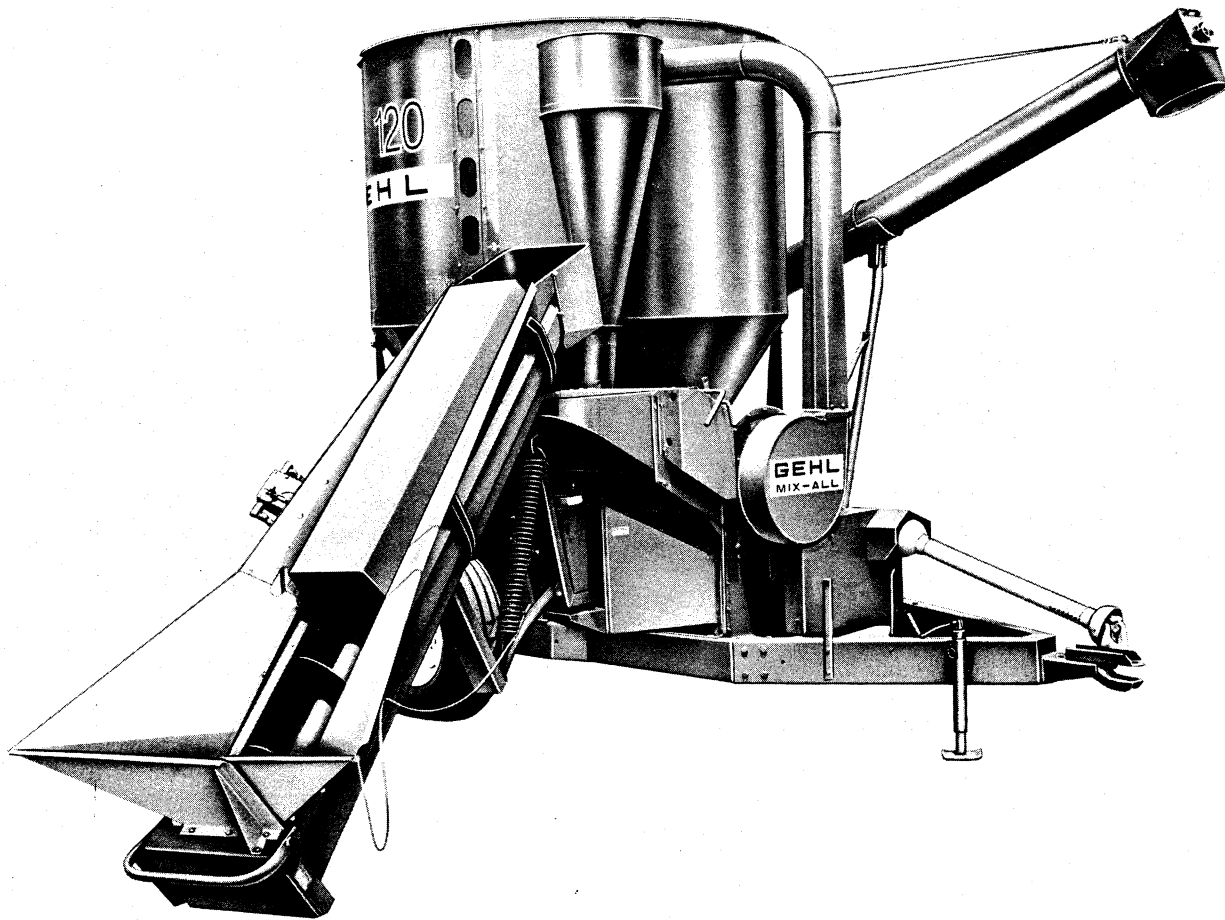

Service Parts Manual

Y

Z

A

B

C

D

E

F

G

H

I

Mr. Dealer:

Give complete information when ordering service parts. Always give complete part numbers and also complete part description. The model number and serial number should always be given. Numbers for the Mixer are stamped on a plate located on the Rear Frame Member below the Concentrate Hopper. Hammer Mill numbers are located on the Left Frame Sheet. Hay Feeder numbers are located on the Roller Cover and Swinging Auger Feeder numbers are located on the right side of the Pivot Frame.

“Right” and “Left” are determined from a position standing at the rear of the Mixer and looking toward the Drawbar Hitch. The Mill Feeder is on the “right” side and the Mixer Unloading Conveyor on the “left” side.

NOTE: You will find common hardware such as nuts, bolts, etc. listed but not illustrated in parts lists in this manual. Hardware listed with the particular part is for mounting purposes and is not included when the part is ordered for replacement.

Gehl Company reserves the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes on any unit previously delivered.

Table of Contents

| | Page |
|--|-------|
| Introduction | 2 |
| Decal Locations | 3-4 |
| Transmission | 5 |
| Frame | 6-7 |
| Tank and Hopper | 8-10 |
| Mixer Drive | 10 |
| Power Take-Off Drive | 11-13 |
| Unloading Conveyor | 14-15 |
| Conveyor Drive | 16-18 |
| Mill Cylinder | 19 |
| Mill Frame and Blower | 20-21 |
| 120SAF Feeder Trough | 22-23 |
| 120SAF Feeder Drive | 24-26 |
| 150HF Hay Feeder | 27-29 |
| 150HF Hay Feeder Drive | 30-31 |
| 150PBF Feeder Head (Used after Serial No. 1410) | 32-34 |
| 150PBF Feeder Head (Used before Serial No. 1411) | 35-38 |
| 150PBF Feed Conveyor | 39-41 |
| Accessories | 42-43 |
| 150PBF Hydraulic Feeder Head | 44-46 |
| 150PBF Hydraulic Feed Conveyor | 48-49 |
| Hydraulic Unloading Conveyor | 50-51 |
| Hydraulic Conveyor Drive | 52-53 |
| 120SAF Hydraulic Feeder Trough | 54-55 |
| 120SAF Hydraulic Feeder Drive | 56-57 |
| 150HF Hydraulic Hay Feeder | 58-59 |
| Hydraulic System | 60-61 |
| Folding Conveyor | 62-63 |
| Hopper | 64 |
| Winch | 65 |
| Selector Valve | 65 |
| 120MX/120SAF Hydraulic Motor | 66 |
| 120SAF/150HF Flow Control Valve | 66 |
| 150HF Hydraulic Motor | 67 |
| Selector Valve | 67 |
| 120MX Hydraulic Motor | 68 |
| 150HF Hydraulic Motor | 68 |
| Universal Drives | 69-70 |
| Hitch Jack | 71 |
| Numerical Index | 72-78 |

Parts lists in this manual contain various abbreviations. Below is an explanation of these abbreviations.

| | |
|------------------------|----------------------------------|
| HN - Hexagon Nut | ILW - Internal Tooth Lock Washer |
| HJN - Hexagon Jam Nut | ELW - External Tooth Lock Washer |
| HLN - Hexagon Lock Nut | |
| SN - Slotted Nut | L.H. - Left-Hand Thread |
| CN - Castellated Nut | NF - National Fine Thread |
| WN - Wing Nut | S-L - Self-Locking |
| | DPT - Double Pitch Tooth |
| PW - Plain Washer | |
| LW - Lock Washer | |


DECAL LOCATIONS

Decal locations are shown to assist in application of new decals in the event of damage to the decal or refinishing of the machine. Check below for their locations.

Surfaces must be free from dirt, dust, grease and other foreign material before applying decals. To apply decals, remove the smaller portion of the decal backing paper and apply this part of the exposed adhesive backing to the clean surface in respective position. Peel other portion of the backing paper off slowly and apply decal.

The Decal Set Number for 120MX is 600158. The set includes the following Decals:

| | | | | | | | |
|----|---|--------|-----------------------------------|----|---|--------|--|
| 1 | - | 047974 | Fast, Slow | 16 | - | 053369 | Gehl (5 x 46) - (Two Places) |
| 2 | - | 041070 | High, Low | 17 | - | 053354 | Be Careful - (Two Places) |
| 3 | - | 053370 | Direction Arrow | 18 | - | 042614 | Do Not Operate Below Horizontal - Raise Flap |
| 4 | - | 053456 | Gehl Mix-All | 19 | - | 053359 | Grease Arrow |
| 5 | - | 053351 | Universal Drive Instructions | 20 | - | 053366 | Do Not Remove |
| 6 | - | 042298 | Lubricate Every 5 Hours | 21 | - | 041066 | 6, 7, 8, 9, 10 - (Two Places) |
| 7 | - | 050263 | Shear Bolts | 21 | - | 041067 | 1, 2, 3, 4, 5 - (Two Places) |
| 8 | - | 053374 | Be Careful and Chain Instructions | 22 | - | 041073 | Weights and Measurements (without Electronic Scale) |
| 9 | - | 049062 | Gehl - 21" | 23 | - | 053514 | Caution |
| 10 | - | 041069 | Important | 24 | - | 053513 | Remove Before Operating |
| 11 | - | 041065 | Important - Keep Belts Tight | 25 | - | 052134 | Instructions |
| 12 | - | 053461 | Clutch Pin Instructions | 26 | - | 053890 | Caution |
| 13 | - | 049262 | Adjust Chain | 27 | - | 052162 | High - Neutral - Low |
| 14 | - | 049453 | 120 (Two Places) | | | | |
| 15 | - | 050202 | Caution | | | | |

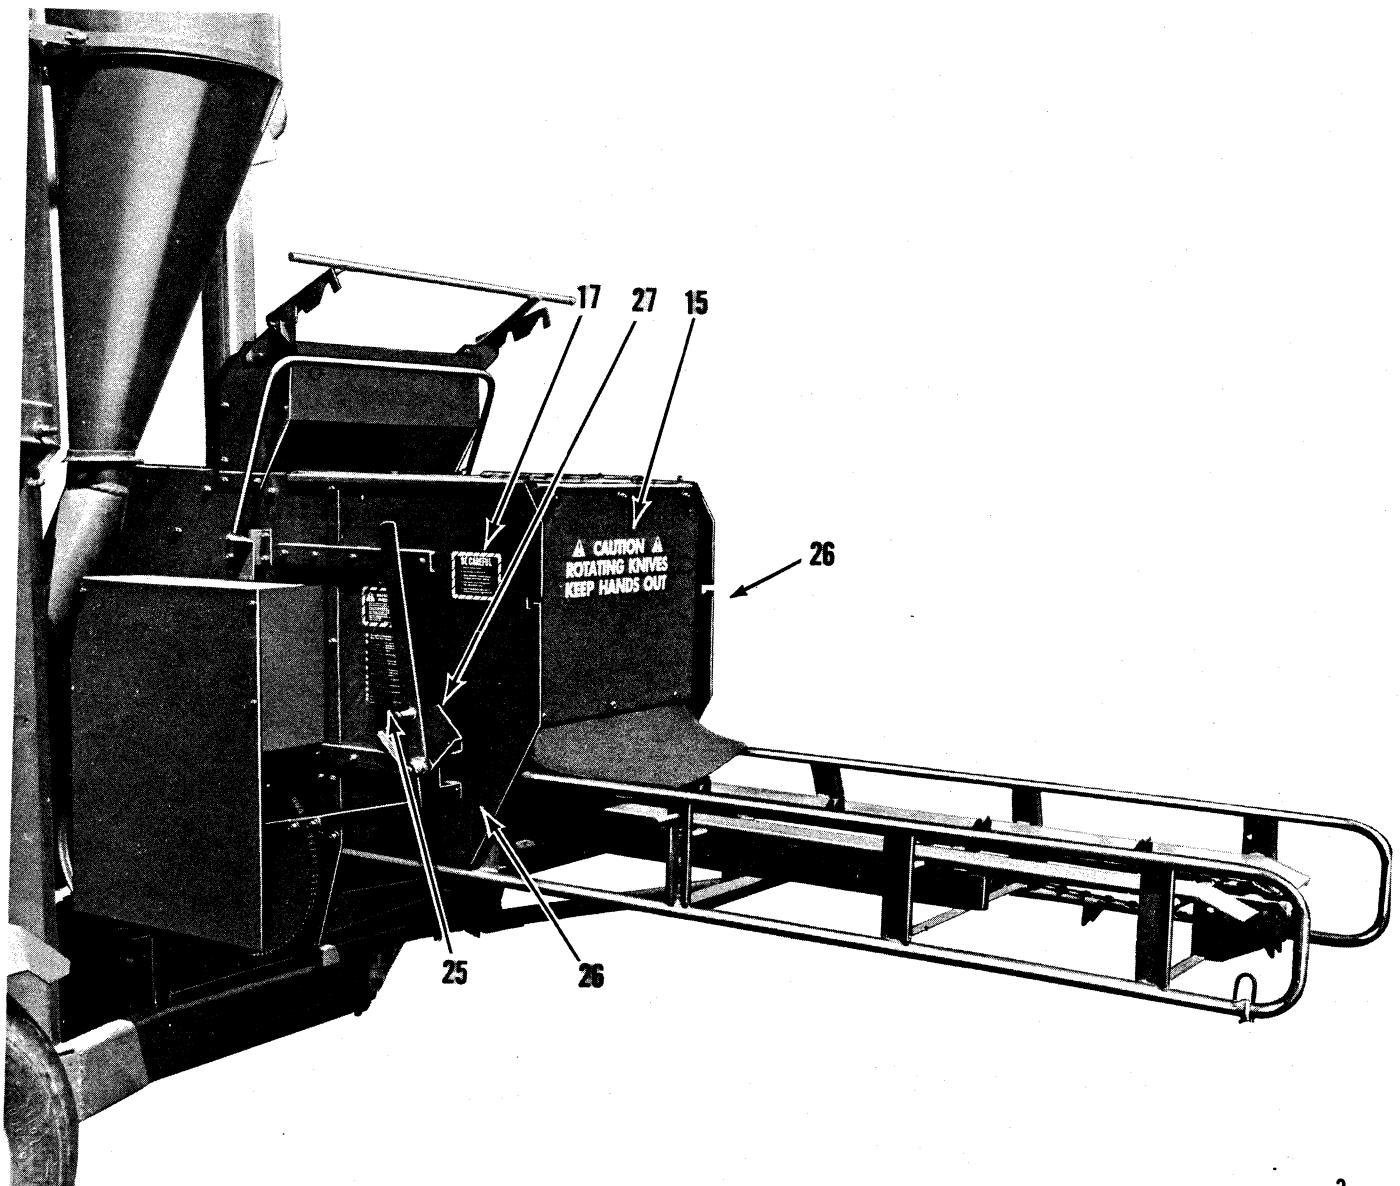

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com